




INSTRUCTION MANUAL

CAT-BACK SPLIT EXHAUST SYSTEM

DODGE RAM 2500/3500 TRUCK 5.7L HEMI 2/4WD 4DR
QUADCAB, SHORT & LONG BED

PART # 6502

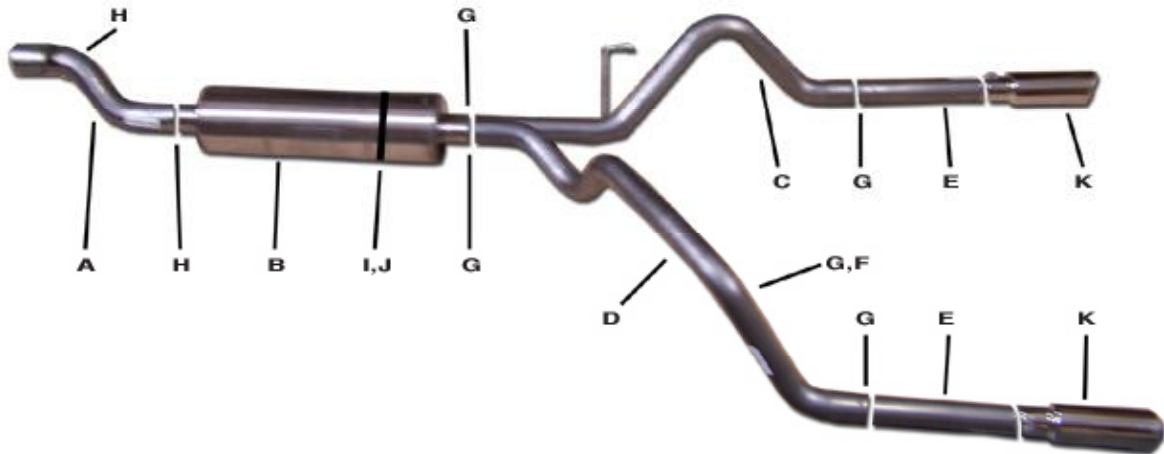

ITEM	PART #	QTY.	DESCRIPTION
A	700474	1	3"X23" HEADPIPE WITH EXTENSION
B	789800	1	SUPERFLOW MUFFLER
C	700407	1	2-1/2" PASSENGER SIDE OVERAXLE PIPE
D	700408-1	1	2-1/2" DRIVERSIDE OVERAXLE PIPE
E	700346	2	2-1/2" EXIT PIPE
F	08269	1	10" HANGER
F	BO-101	1	BOLT KIT FOR 10" HANGER
G	5757	5	2-1/2" CLAMP
H	OHD300	2	3" CLAMP
I	4188	1	BAND CLAMP
J	BO-1015	1	BAND CLAMP BOLT KIT
K	500374	2	3.5" STAINLESS TIPS
L	ZIP	2	ZIP TIES

SPARE TIRE MUST BE REMOVED IF EQUIPPED WITH 20" SPARE OR LARGER!

EXHAUST INSTALLATION #6502

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE ALL THE PROPER SAFETY PRECAUTIONS. USE JACK STANDS WHEN UNDER TRUCK, SET PARKING BRAKE, BLOCK TIRES AND USE SAFETY GLASSES AND GLOVES. **DO NOT WORK WITH HOT PIPES!**


SUGGESTED TOOLS:

9/16, 1/2, 15MM Wrench and Socket, Jack Stand, Hacksaw, WD-40


TO REMOVE STOCK EXHAUST UNCLAMP THE STOCK EXHAUST JUST IN FRONT OF THE MUFFLER.



YOU MAY NEED TO HEAT IT UP FOR EASIER REMOVAL. LEAVE ALL RUBBER GROMMETS IN PLACE. USE WD-40 FOR REMOVAL OF HANGERS.

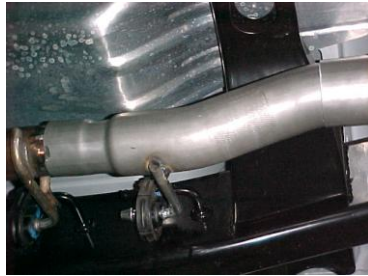

INSTALL HEADPIPE #A, YOU WILL NEED TO LINE UP THE TWO NOTCHES. INSERT WELDED HANGER INTO RUBBER GROMMET. USE CLAMP #A TO SECURE HEADPIPE TO THE STOCK PIPE. DO NOT TIGHTEN.

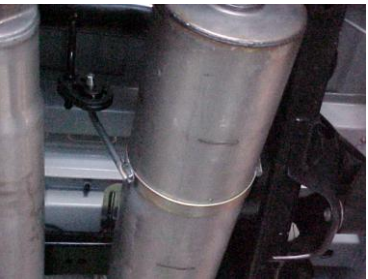

INSTALL MUFFLER #B ONTO HEADPIPE 1-1/2" TO 2". USE CLAMP #H TO SECURE THE MUFFLER TO THE HEADPIPE. INSERT WELED HANGER INTO RUBBER GROMMET. DO NOT TIGHTEN. SLIDE BAND CLAMP #I ONTO THE MUFFLER AND INSERT THE WELDED HANGER INTO THE RUBBER GROMMET. ATTACH WITH BOLT KIT # J.




INSTALL PASSENGER SIDE TAILPIPE #C INTO MUFFLER 1-1/2" TO 2". USE CLAMP #G TO SECURE TAILPIPE TO MUFFLER. INSERT WELDED HANGER INTO RUBBER GROMMET. DO NOT TIGHTEN.



MEASURE 19 1/2" FROM THE REAR OF THE FRAME AND USE THIS HOLE AND BOLT ON HANGER #F. USE THE 1ST. HOLE FROM THE TOP. IT WILL BOLT ON THE INSIDE OF THE FRAME.



INSTALL DRIVER SIDE TAILPIPE #D INTO MUFFLER 1-1/2" TO 2" AND USE CLAMP #G TO SECURE THE MUFFLER. DO NOT TIGHTEN. USE CLAMP #F TO HOLD PIPE UP TO THE HANGER #G DO NOT TIGHTEN.

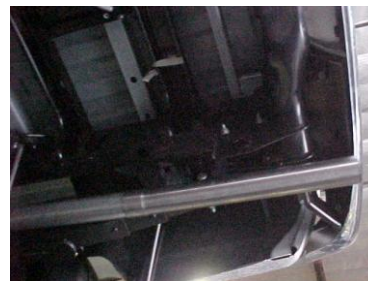

INSTALL THE EXIT PIPES #E ONTO THE TAILPIPES USING CLAMPS #G. ROLL THE PIPES UNTIL YOU HAVE THEM AT THE ANGLE YOU DESIRE.

NOW GO BACK AND TIGHTEN ALL CLAMPS, NUTS AND BOLTS STARTING FROM THE FRONT AND WORKING BACK.

INSTALL STAINLESS TIPS.

USE ZIP TIES FOR BRAKE AND FUEL LINES.