




INSTRUCTION MANUAL CAT-BACK STAINLESS DUAL SPORT EXHAUST

11-12 FORD F150 TRUCK 3.5L, V6 ECO BOOST
SUPERCREW, SHORT BED 5.5'
PART # 69209

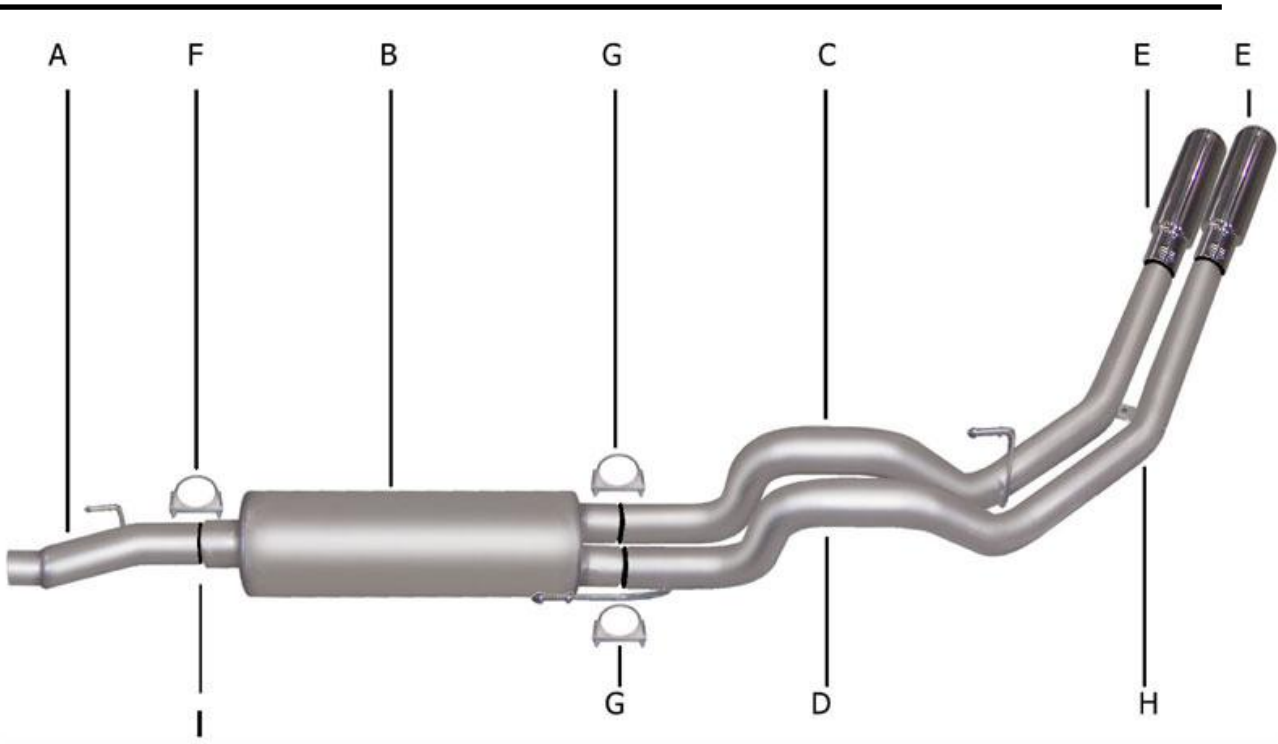

ITEM	PART#	QUANTITY	DESCRIPTION
A	1404-701149S	1	3" STAINLESS HEADPIPE
B	789800S	1	SUPERFLOW STAINLESS MUFFLER
C	1299-701067S	1	2.5" STAINLESS PASSENGER SIDE TAILPIPE
D	1300-701068S	1	2.5" STAINLESS DRIVER SIDE TAILPIPE
E	500374	2	3.5" STAINLESS TIPS
F	OHD300	1	3" CLAMP
G	5757	2	2.5" CLAMP
H	BO-906	1	BOLT KIT FOR TAILPIPES
I	BO-1020	1	BOLT KIT FOR HEADPIPE

Box 54 X 20 X 12

EXHAUST INSTALLATION #69209

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE YOU USE ALL THE PROPER SAFETY PRECAUTIONS. USE JACK STAND TO SUPPORT THE TRUCK WHILE OFF THE GROUND. SET PARKING BRAKE, BLOCK THE TIRES AND USE SAFETY GLASSES AND GLOVES. DO NOT WORK WITH HOT PIPES!

SUGGESTED TOOLS:

HACKSAW, JACKSTAND, 1/2" WRENCH & SOCKET, 9/16" SOCKET & WRENCH, WD-40, MEASURING TAPE

TO REMOVE STOCK EXHAUST SEE BELOW FOR PROPER VEHICLE APPLICATION.



TO REMOVE YOUR STOCK EXHAUST, REMOVE IT FROM THE 2-BOLT FLANGE LOCATED JUST IN FRONT OF THE MUFFLER REMOVE HANGERS FROM RUBBER GROMMETS BY PULLING EXHAUST TOWARDS THE REAR OF THE VEHICLE, USE WD-40 TO AID IN REMOVAL, LEAVE GROMMETS IN PLACE.



INSTALL HEADPIPE # A INTO STOCK PIPE. THE END OF THE PIPE SHOULD BE AT THE 12 O'CLOCK POSITION, ATTACH WITH BOLT KIT #I DO NOT TIGHTEN. INSERT WELDED HANGER INTO RUBBER GROMMET. REMOVE THE HANGER FROM THE FRAME & RELOCATE TO THE HOLES JUST TO THE LEFT OF THE OTHER HOLES YOU WILL NEED TO PRY THE INSERTS OUT & RE-INSTALL SFF PHOTO



INSTALL DRIVERS SIDE TAILPIPE # D INTO MUFFLER 1 1/2" TO 2". INSERT HANGERS INTO RUBBER GROMMETS, USE CLAMP # G TO SECURE PIPE TO MUFFLER. DO NOT TIGHTEN. THE TAB ON THIS PIPE SHOULD GO ON BOTTOM OF PASSENGER SIDE PIPE USE BOLT KIT # H TO SECURE TOGETHER.



INSTALL MUFFLER # B ONTO HEADPIPE 1 1/2" TO 2". USE CLAMP # F TO SECURE MUFFLER TO HEADPIPE. DO NOT TIGHTEN. USE A JACK STAND TO HOLD UP THE MUFFLER. OUTLETS SHOULD BE LEVEL.



INSTALL YOUR STAINLESS TIPS TO YOUR DESIRED LOOK. NOW GO BACK AND TIGHTEN ALL CLAMPS FROM THE FRONT WORKING YOUR WAY BACK.



INSTALL PASS. SIDE TAILPIPE # C INTO MUFFLER 1 1/2" TO 2". INSERT HANGER INTO RUBBER GROMMET, USE CLAMP # G TO SECURE PIPE TO MUFFLER. DO NOT TIGHTEN.