


INSTRUCTION MANUAL CAT-BACK SINGLE EXHAUST FORD F250/F350 SUPERDUTY TRUCK 6.2L 2/4WD CREWCAB, LONG BED 8' PART # 619695B

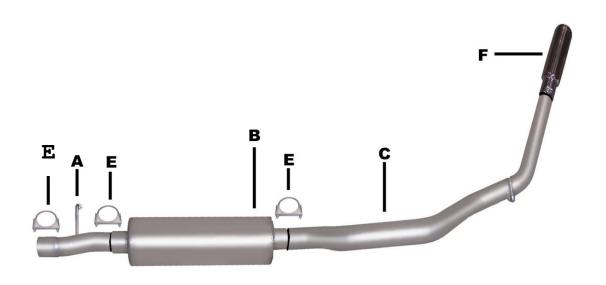

ITEM	PART#		QUANTITY	DESCRIPTION
A B C E F	999700919S 420887 1289-701045S OHD300 500641-B	1 1 1 3 1	SUPER 3" OV 3" CLA	ADPIPE W/ WELDED HANGER RFLOW MUFFLER ERAXLE TAILPIPE W/ HANGER AMP C CERAMIC TIP

INSTALLATION INSTRUCTIONS PART #619695B


WHEN INSTALLING THE EXHAUST SYSTEM, MAKE SURE TO USE PROPER SAFETY PRECAUTIONS. USE JACK STANDS WHEN UNDER VEHICLE, SET PARKING BRAKE, BLOCK TIRES AND USE SAFETY GLASSES AND GLOVES. DO NOT WORK WITH HOT PIPES!

SUGGESTED TOOLS:

9/16" SOCKET & WRENCH, 1/2" SOCKET & 1/2" WRENCH, HACKSAW, JACK STAND, WD-40



1. LAY OUT THE EXHAUST SYSTEM SO IT MATCHES THE DRAWING. MAKE SURE ALL PART NUMBERS ARE CORRECT. FOR AN EASIER REMOVAL OF THE FACTORY EXHAUST. CUT THE TAILPIPE JUST BEHIND THE FACTORY MUFFLER. LEAVE ALL RUBBER GROMMETS IN PLACE. USE WD-40 FOR EASIER REMOVAL OF FACTORY HANGER, UN BOLT THE FACTORY CLAMP LOCATED BEHIND THE FRONT RESONATOR AND REMOVE MUFFLER AND EXTENSION PIPE.





3. INSTALL MUFFLER # B. ONTO HEADPIPE 1½" TO 2". USE CLAMP #E TO SECURE MUFFLER TO HEADPIPE. DO NOT TIGHTEN





4. INSTALL OVERAXLE TAILPIPE # C INTO THE OUTLET OF THE MUFFLER 1½" TO 2". INSERT WELDED HANGERS INTO THE FACTORY RUBBER GROMMET. USE CLAMP #E TO ATTACH THE OVERAXLE PIPE TO THE MUFFLER OUTLET. DO NOT TIGHTEN.



5. NOW INSTALL YOUR STAINLESS STEEL TIP. USE ANY ALUMINUM OR STAINLESS CLEANER TO POLISH YOUR TIP. THEN TIGHTEN ALL CLAMPS AND HANGERS.

GIBSON EXHAUST systems are designed on a factory stock vehicle. Any aftermarket products installed could increase the sound levels of this Exhaust. Make sure there is a 1" clearance from ALL rubber brake lines, shock boots, fuel lines, tires, etc to prevent heat related damage .