




INSTRUCTION MANUAL
CAT-BACK DUAL EXTREME EXHAUST
SILVERADO/ SIERRA TRUCK
2500HD/3500 6.0L, 8.1L 2/4WD
EXTENDED CAB, LONG BED
CREW CAB, SHORT & LONG BED
PART # 65009B

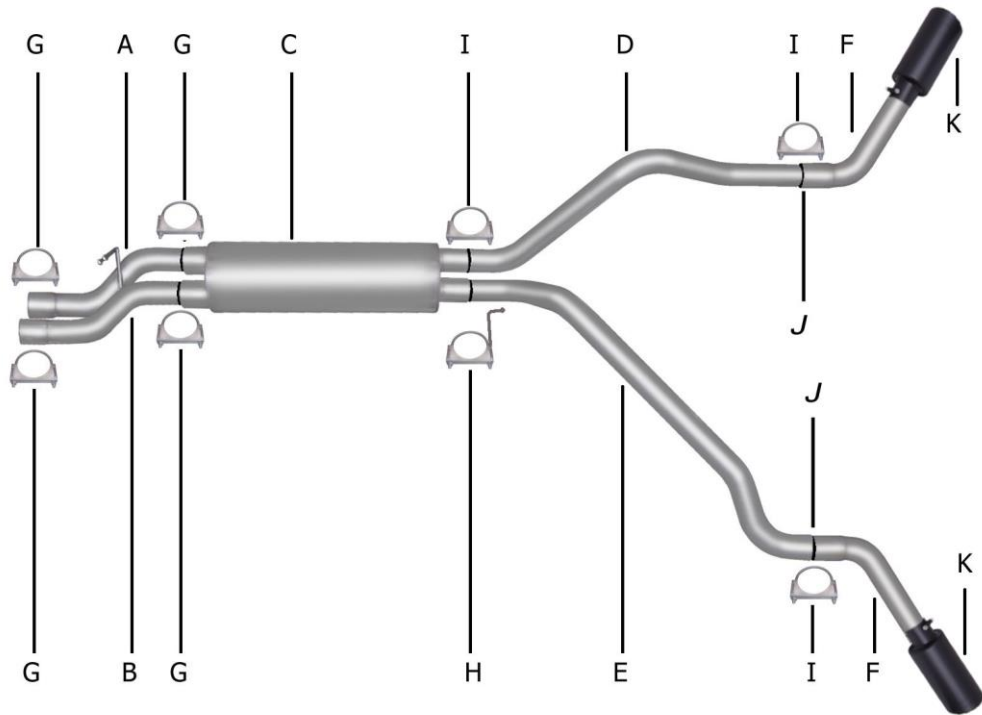

ITEM	PART #	QUANTITY	DESCRIPTION
A	568-700444S	1	3" PSGR STAINLESS HEADPIPE WITH HANGER
B	494-700329S	1	3" DRIVERSIDE STAINLESS HEADPIPE
C	766300S	1	SUPERFLOW STAINLESS MUFFLER
D	569-700445S	1	2 1/2" PSGR STAINLESS OVERAXLE TAILPIPE
E	570-700446S	1	2 1/2" DRIVER STAINLESS OVERAXLE TAILPIPE
F	571-700448S	2	2 1/2" STAINLESS EXIT PIPE
G	OHD300	4	3" CLAMP
H	4159	1	REAR MUFFLER HANGER
I	5757	3	2 1/2" CLAMP
J	4201	2	TAILPIPE HANGERS
K	500640-B	2	4" Black Ceramic Rolled Tip

EXHAUST INSTALLATION

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when under the truck, set parking brake, block tires and use safety glasses and gloves.

DO NOT WORK WITH HOT PIPES!

SUGGESTED TOOLS:

1/2", 9/16", 15mm wrench and socket, Wd-40, Hacksaw, Jack Stand



Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual. **To remove the stock exhaust cut 13" just in front of the muffler.** Leave all rubber grommets in place. Use WD-40 to aid in removal of exhaust and hangers. Use hacksaw to cut tailpipe off.



Install driverside overaxle tailpipe #E into muffler 1 1/2" to 2". Support end of tailpipe with jack stand and attach to hanger #H.



Install driverside headpipe #B. Then install headpipe #A and insert welded hanger into rubber grommet. Secure both pipes with clamp #G. Do not tighten.



Install passenger side overaxle tailpipe #D into muffler 1 1/2" to 2". Secure with clamp #I. Do not tighten.



Install muffler# C onto head pipes 1-1/2" to 2" with the louvers facing towards the converter. Use a jack stand to support the muffler. Use clamps #G to secure the muffler to the head pipes. Do not tighten



Install tailpipe hangers #J onto end of tailpipes using clamp #I. There will be about a 2" hole above the end of both tailpipes on the frame to bolt the hangers. Do not tighten.



Next, install rear muffler hanger #H onto driverside muffler outlet and insert hanger into rubber grommet. Do not tighten.



Install exit pipes #F. Use clamps #I to secure exit pipes to tailpipes. These clamps also attach to the metal hangers. Rotate to adjust for clamping. Now go back and tighten up all clamps, nuts, and bolts.

Then install stainless steel tips and tighten.

MAKE SURE YOU HAVE A 1" CLEARANCE FROM ALL BRAKE LINES, SHOCK BOOTS, TIRES, FUEL LINES, ETC...

Discover other performance exhaust systems on our website.