


INSTRUCTION MANUAL
DUAL EXTREME EXHAUST
F250HD/F350 SUPERDUTY TRUCK 5.4L - 6.8L, V10
STANDARD CAB, SUPERCAB, CREWCAB, SHORT & LONG BED

PART # 69004B

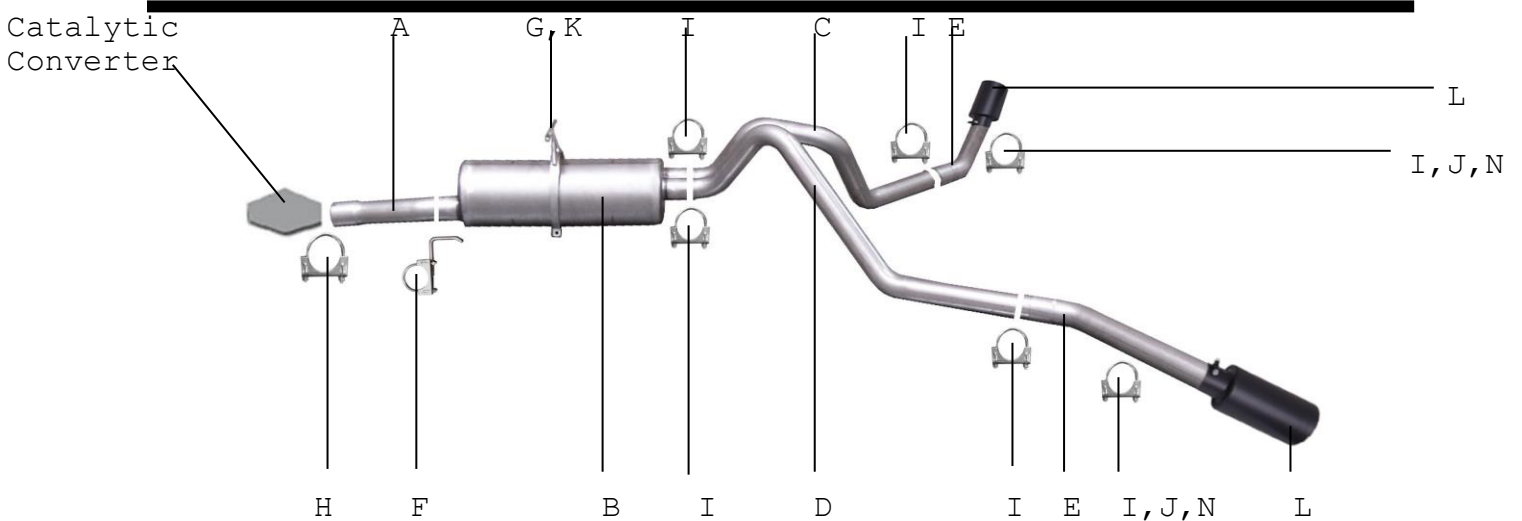

ITEM	PART #	QTY	DESCRIPTION
A	232-700132S	1	3"STAINLESS HEADPIPE
B	758250S	1	SUPERFLOW STAINLESS MUFFLER
C	344-700222S	1	2-1/2" SS PSGR SIDE OVERAXLE PIPE
D	345-700223S	1	2-1/2" SS DRIVERSIDE OVERAXLE PIPE
E	346-700224S	2	2-1/2" STAINLESS EXIT PIPE
F	4132	1	FRONT MUFFLER HANGER
G	4173	1	BAND CLAMP
H	OHD300	1	3" CLAMP
I	5757	6	2.5" CLAMP
J	08269	2	10" STRAP HANGER
K	BO-1015	1	BOLT KIT FOR BAND CLAMP
L	500640-B	2	4" BLACK CERAMIC ROLLED TIP
M	ZIP	2	ZIP TIES
N	BO-101	2	BOLT KIT FOR 10" HANGERS

WILL NOT FIT 4WD MODELS WITH SWAY BAR
MUST REMOVE SPARE TIRE IF LARGER THAN 16"

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE PROPER SAFETY PRECAUTIONS. USE JACK STANDS WHEN UNDER THE TRUCK. SET PARKING BRAKE, BLOCK TIRES AND USE SAFETY GLASSES AND GLOVES. DO NOT WORK WITH HOT PIPES

SUGGESTED TOOLS:

9/16" SOCKET, 15 MM SOCKET, 1/2" SOCKET, 1/2" WRENCH, JACKSTAND HACKSAW



LAY OUT THE GIBSON EXHAUST ON THE FLOOR SO IT LOOKS LIKE THE DRAWING. COMPARE PART NUMBERS WITH MANUAL. TO REMOVE YOUR STOCK EXHAUST, REMOVE IT FROM THE CLAMP LOCATED JUST IN FRONT OF THE MUFFLER. YOU MAY NEED TO HEAT IT UP FOR EASIER REMOVAL. NOW CUT OFF YOUR STOCK TAILPIPE JUST BEHIND THE MUFFLER. USE WD-40 TO AID IN THE REMOVAL OF HANGERS. LEAVE ALL RUBBER GROMMETS IN PLACE.



NEXT INSTALL DRIVERS SIDE OVERAXLE PIPE #D INTO MUFFLER 1 1/2" TO 2". USE CLAMP #I TO SECURE PIPE TO MUFFLER. DO NOT TIGHTEN. ROTATE PIPE UNTIL IT TOUCHES HANGER. USE CLAMP #I TO HOLD PIPE TO HANGER DO NOT TIGHTEN.



INSTALL HEADPIPE #A ONTO EXISTING PIPE. LINE UP THE NOTCH. USE CLAMP #H TO SECURE HEADPIPE TO STOCK PIPE. DO NOT TIGHTEN.



INSTALL PASSENGER SIDE OVERAXLE PIPE #C INTO MUFFLER 1 1/2" TO 2". USE CLAMP # I TO SECURE. DO NOT TIGHTEN. ROTATE UNTIL PIPE TOUCHES HANGER. USE CLAMP #I TO HOLD PIPE TO HANGER. DO NOT TIGHTEN.



NEXT INSTALL BAND CLAMP #G. SLIDE IT OVER THE MUFFLER. THEN INSTALL HANGERS INTO THE RUBBER GROMMETS LOCATED ABOVE THE MUFFLER OUTLET. USE BOLT KIT # K TO SECURE. DO NOT TIGHTEN.



NEXT, INSTALL EXIT PIPES #E ONTO OVERAXLE PIPES. USE CLAMPS # I TO SECURE EXIT PIPE TO OVERAXLES. CUT EXIT PIPES TO DESIRED LENGTH..



INSTALL MUFFLER #B ONTO HEADPIPE 1 1/2" TO 2". MUFFLER OUTLETS SHOULD BE ON TOP. ROTATE UNTIL LEVEL. SUPPORT MUFFLER WITH A JACK STAND. NEXT, INSTALL FRONT MUFFLER HANGER #F INTO RUBBER GROMMETS, LOCATED NEXT TO MUFFLER INLET. THIS CLAMP WILL ALSO BE USED TO SECURE MUFFLER TO HEADPIPE. DO NOT TIGHTEN.



FINALLY, AFTER TIGHTENING ALL CLAMPS FROM FRONT TO BACK AND MAKING SURE OF CLEARANCES,

INSTALL YOUR STAINLESS TIPS TO YOUR DESIRED LOOK.

NEXT, LOCATE THE SLOTTED HOLES LOCATED APPROXIMATELY 16" FROM THE REAR OF THE FRAME. MOUNT THE 10" STRAP HANGERS #J INTO THESE SLOTS USING THE HARDWARE KIT # J. MOUNT USING THE 2ND HOLE FROM THE TOP.

MAKE SURE YOU HAVE A 1" CLEARANCE ON ALL PIPES FROM ALL RUBBER BRAKE LINES, SHOCKS, TIRES, ECT...