




Installation Instructions

STAINLESS STEEL CAT-BACK SPLIT REAR EXHAUST

FORD F150 TRUCK 5.0L2/4WD
REGULAR CAB, SHORT BED

PART #69547B

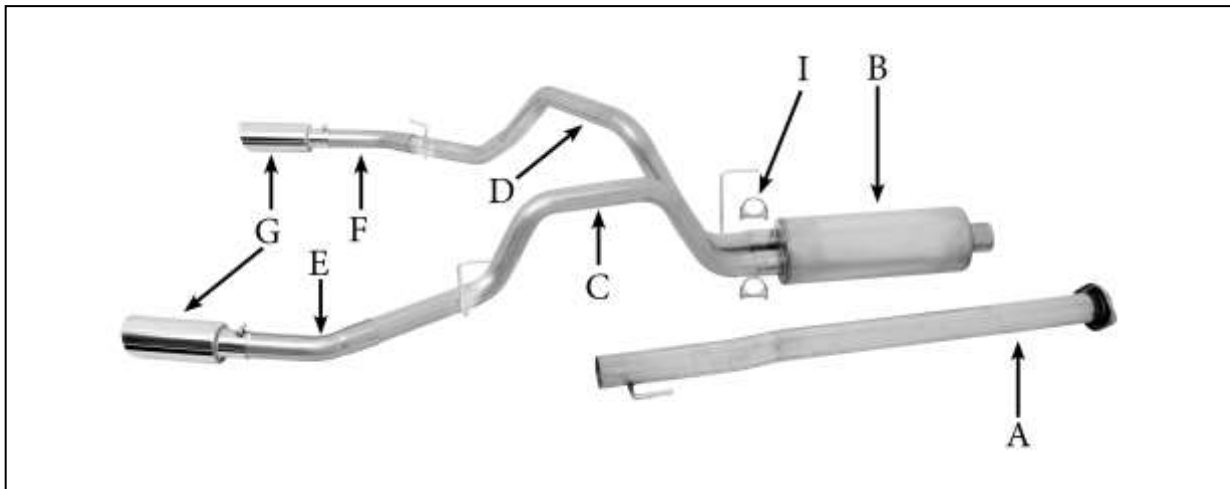

*All pictures shown are for illustration purpose only. Actual product may vary due product specifications.

ITEM	PART#	QUANTITY	DESCRIPTION
A	999700916S	1	3" HEADPIPE WITH WELDED HANGER/AND FLANGE
B	758219S	1	SUPERFLOW MUFFLER
C	999700840S	1	2.5"PASSENGERSIDE OVERAXLE TAILPIPE
D	999700864S	1	2.5"DRIVERSIDE OVERAXLE TAILPIPE W/HANGERS
E	999700841S	1	2.5" PASSENGER SIDE EXIT PIPE
F	999700842S	1	2.5" DRIVER SIDE EXIT PIPE
G	500640-B	2	4" BLACK CERAMIC ROLLED EDGE TIP
H	OHD300	1	3" CLAMP
I	5757	4	2.5" CLAMP
J	800017	1	DRIVERSIDE REAR TAILPIPE HANGER
K	4240	1	RUBBER GROMMET
L	*BO-1045	1	REAR TAILPIPE HANGER BOLT KIT *
M	BO-1020	1	BOLT KIT FOR HEADPIPE

"WILL FIT WITH 18" SPARE TIRE"

Thank you for purchasing GIBSON PERFORMANCE EXHAUST SYSTEM for your vehicle.

EXHAUST INSTALLATION #69547B

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE YOU USE ALL THE PROPER SAFETY PRECAUTIONS. USE JACK STAND TO SUPPORT THE TRUCK WHILE OFF THE GROUND. SET PARKING BRAKE, BLOCK THE TIRES AND USE SAFETY GLASSES AND GLOVES. DO NOT WORK WITH HOT PIPES!

SUGGESTED TOOLS:

HACKSAW, JACKSTAND, 1/2" WRENCH & SOCKET, 9/16" SOCKET & WRENCH, 15MM WRENCH & SOCKET WD-40, MEASURING TAPE



TO REMOVE YOUR STOCK EXHAUST, REMOVE IT FROM THE FLANGE LOCATED JUST IN FRONT OF THE MUFFLER REMOVE HANGERS FROM RUBBER GROMMETS BY PULLING EXHAUST TOWARDS THE REAR OF THE VEHICLE, USE WD-40 TO AID IN REMOVAL, LEAVE GROMMETS IN PLACE.



INSTALL DRIVERS SIDE TAILPIPE # D INTO MUFFLER 1 1/2" TO 2". INSERT WELDED HANGERS INTO RUBBER GROMMETS. USE CLAMP # H TO SECURE PIPE TO MUFFLER, DO NOT TIGHTEN.



INSTALL HEADPIPE # A INTO STOCK FLANGE ATTACH WITH BOLT KIT PROVIDED. DO NOT TIGHTEN. INSERT WELDED HANGER INTO RUBBER GROMMET.



INSTALL PASSENGER SIDE TAILPIPE # C INTO MUFFLER 1 1/2" TO 2". INSERT WELDED HANGER INTO RUBBER GROMMET, USE CLAMP # H TO SECURE PIPE TO MUFFLER. DO NOT TIGHTEN. ROTATE PIPE TOWARDS DRIVERSIDE.



INSTALL MUFFLER # B ONTO HEADPIPE 1 1/2" TO 2". USE CLAMP # G TO SECURE MUFFLER TO HEADPIPE. DO NOT TIGHTEN. USE A JACK STAND TO HOLD UP THE MUFFLER. OUTLETS SHOULD BE LEVEL.



INSTALL EXIT PIPES # E & F ONTO TAILPIPES. ROTATE UNTIL LEVEL, USE CLAMP # H TO SECURE PIPES TOGETHER. DO NOT TIGHTEN.



ON DRIVER SIDE: ATTACH REAR TAILPIPE HANGER #I TO FRAME USING BOLT KIT PROVIDED

BE SURE TO REMOVE SPARE TIRE HEATSHEILD BEFORE PROCEEDING TO NEXT STEP



INSTALL YOUR STAINLESS TIPS TO YOUR DESIRED LOOK, THEN GO BACK AND TIGHTEN ALL CLAMPS. ROTATE SYSTEM FOR BEST CLEARANCE BEFORE TIGHTENING.

MAKE SURE YOU AT LEAST A 1" CLEARANCE ON ALL BRAKE LINES, FUEL LINES, SHOCKS, TIRES, ETC. USE ZIP TIES TO TIE THE BRAKE LINES OUT OF THE WAY.