INSTALLATION INSTRUCTIONS

Dakar Sport 52064(1-4) / Dakar 52064(1BB-4BB) / Rhino Charger BB52064(1B-4PS) F-150 / F-250 & LOBO 97-02 (HERITAGE) 97-06 (2 & 4 X 4)

Parts List:

QTY

1. Bull Bar / Dakar Sport

Set of brackets

(1) Hardware kit including:

(4) 1/2" x 5" hex head bolt

(6) 1/2" flat washers

(4) 1/2" lock nuts

(2) 1/2" x 2" hex head bolt

(2) 1/2" lock washers

Extra:

(2) spacer washers 1/2"


Tools requiered:

3/4" Wrench Ratchet 3/4" Socket. 15 mm Socket

Instructions: Aproximated installation time: 30 min.

- Read and understand instructions completely before beginning installation.
- Locate the lateral slot (side to side) from chassis side. See image 1.
- 3. Place the bracket without tighten, just to see where is going to be and where is going to cut the vehicle defense. Cut on bull bar / Dakar sport tube direction. Note: Only if the vehicle hasn't tow hooks.
- 4. If the vehicle has tow hooks, take them off. Note: The tow hooks won't be used. In 4x4 version keep the front bolt removed from the tow hooks.
- 5. Place the main bracket, put a 1/2" x 5" bolt throw the existents slots on chassis and bracket, hold them with a flat washer and a 1/2" lock nut. Hand - tighten. See image 2. Note: In 4x4 versions use the bolt removed from tow hooks, See image
- Install your Bull bar / Dakar sport over the main brackets with 1/2" x 2 and their flat and lock washers, See image 3. Hand tighten.
- 7. Make any adjustment to the aligment oof your Bull bar / Dakar sport and tighten all the hardware.
- Remember to check the hardware periodically.

Assembly Diagram:

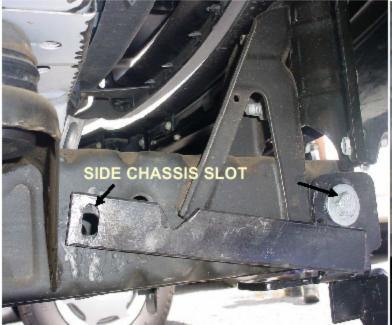

MODEL SHOWN

TOW HOOK'S FRONT BOLT TOW HOOK'S REAR BOLT

IMAGE 2

MODEL SHOWN

PASSENGER SIDE

PASSENGER SIDE IMAGES.

Cleaning and care instructions:

IMAGE 1

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.

INSTALLATION INSTRUCTIONS

Dakar Sport 52064(1-4) / Dakar 52064(1BB-4BB) / Rhino Charger BB52064(1B-4PS) F-150 / F-250 & LOBO 97-02 (HERITAGE) 97-06 (2 & 4 X 4)

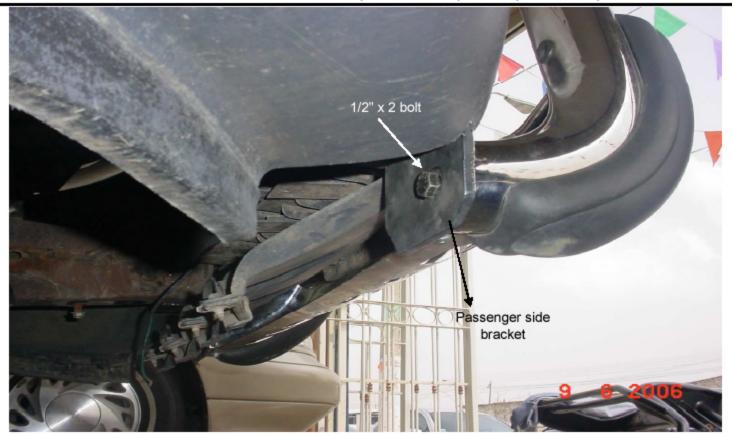


IMAGE 3



PRODUCT INSTALLED

Cleaning and care instructions:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scracht the finish and cause corrosion.