




**MUSTANGER WHEEL MODELS 963/966/968  
MUSTANG HORN BUTTON MODEL 5847  
HORN OPERATION SUPPLEMENT**

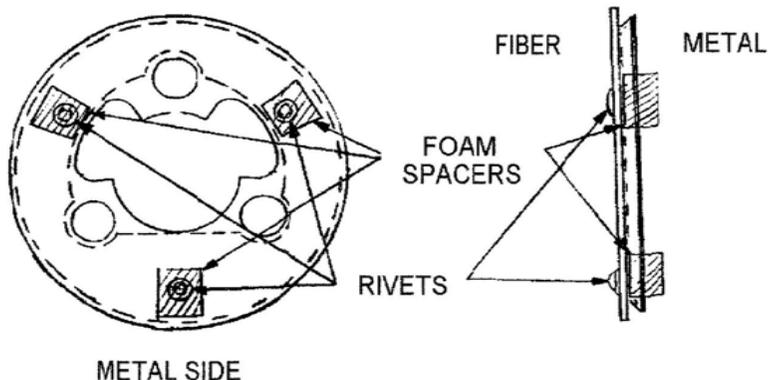

**DO NOT USE THE HORN BUTTON SPRING OR BROWN RETAINER CONTACTOR RING PROVIDED IN YOUR INSTALLATION KIT.**

USE THE RETAINER CONTACTOR RING PROVIDED WITH THE WHEEL OR BUTTON (NOT ONE PROVIDED IN KIT). ATTACH THE THREE FOAM SPACERS PROVIDED BY SIMPLY PEELING THE PAPER TAPE FROM THE FOAM EXPOSING AN ADHESIVE AND PRESS THIS ADHESIVE SIDE DOWN FIRMLY OVER THE RIVET AREA AS SHOWN ABOVE. (TAKE CARE THAT FOAM DOES NOT COVER OUTER EDGE OF METAL RING OR DIMPLES STAMPED INTO METAL PLATE).

FOLLOW THE REST OF THE DIRECTIONS ON MAIN INSTRUCTION SHEET BUT ELIMINATE THE HORN SPRING INSTALLATION.

INSTALL HORN BUTTON BY ALIGNING SO THAT THE LOGO IS STRAIGHT WITH THE WHEEL THEN PRESS DOWN **FIRMLY** ONTO RETAINER CONTACTOR RING. DO NOT TURN BUTTON ONCE IT IS PRESSED ONTO RING. ENJOY YOUR NEW GRANT CUSTOM STEERING WHEEL.