

# Installation Instructions


## Tape-on Wind Deflectors

### Safety Precautions




- WARNING – Before driving, make sure your wind deflector is firmly attached to your vehicle.
- Avoid using automatic brush-style car washes.
- Avoid using any cleaning solvents.
- Regularly inspect all components for tightness.

### 2-Piece Kit Includes:

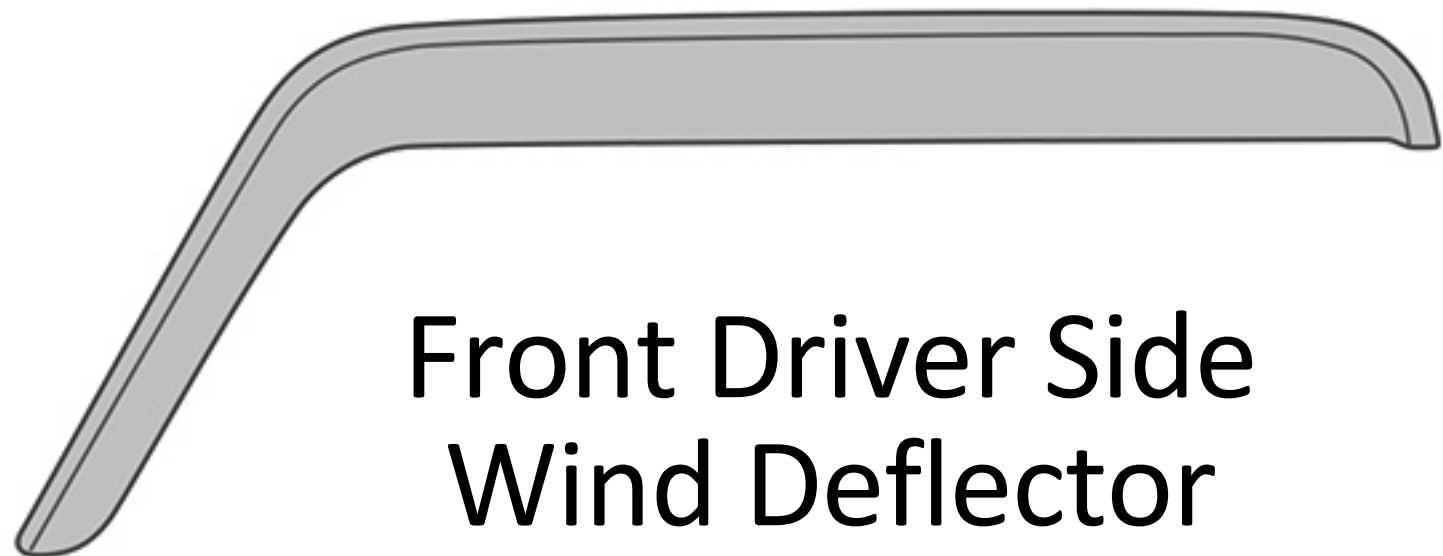


Front Driver Side  
Wind Deflector

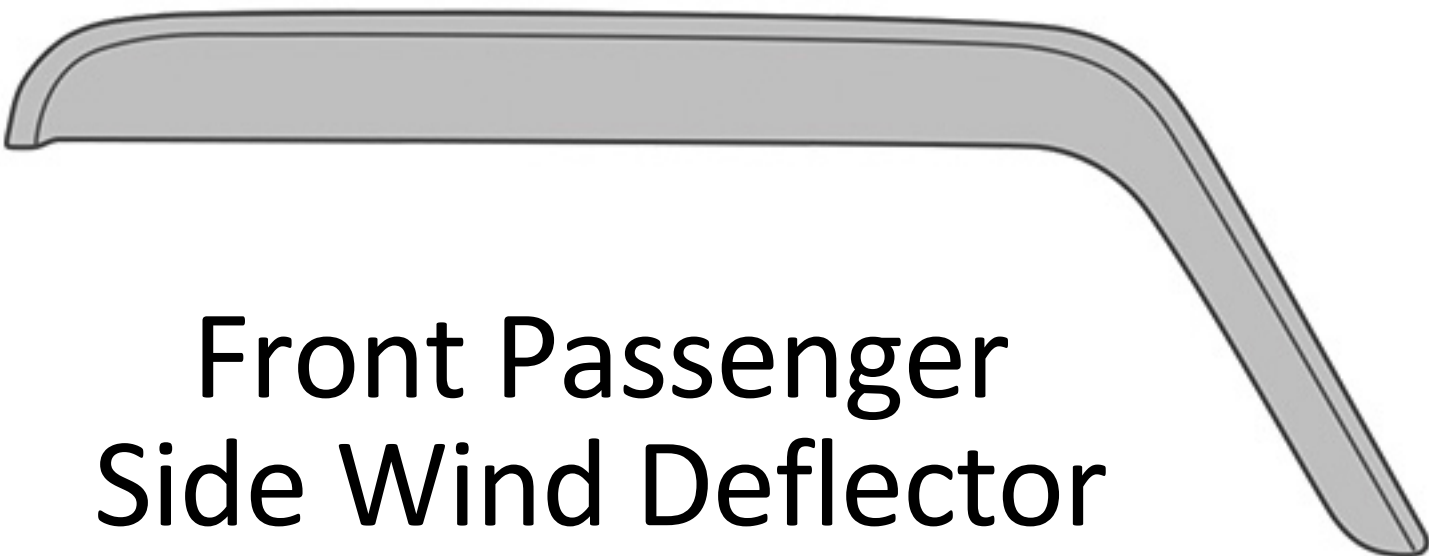

Front Passenger  
Side Wind Deflector




2 Alcohol Pads

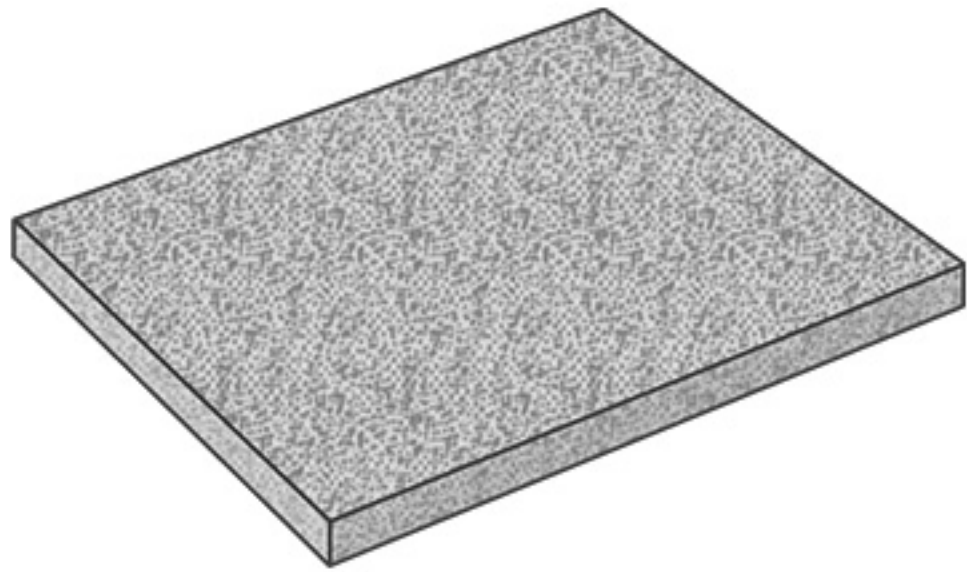


Scotch Brite Pad


### 4-Piece Kit Includes:

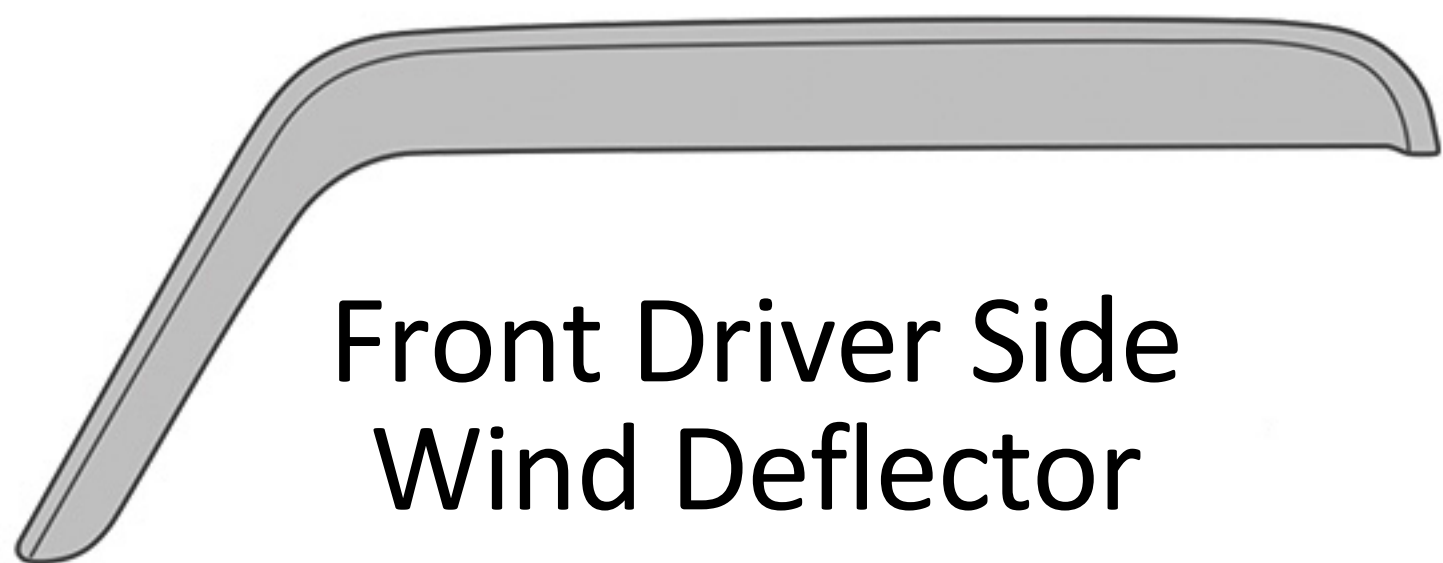


Front Driver Side  
Wind Deflector

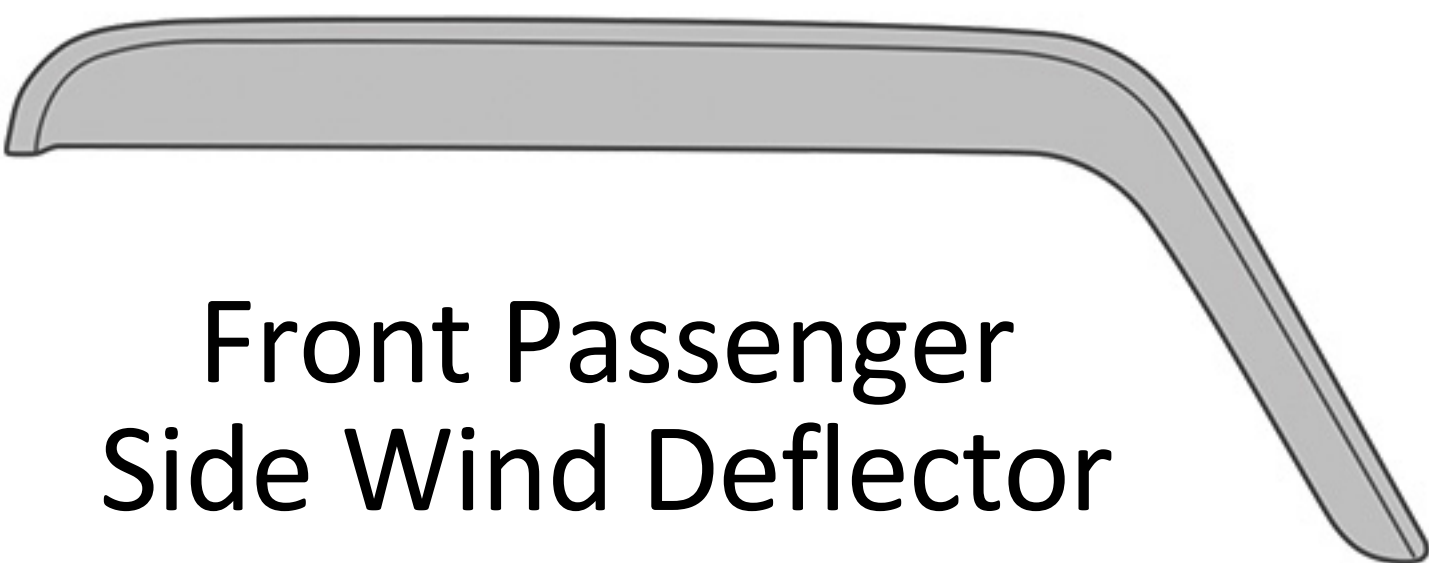

Front Passenger  
Side Wind Deflector

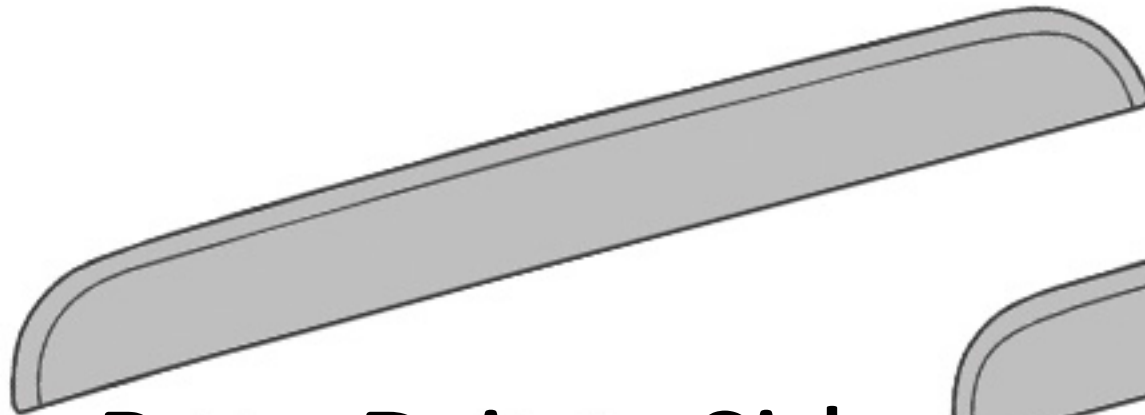


Rear Driver Side  
Wind Deflector

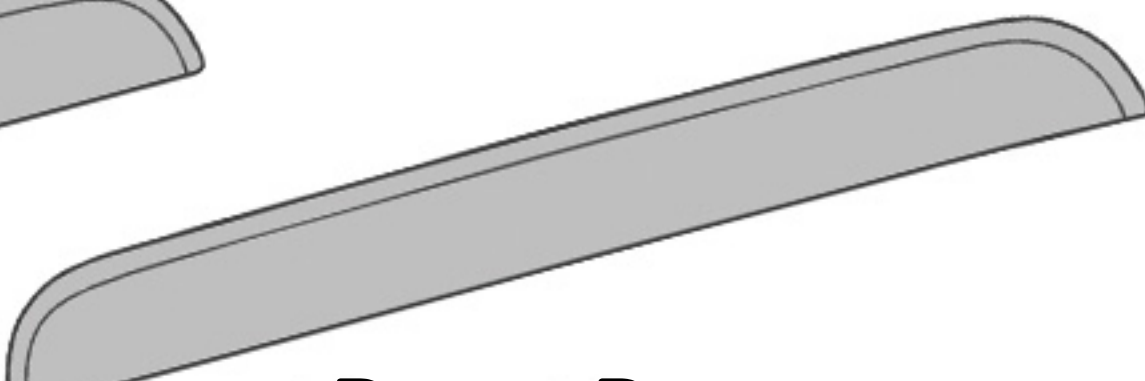

Rear Passenger  
Side Wind Deflector



4 Alcohol Pads

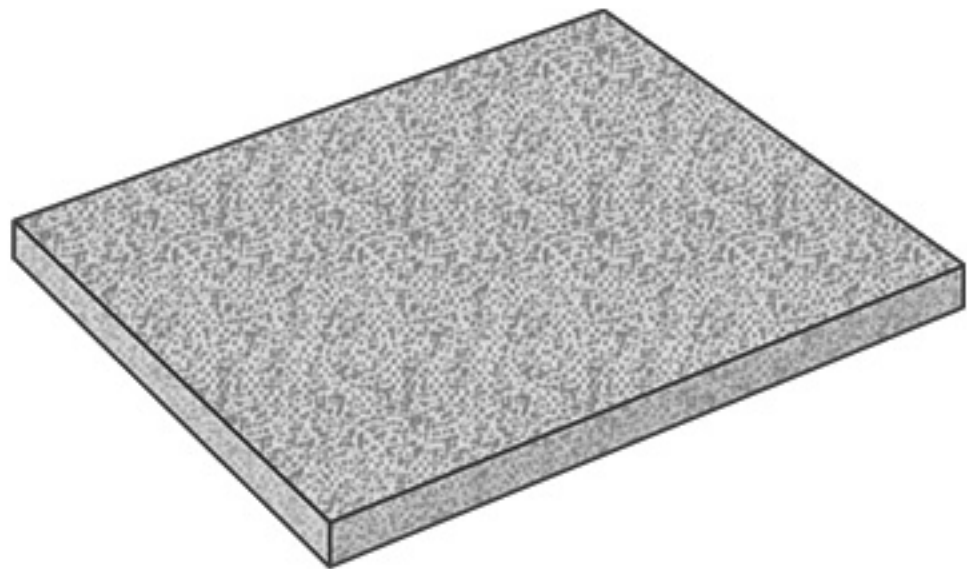


Scotch Brite Pad

### Necessary Tools



Car Wash Supplies

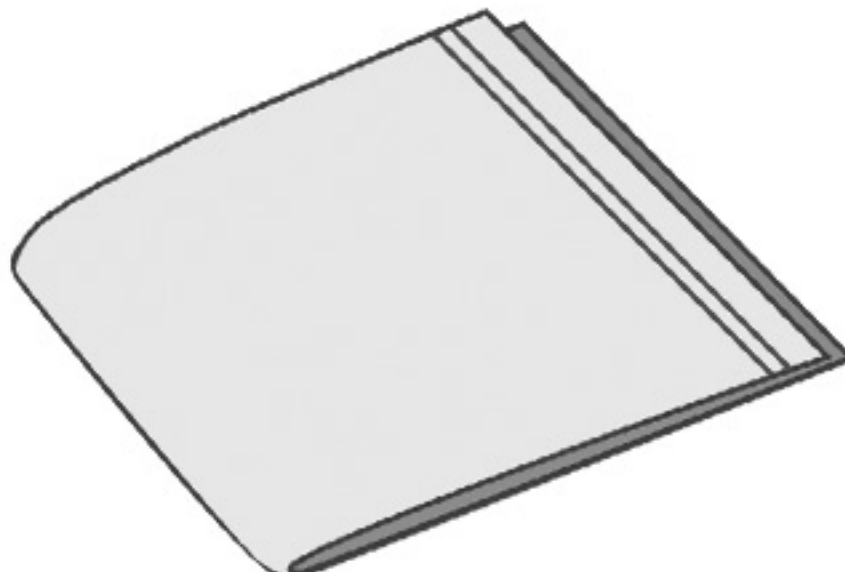

Clean Towel

### Installation / Painting Preparation

- ▽ u
  - ▽ "
  - ▽ u
  - ▽ y
- h




# Installation Procedure


**NOTE:** Pictures below may differ slightly from actual application.



Use Scotch Brite pad to scrub the rubber window trim. Wipe the rubber window trim / mirror cap with alcohol pad to dissolve remaining grease.

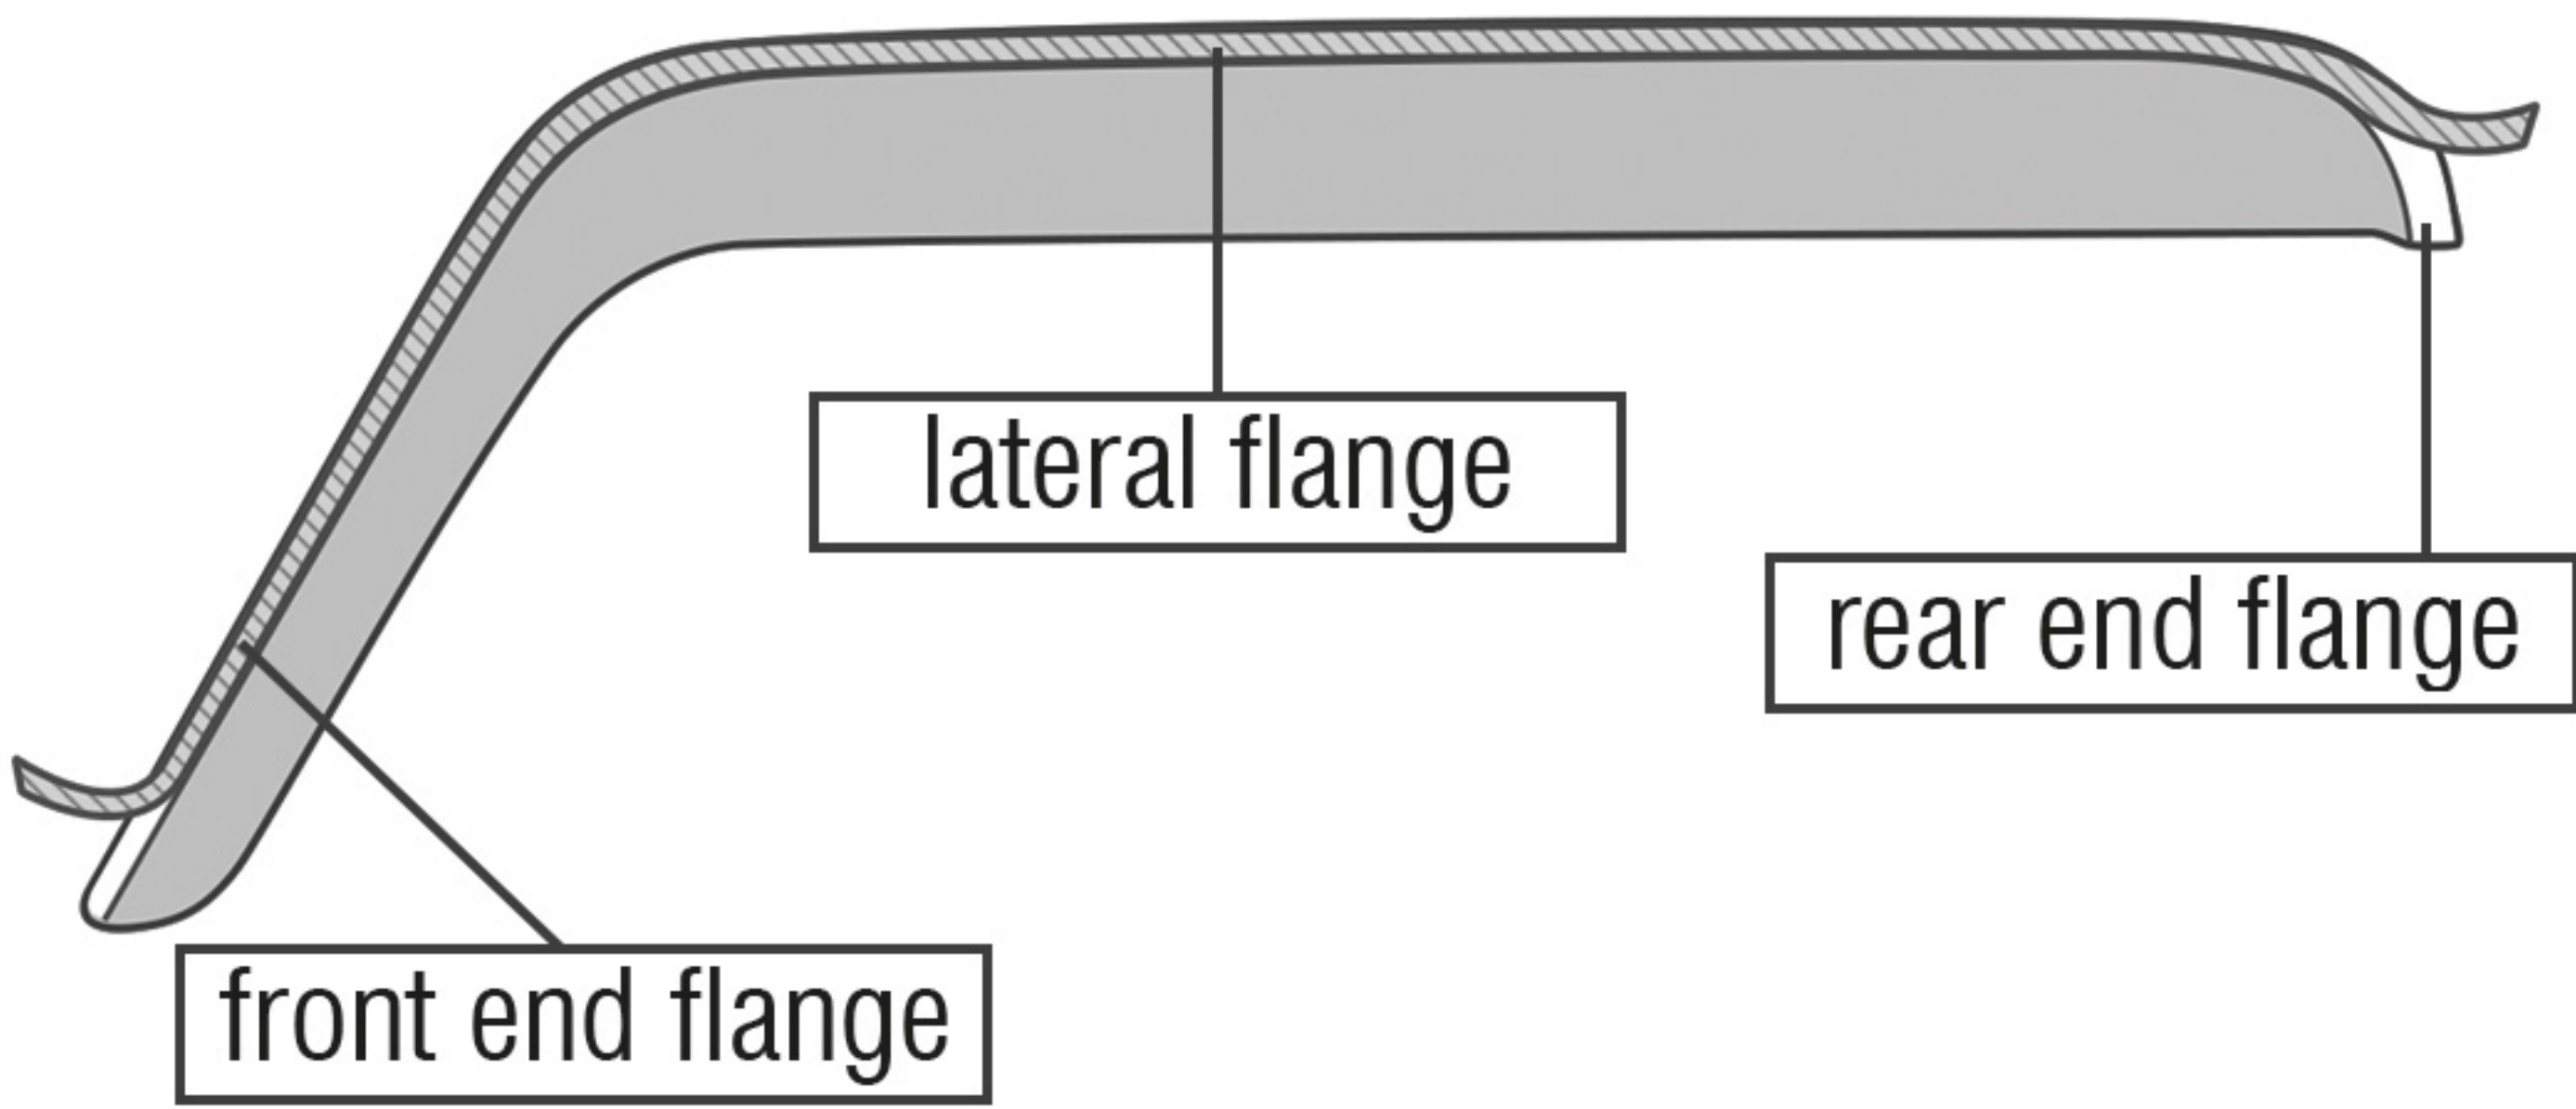

1

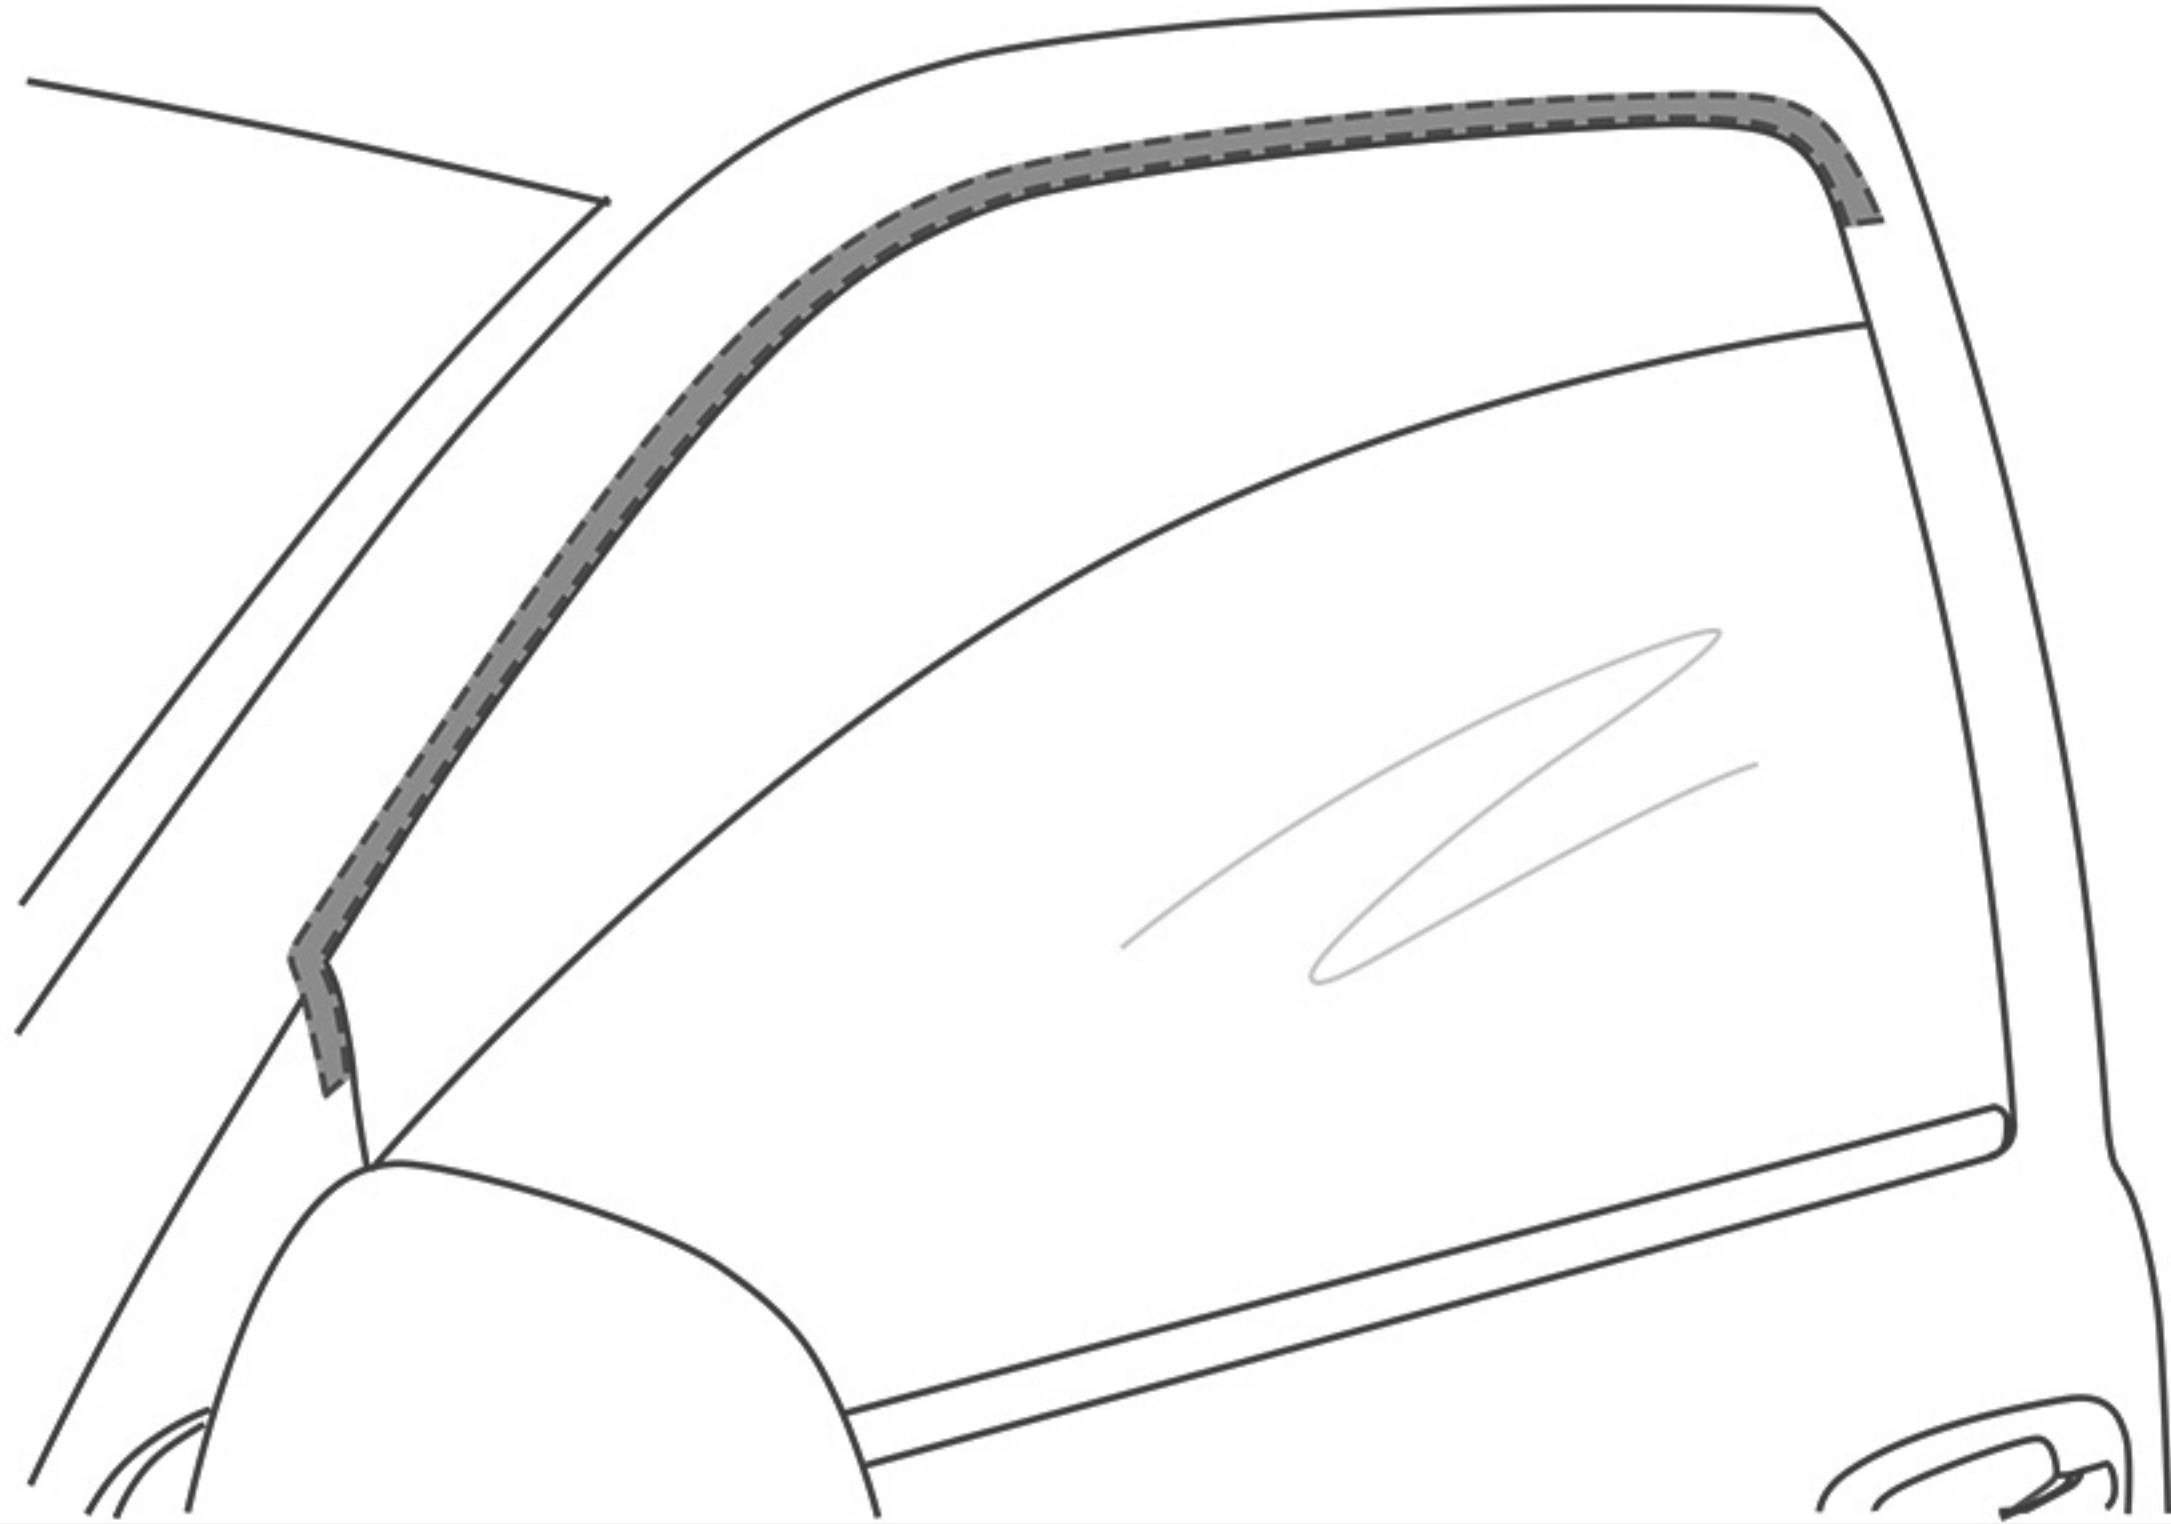


2

Peel back 2" of the backing from the adhesive tape on both sides of the tape.


Place the driver side wind deflector on the previously cleaned area and make sure it is properly aligned. Stick the ends of the tape to the vehicle applying pressure.

Peel off the remaining backing from the adhesive tape.


3

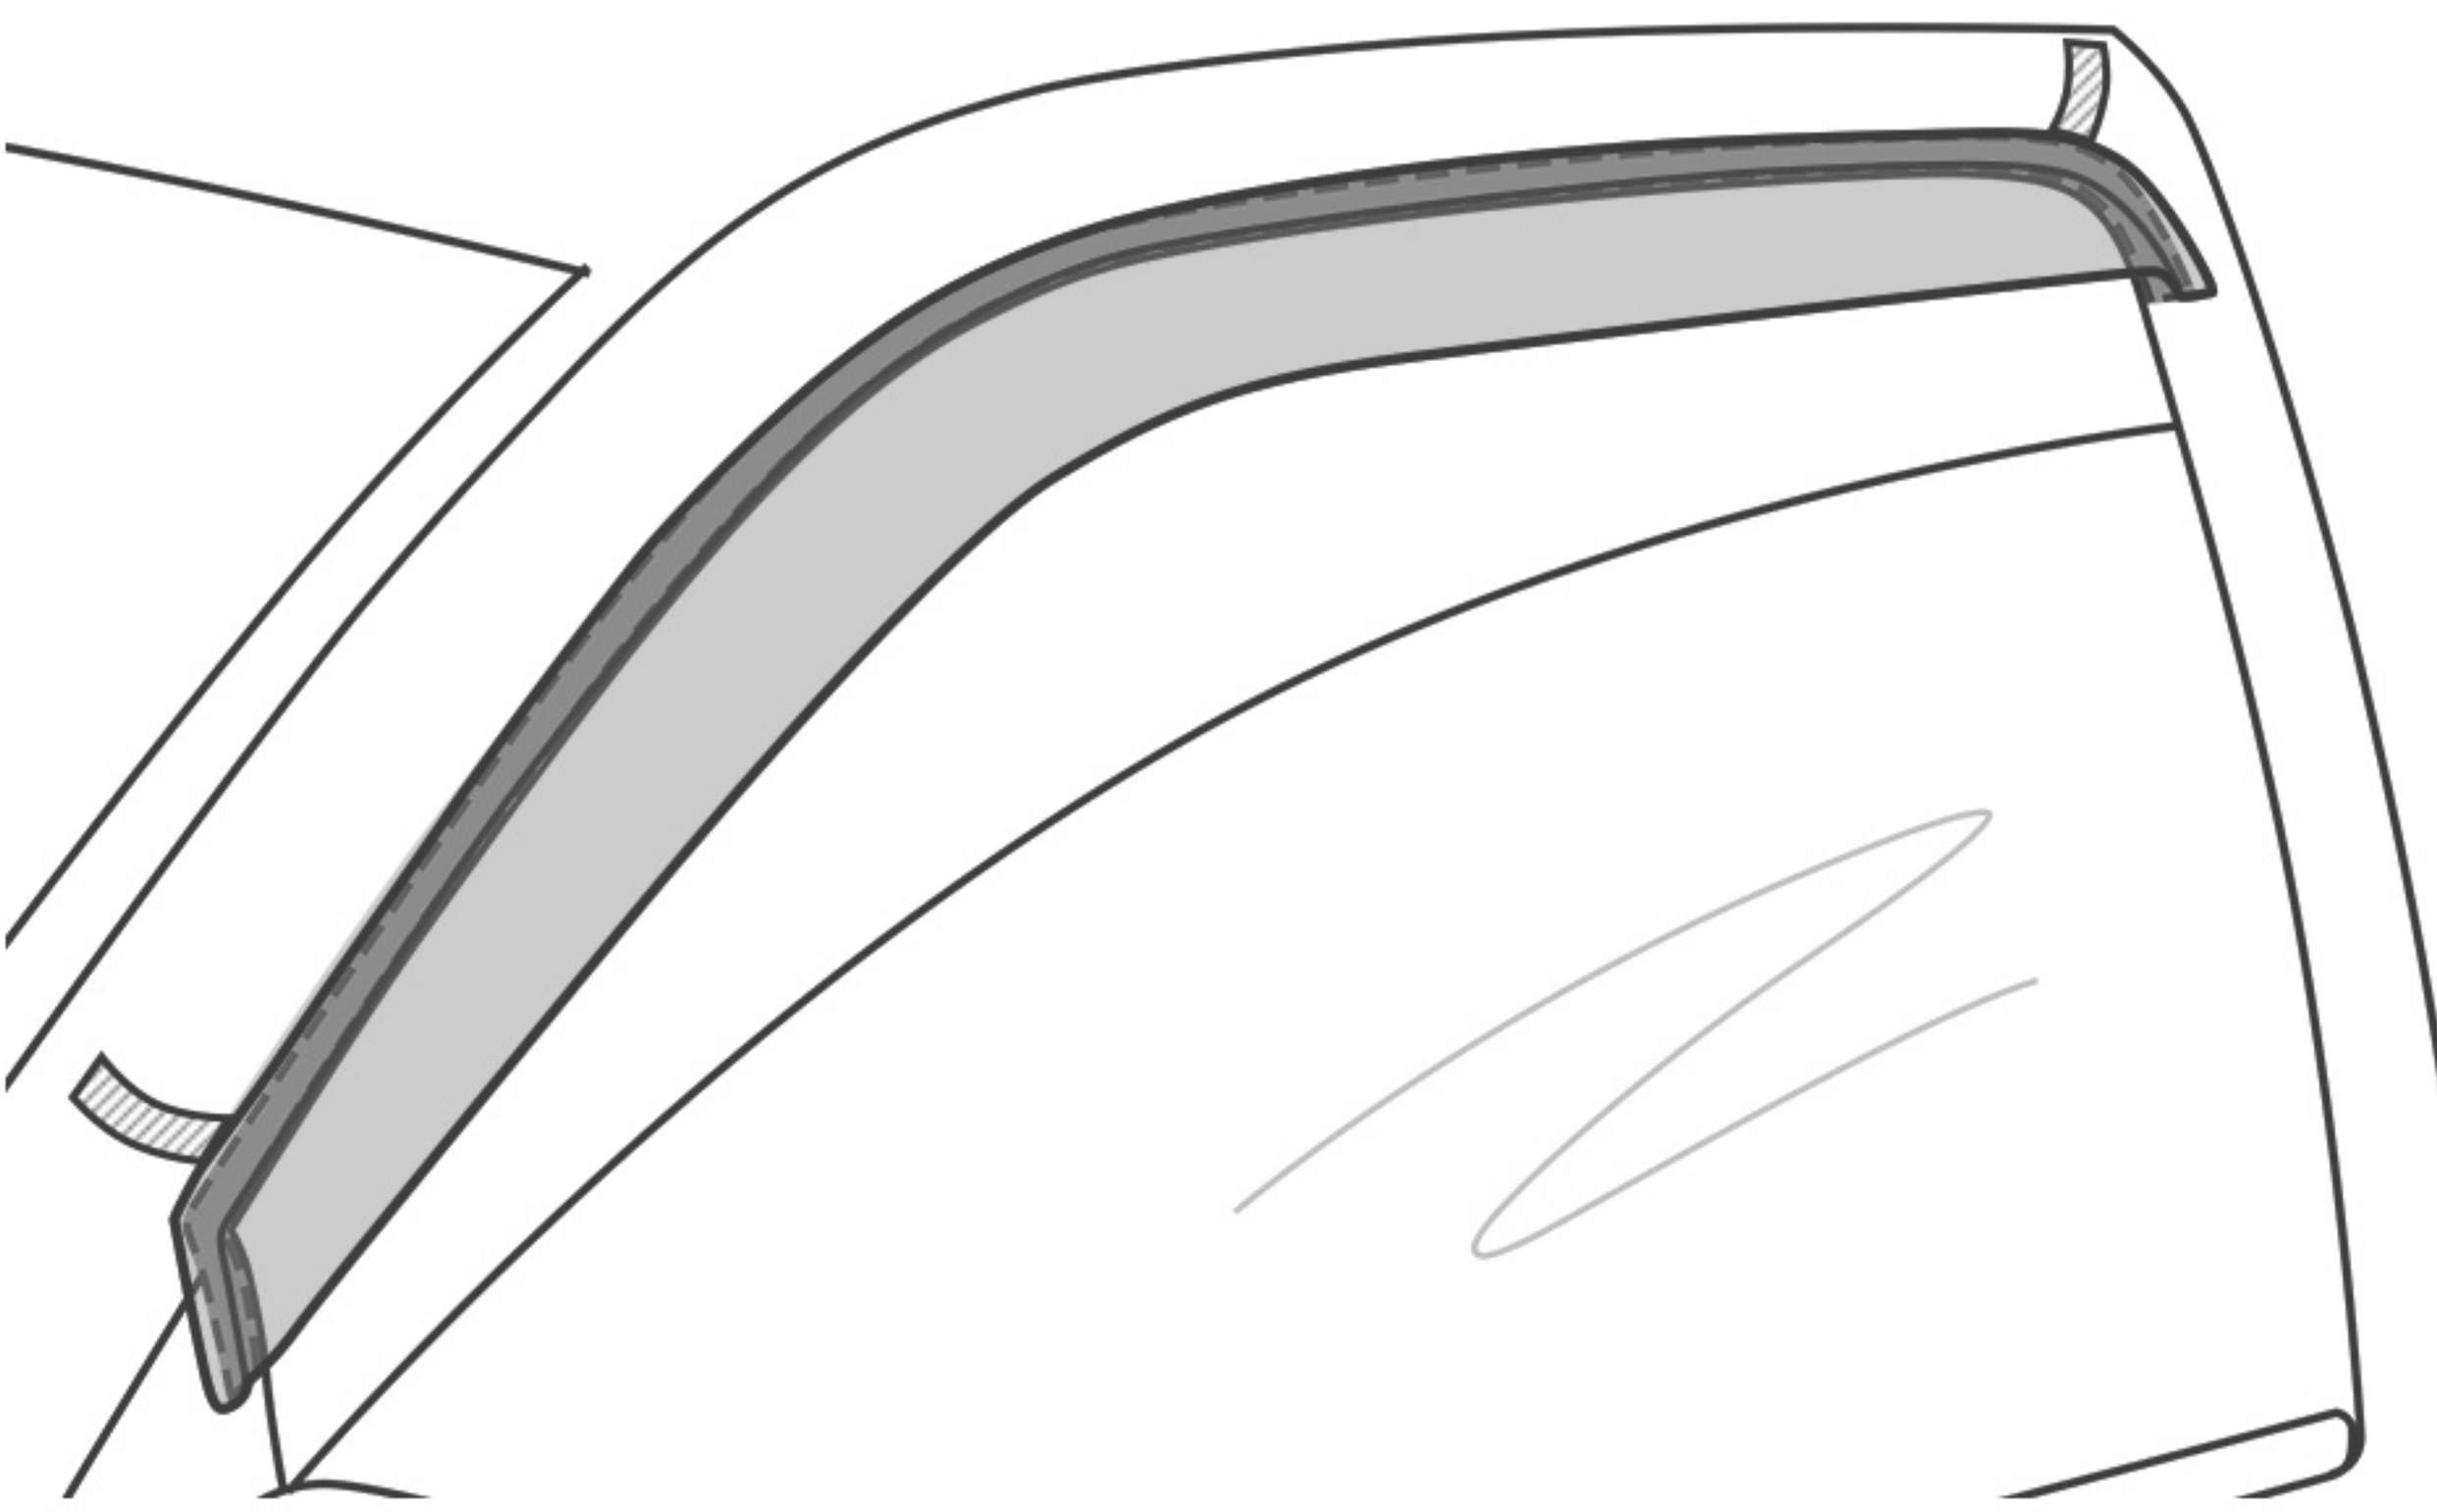

4

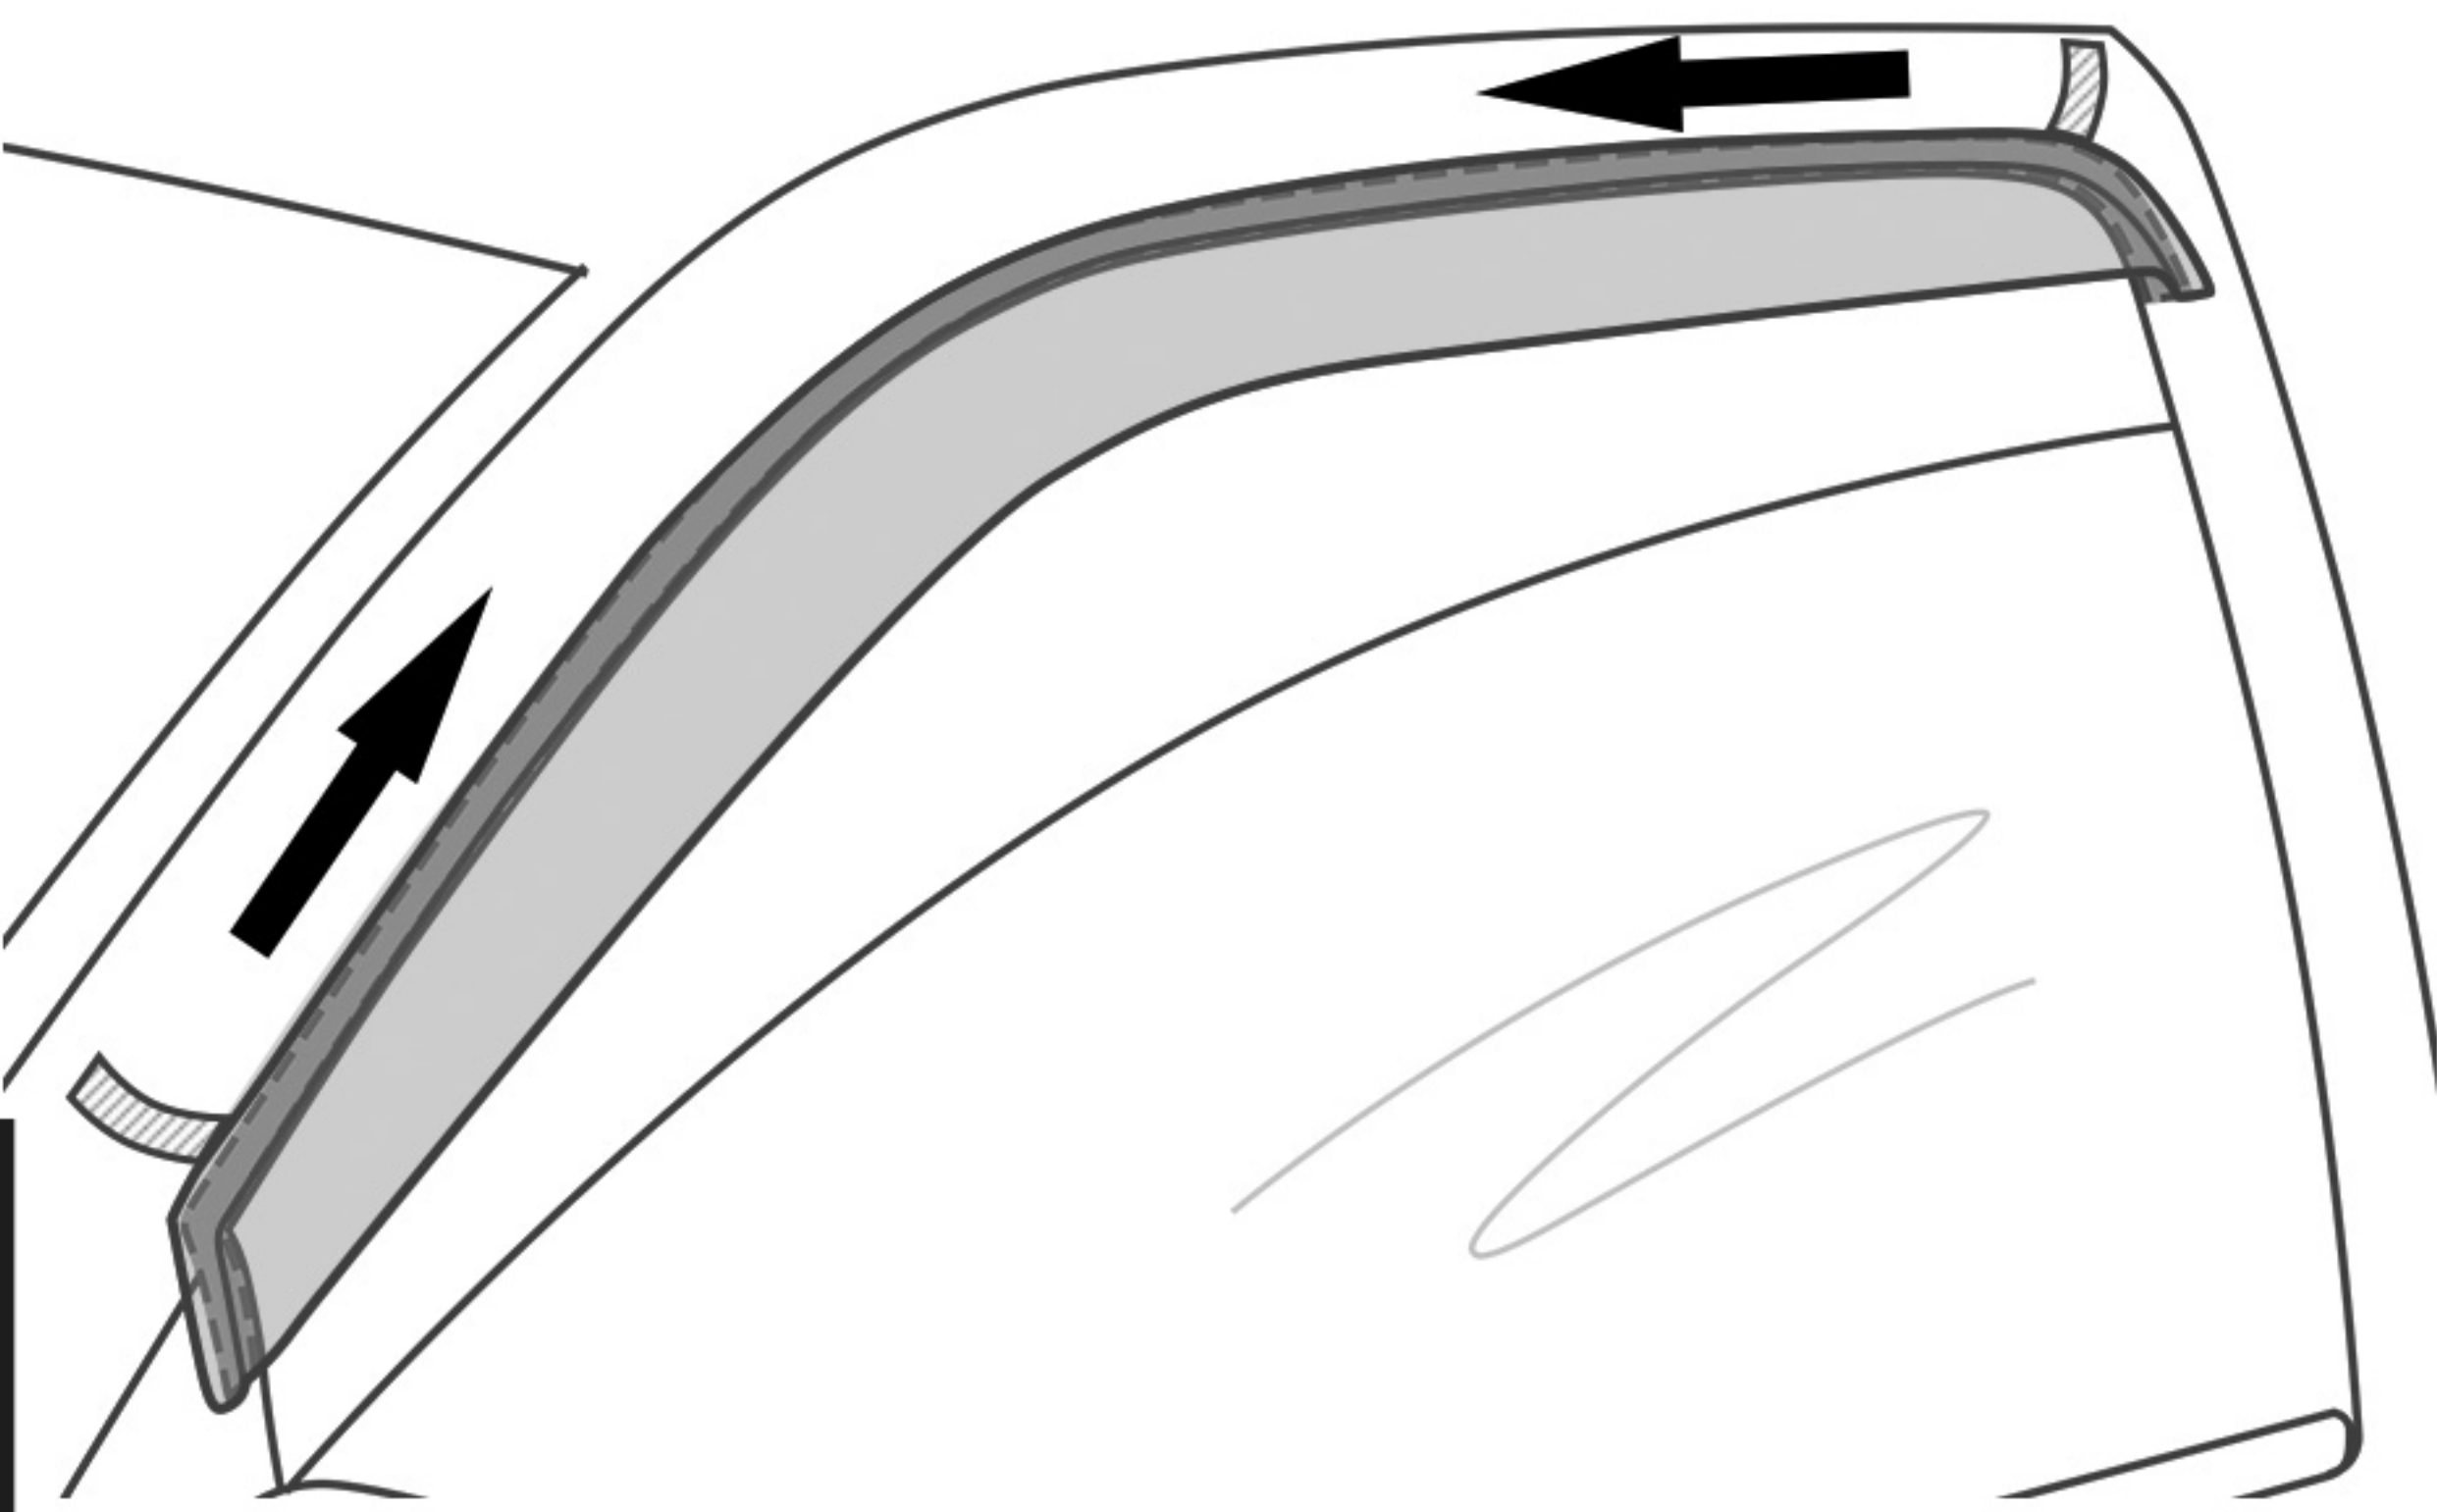

Secure your wind deflector by applying pressure along its entire length.

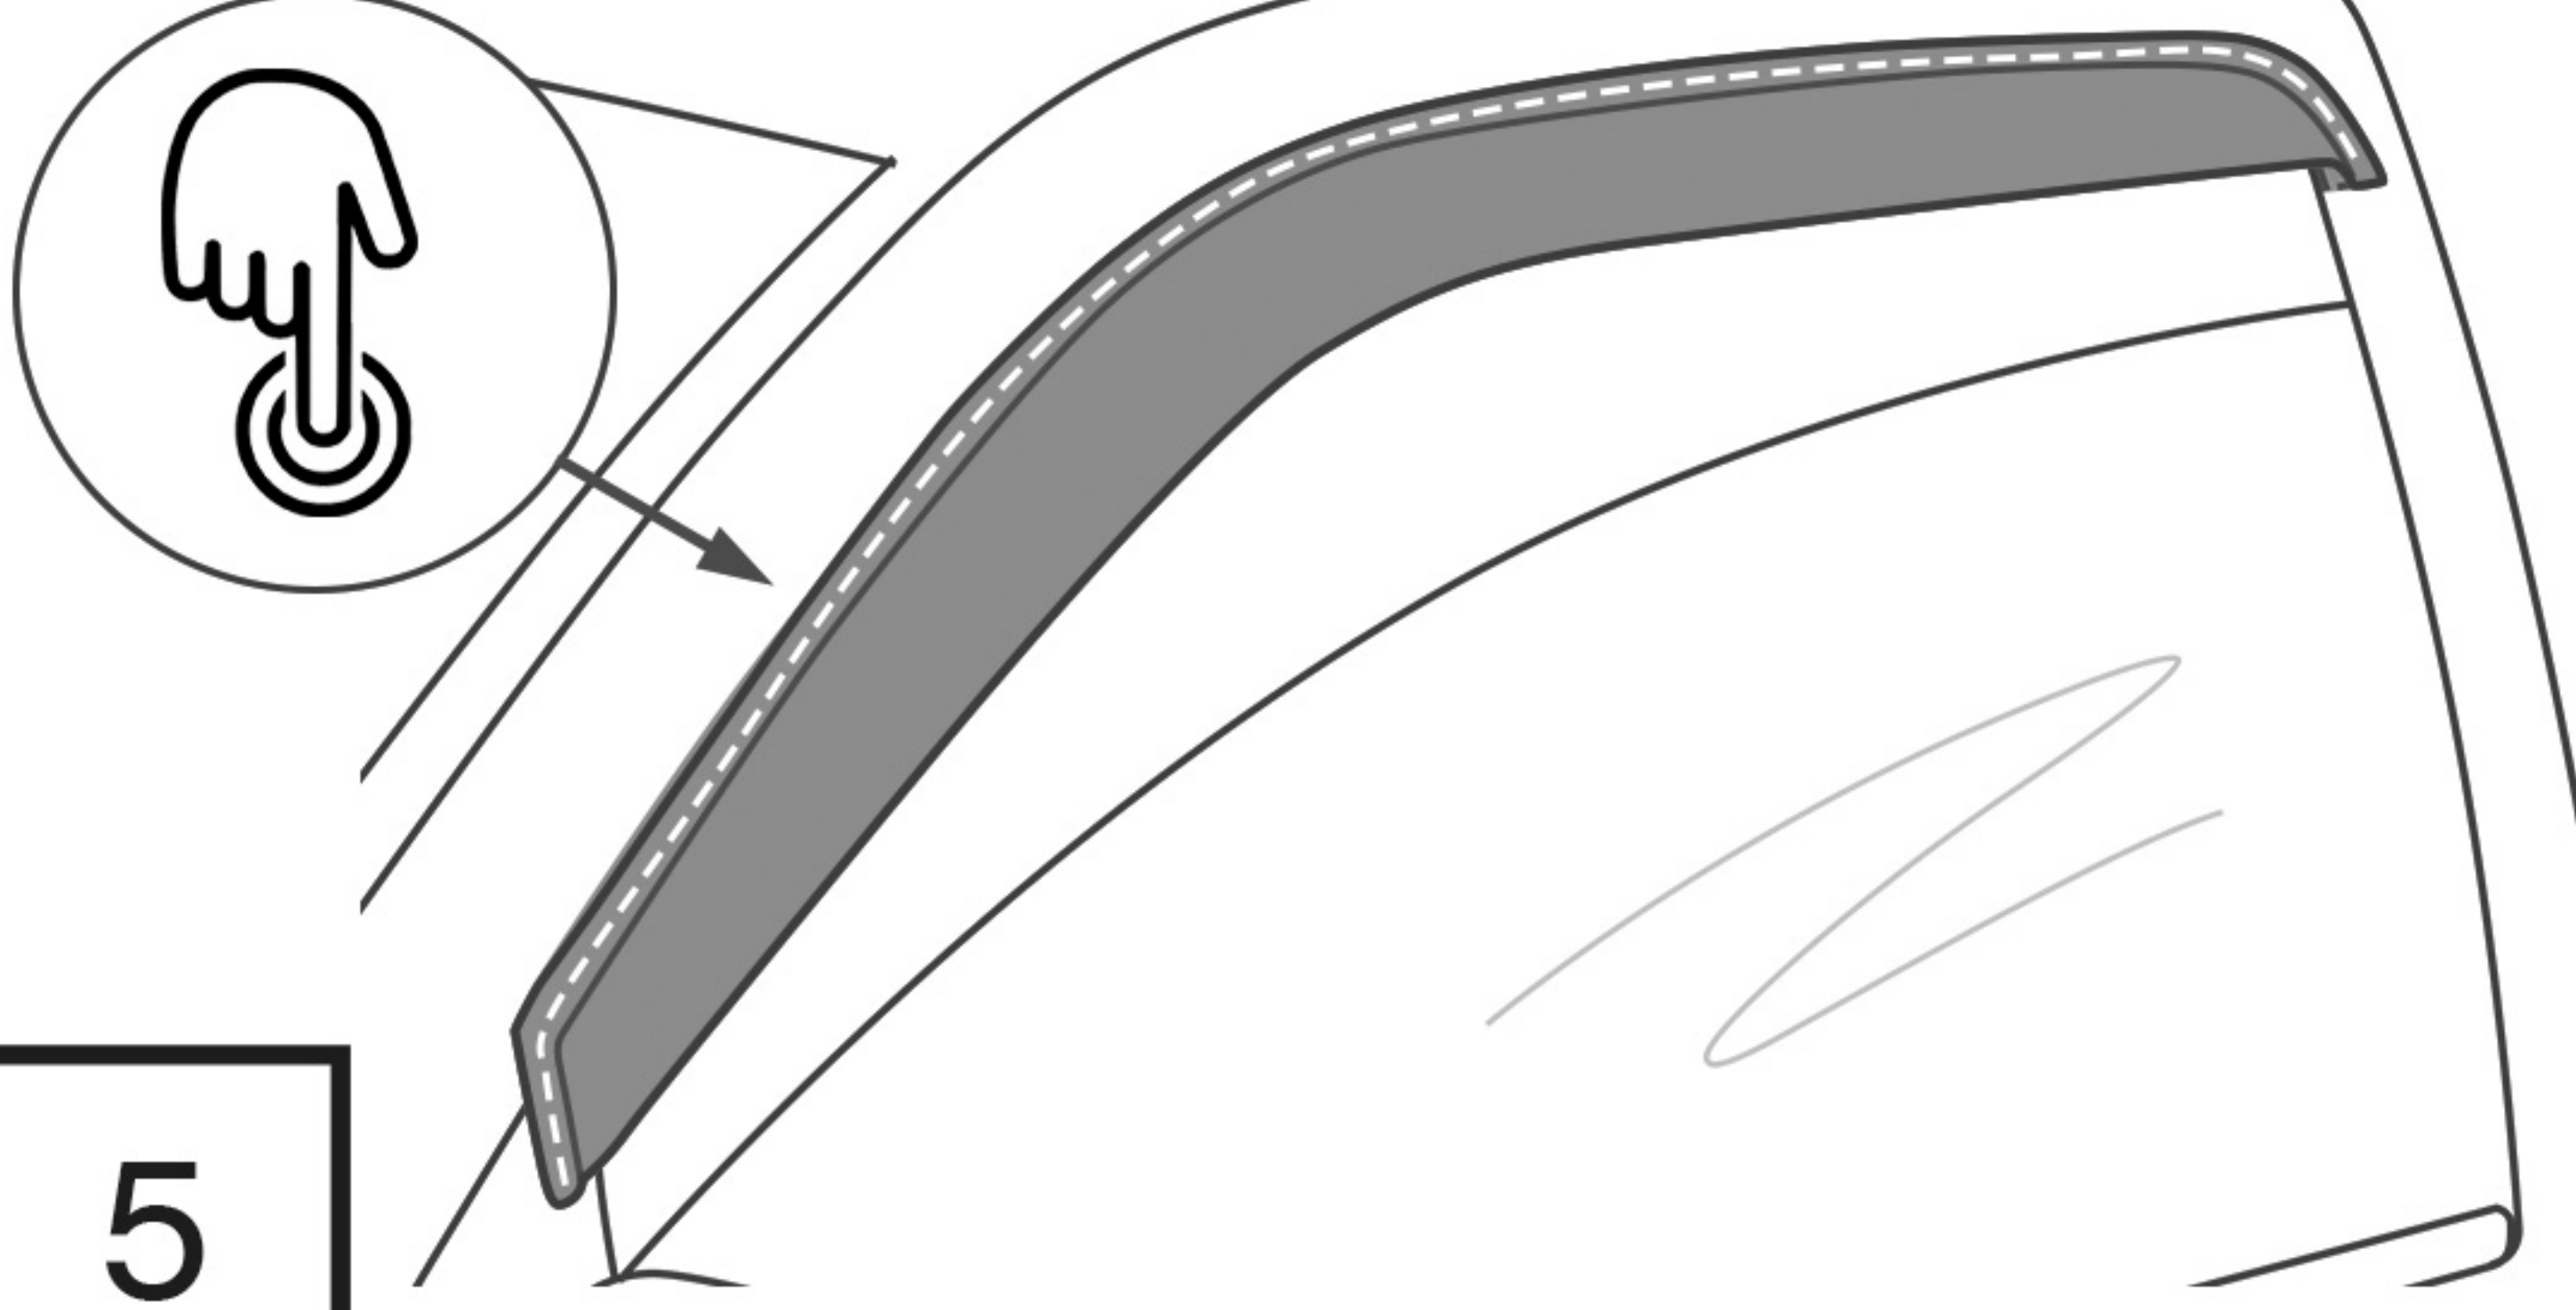


5

Repeat these installation steps for the passenger side front wind deflector.



# 4-Piece Kit

**NOTE:** Pictures below may differ slightly from actual application.

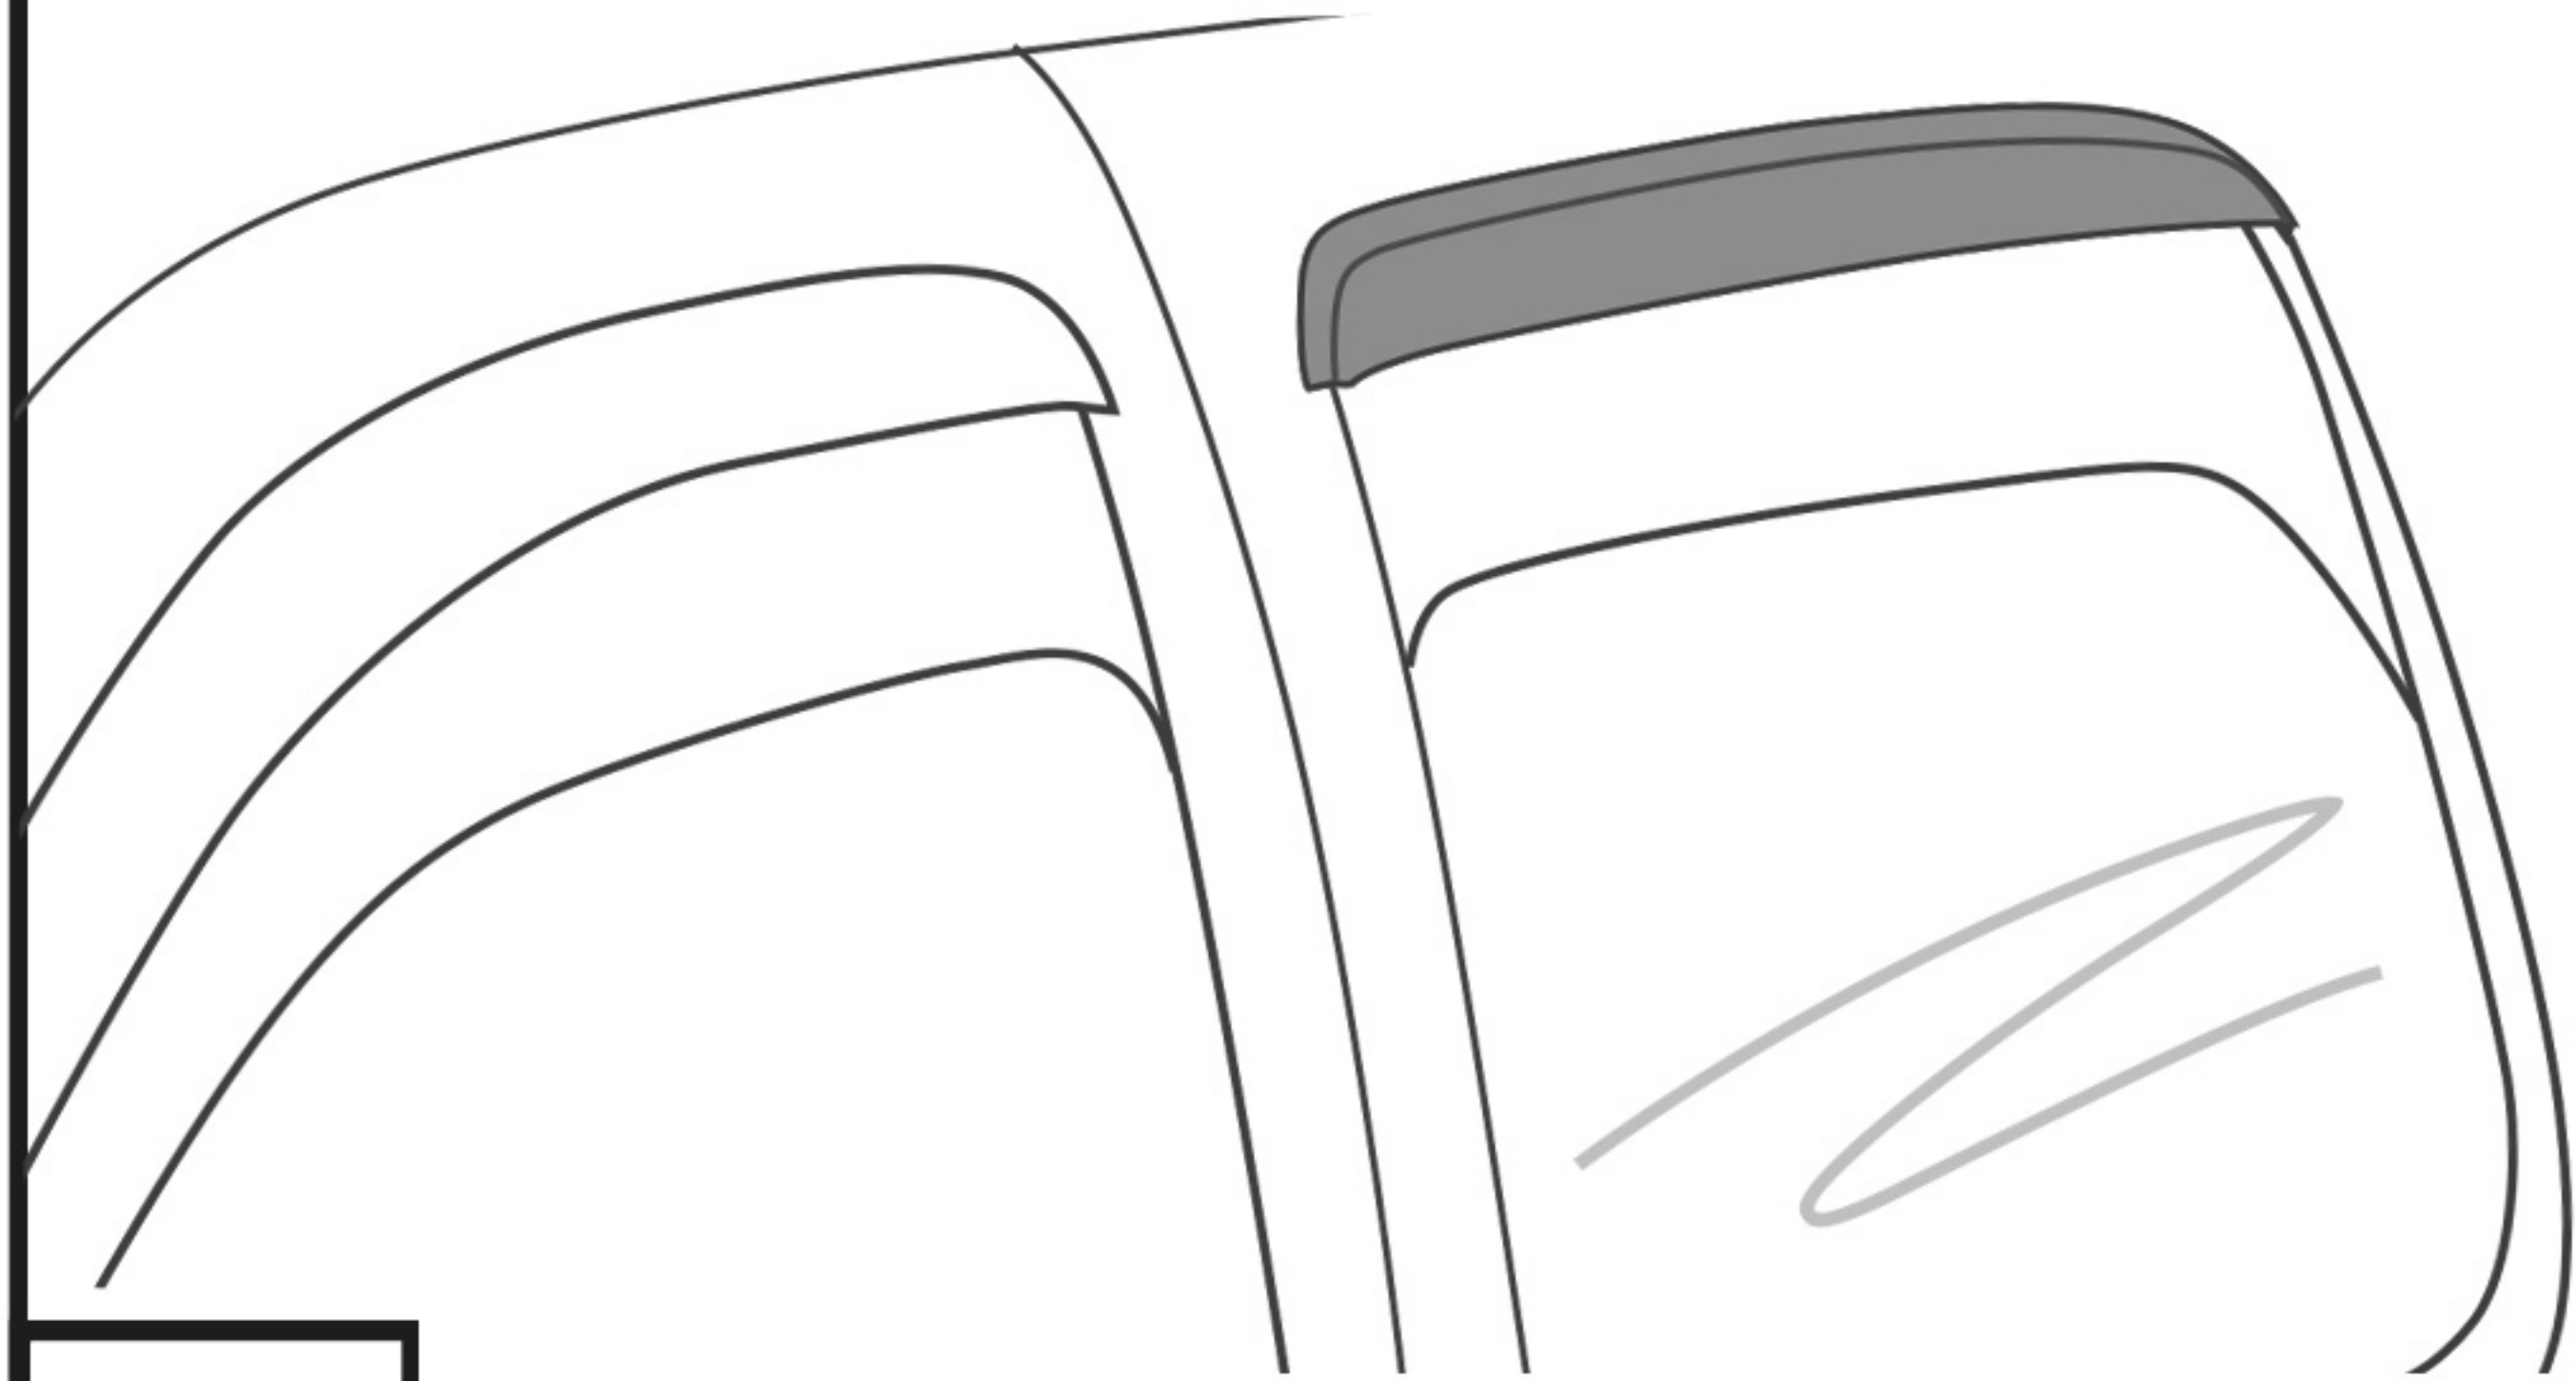

Use Scotch Brite pad to scrub the rubber window trim. Wipe the rubber window trim/ mirror cap with alcohol pad to dissolve remaining grease.

Remove the adhesive tape backing from both ends of the tape. Peel back 2” of the adhesive tape backing from the front and rear flanges.

Place the driver side wind deflector on the previously cleaned area and make sure it is properly aligned. Stick the ends of the tape to the vehicle applying pressure. Peel off the remaining backing from the adhesive tape.

Secure your wind deflector by applying pressure along its entire length.

6

Repeat **Steps 1-5** for passenger side.

## Washing and Care

- Use only mild soap for cleaning. Wipe dry using a clean cloth.

## Congratulations!

[View other rain guards and wind deflectors made by GTS on our website.](#)