CABIN AIR FILTER IDENTIFICATION / INSTALLATION


IMPORTS

AFC1153


Mercedes-Benz C36, C43, C220, C230, C280, CLK55, CLK320, CLK430, SLK32 AMG, SLK230, SLK320; Chrysler Crossfire




- OE: 2028300018, 2108300818 2004-08 Chrysler Crossfire Fits: 1995-97 Mercedes-Benz C36 1998-2000 Mercedes-Benz C43 1994-96 Mercedes-Benz C220 1997-2000 Mercedes-Benz C230 1994-2000 Mercedes-Benz C280 2001-02 Mercedes-Benz CLK55 1998-2002 Mercedes-Benz CLK320 1999-2003 Mercedes-Benz CLK430 2002-04 Mercedes-Benz SLK32 AMG 1998-2004 Mercedes-Benz SLK230 2001-04 Mercedes-Benz SLK320 Size: 10 1/2 x (6 1/4 to 8 3/8) x 2 1/16 (266.7 x (158.8 to 212.7) x 52.4)
- A.Gskt.: [1] Attached

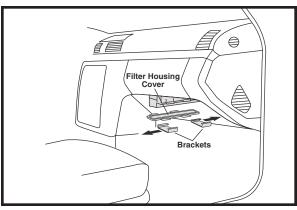

- 4. Locate sliding bracket on filter housing cover.
- 5. Slide one bracket toward seat and one bracket toward front of vehicle to remove both housing cover and brackets.

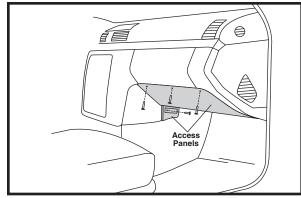

- 1. Open passenger side door.
- 2. Remove screws on access panels located under glove compartment.
- 3. Remove access panels.

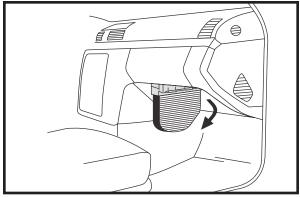

- 6. Rotate lower, back of filter, then pull down to remove.
- 7. Replace filter and reassemble.

Notice: The information provided is based on the latest authoritative information available at press time. However, due to manufacturers' changes, and year and model variations, Hastings Premium Filters cannot be responsible for misapplications and instruction errors.

