
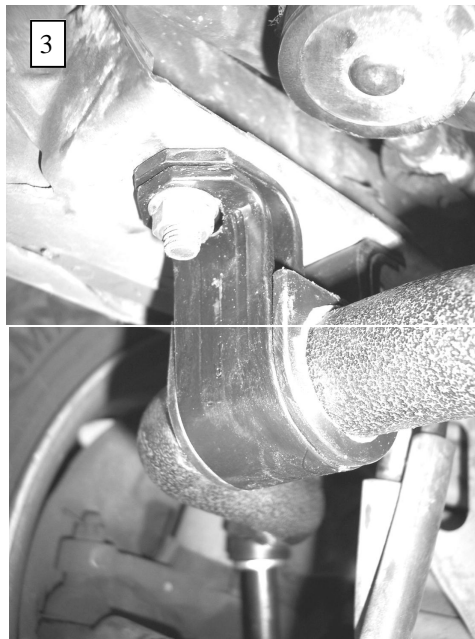


Hellwig PRODUCTS

INSTALLATION INSTRUCTIONS FRONT STABILIZER BAR 79-93 FORD MUSTANG V8 MODELS ONLY

Thank you for purchasing a quality Hellwig Product.

PLEASE READ THIS INSTRUCTION SHEET COMPLETELY BEFORE STARTING YOUR INSTALLATION

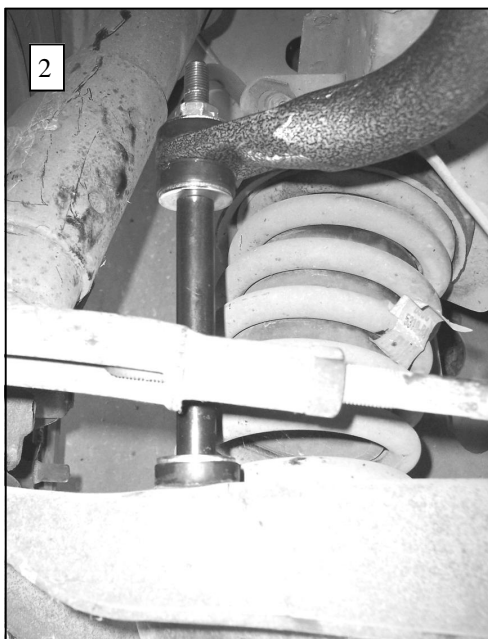

Hellwig PRODUCTS

TORQUE TABLE

BOLT SIZE: 3/8" = 20-30 ft. lbs. – 7/16" = 35-45 ft. lbs. – 1/2" = 50-70 ft. lbs. – 9/16" = 70-90 ft. lbs.

SAFETY: BEFORE STARTING YOUR INSTALLATION, BE SURE TO SET PARKING BRAKE AND CHOCK TIRES.

NOTE: TO EASE INSTALLATION AND TO PROPERLY ADJUST THE BAR, THE WEIGHT OF THE VEHICLE MUST BE ON THE SUSPENSION, AS IF DRIVING DOWN THE ROAD. DO NOT RAISE VEHICLE BY THE FRAME.

NOTE: THIS SWAY BAR IS DESIGNED TO REPLACE THE FACTORY MOUNTED SWAY BAR

1. Remove the factory mounted front sway bar. Save the bolts for the u-plates to re-attach the new u-plates to the frame.
2. Lubricate and install the D-shaped poly bushings on the sway bar in the position that they will be mounted on the vehicles frame. Attach U-plates to bushings as shown in PHOTO THREE (3).
3. Raise the sway bar up to the frame and attach the U-plates using the factory mounting hardware as shown in PHOTO THREE (3). Start the mounting bolts but do not tighten. Leave loose at this time to allow for adjustment later. SEE PHOTO ONE (1).
4. Rotate arms of sway bar up and down to check for clearance to engine and frame mounted components.
5. Assemble the end link assemblies as per diagram. Install the end links on the lower control arms of the vehicle.
6. Raise the arms of the sway bar over the end links. Install the end links on the arms of the sway bar. Tighten until the poly bushings start to bulge. Do not over tighten or damage can result to the poly bushings. SEE PHOTO TWO (2).
7. With the sway bar centered and the end links as straight up and down as possible—torque the frame mounting bolts to specifications.
8. Bounce the vehicle and check for clearance on all under carriage components. Make sure that all mounting are securely tightened.
9. After one week of driving recheck your installation readjust if necessary . Recheck your installation on a regular basis thereafter.