

# TERMINATOR™ EFI

PN 20-152

## Terminator Ford Transmission Kickdown Bracket Kit

1. Install adjusting screw retaining clip on kickdown lever (Figure 1).
2. Insert kickdown screw in retaining clip (Figure 1).
3. Remove the lock out screw from the throttle lever (Figure 2).
4. Install the spring perch bracket using the existing baseplate screw/stud, as well as adding the new 1/4-20 x 5/8 screw and lockwasher (Figure 1).
5. Install the spring as shown in Figure 1.
6. Adjust screw for desired kickdown operation.

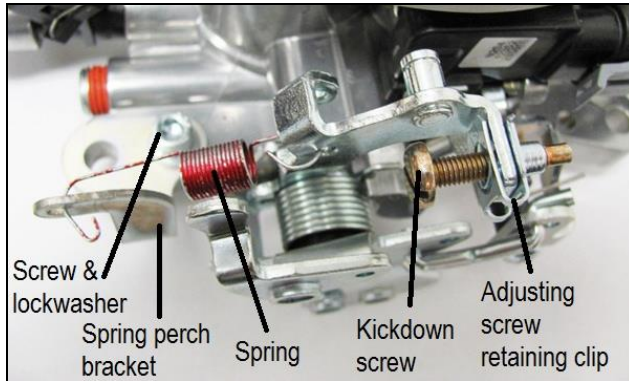


Figure 1



Figure 2