

Holley® iNTECH

2009-2013 Chevy Corvette C6 ZR1 V8, 6.2L (LS9)
Intech Carbon Fiber Cover

223-09-1

Installation Instructions



Thank you for making HOLLEY INTECH COLD AIR INTAKES your choice in a high-performance air intake system. Extensive dyno/track testing has enabled HOLLEY to offer the most advanced design in sealed air intake systems. HOLLEY INTECH's patent pending interface allows for an easy and seamless installation, moreover, results will show additional horsepower, reduced air intake temperature and improved performance. Proper installation and maintenance will ensure long life and maximum performance from your HOLLEY INTECH COLD AIR INTAKE.

BEFORE STARTING:

Ensure that the engine is cold and has not been run for a minimum of 2 hours prior to install.

INCLUDED HARDWARE:

P/N	Qty.	Description
223-09CF	1	Carbon Fiber Cover
505R98	2	Screw, M6x1x10mm, Blk-Ox SS, Btn-Hd Hex
546R23	2	Washer, Flat 1/4", Blk-Ox SS
99R10460	2	Decal, Intech 5" x 1.5", Die Cut Special

INSTALLATION:

1. If existing ABS cover is installed, remove the (x2) M6 screws and (x2) flat washers (**Figure 1**).

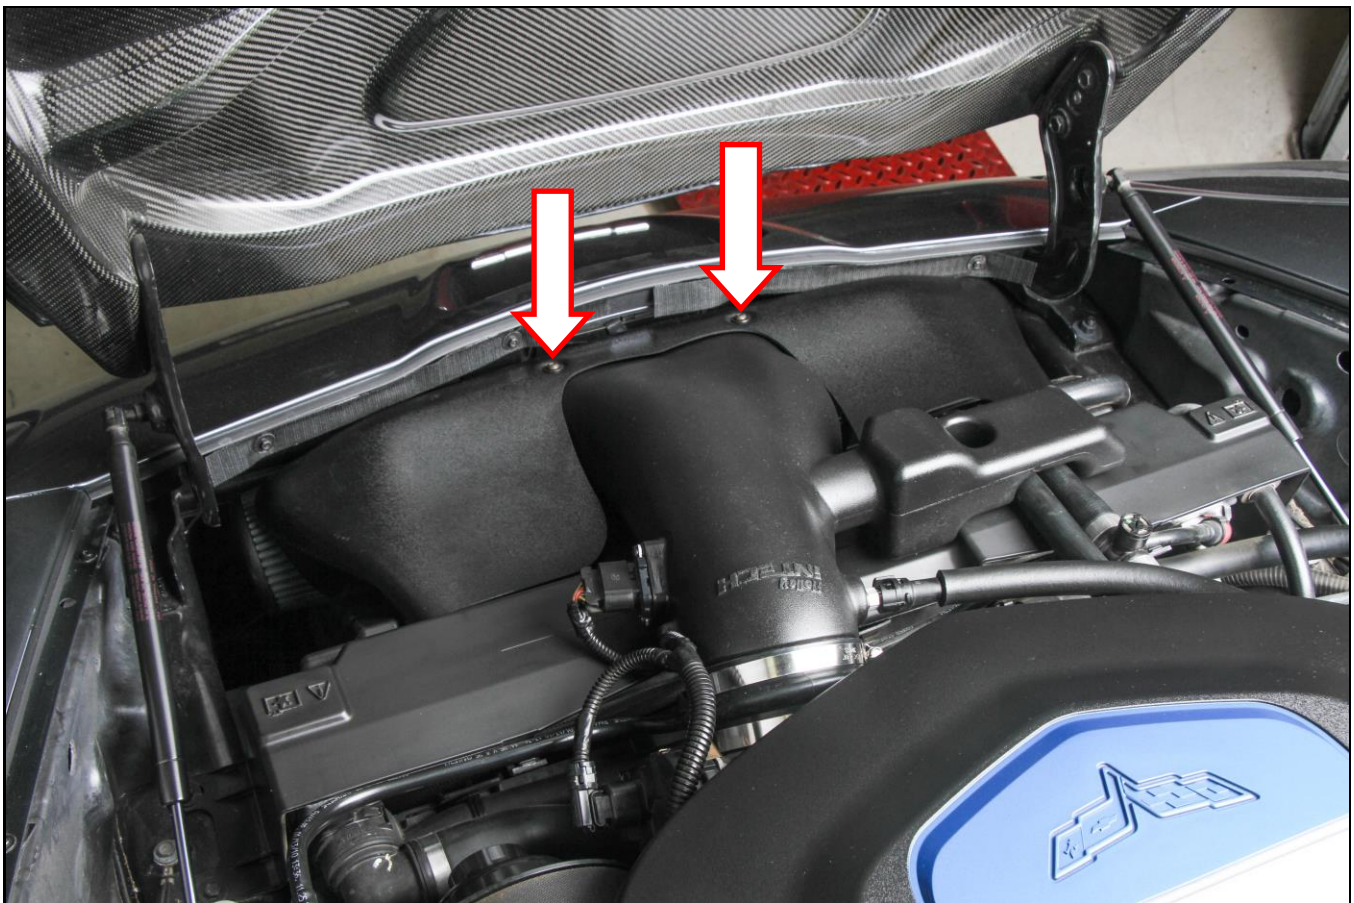


Figure 1

2. Carefully lower the iNTECH carbon fiber cover into the location shown (**Figure 2**).
3. Align the holes with the cover and the intake tube and secure using either the previously removed hardware or use the (x2) provided M6 screws and (x2) washers to secure the cover in place.



Figure 2

*****NOTE: Be careful not to over tighten the screws.**

*****NOTE: Use only a mild detergent and a microfiber cloth if cleaning the cover is necessary**

*****NOTE: After 150 miles, re-check and tighten all nuts, bolts, clamps and fittings.**

Learn more about performance air intake systems we have.