



HOOKER UNIVERSAL SIDEMOUNT MUFFLER (CHROME) P/N 21037HKR

Thank you for making HOOKER your choice in a high-performance muffler. This sidemount muffler will fit virtually any vehicle with fenderwell headers (with 3" collector rings) and bolt directly to the header collectors. This muffler is designed for maximum performance and mild, but authoritative exhaust tone. These sidemount mufflers complete your exhaust system in the traditional Hooker style of quality and dependability.

CAUTION! Sidepipes get very hot. Avoid all contact with sidepipes for one hour after operating vehicle.

INSTALLATION PROCEDURE: PLEASE READ CAREFULLY

1. Bolt mufflers to the header collectors, using the bolts and gaskets provided.
2. Attach the mounting hardware to the sidemount mufflers, as shown in **Figure A**.
3. Level the sidemounts with the body line. Determine the location of the mounting hangers best suited to your vehicle. Hangers may need to be bent. See **Figures B and C**.
4. Mark the desired hole location on the hangers. Remove the hangers from the sidemounts and drill 3/8" holes at the marks.
5. Attach the hangers to the sidemount and mark the mounting hole locations on the inboard side of the body panels.
6. Using a center punch, make holes in the body at the marks. **NOTE:** Self-tapping screws will hold better if the holes are punched, rather than drilled.
7. Attach the hangers to the body using the furnished 3/8" sheet metal screws.
8. Start the engine and check for leaks.

When finished, give your car a test drive checking carefully for any new noises. After several days driving, retighten all the bolts.

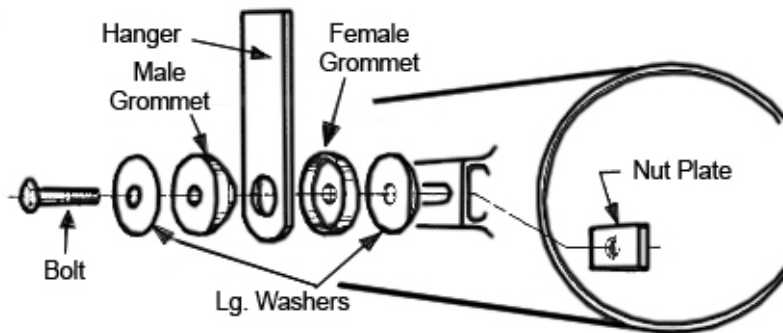


Figure A

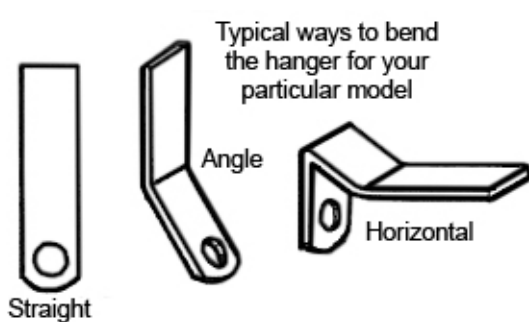


Figure B

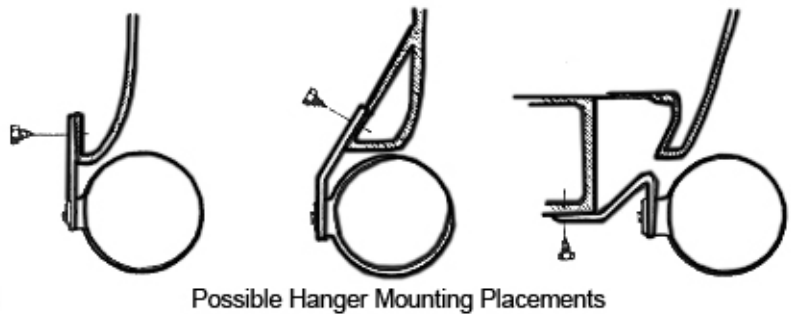


Figure C