


## #42145

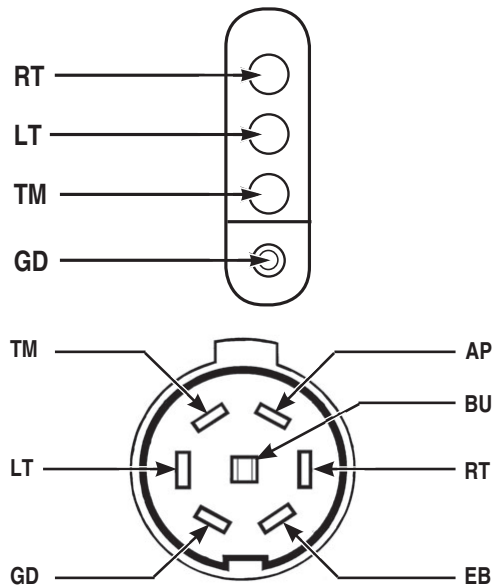

GD = Ground

LT = Left turn

AP = Auxiliary

EB = Electric brakes

BU = Reverse

TM = Tail

RT = Right turn

1. This part will work only on vehicles that have a factory 7-way connector.
2. Remove plug from the back of the factory 7-way connector by pushing in on locking tabs.
3. Either mount the Hopkins® Multi-Tow® to the factory mounting bracket or replace the factory mounting bracket with the mounting bracket supplied.
4. Apply a small amount of grease to all electrical connections to help prevent corrosion.
5. Plug the Hopkins® Multi-Tow® into the mating vehicle plug. Be sure the connectors are fully inserted with locking tabs in place.
6. Test all functions with engine running to ensure proper operation.

**NOTE:** Locate wires and pin location by function only. Color coding is not standard among all manufacturers.

### TIPS:

Grease applied to the trailer wiring terminals on a regular basis will help prevent corrosion.

A heavy duty flasher may be required to eliminate rapid flashing.

Always unplug boat trailer connector before backing trailer into the water.