


# #47205

1. Determine a suitable mounting point on the tow vehicle.
2. Locate a grounding point and clean dirt and rustproofing from the area. Ground the white wire.
3. Connect remaining wires. See diagram enclosed.

**NOTE:** Locate wires on vehicle by function only. Color coding is not standard among all manufacturers.

## TIPS:

- Grease applied to the trailer wiring terminals on a regular basis will help prevent corrosion.
- A heavy duty flasher may be required to eliminate rapid flashing.
- Always unplug boat trailer connector before backing trailer into the water.

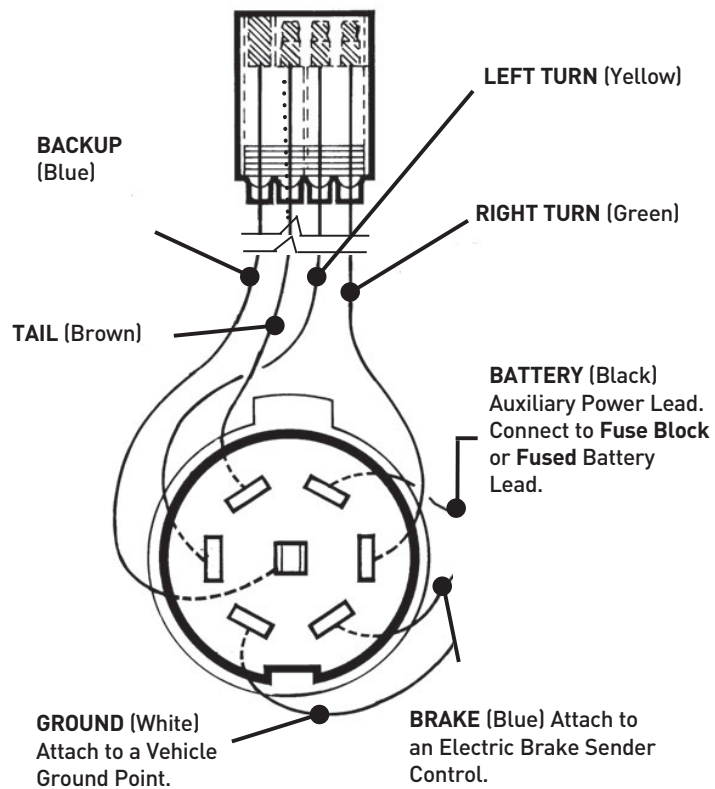

VIEW LOOKING AT FRONT OF PLUG

