


#48430

WIRE IDENTIFICATION

White Attach to Ground (GD)
Brown Tail / Park (TM)
Yellow Left Turn (LT)
Green Right Turn (RT)
Red Auxiliary (AX)
Blue Electric Brake (S)

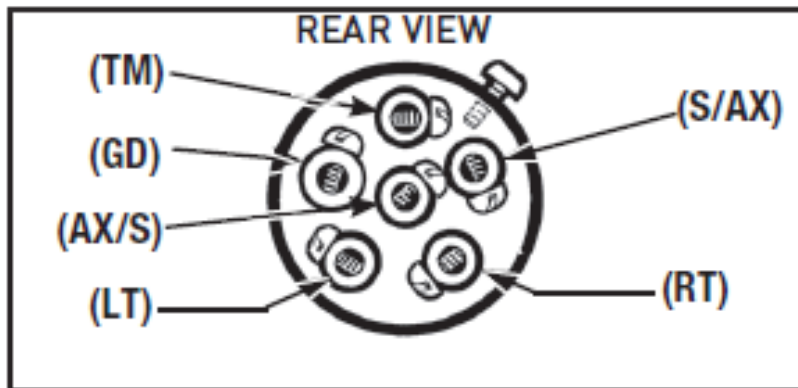

1. Loosen the set screw on the connector and remove the socket from the housing. Route wiring through socket housing. Strip wires 1/4" and tightly secure them to socket terminals. Align socket keyway with housing key and insert socket into housing. Tighten set screws.

NOTE:

Locate wires on vehicle by function only. Color coding is not standard with all manufacturers.