


1. Loosen set screw (A) on the plug and remove housing. Route wires through housing.
2. Strip 1/4" from wire ends and tightly secure them to the plug terminals. Attach wires to the corresponding trailer function wires. NOTE: It is important to attach wires to plug in the same positions as found on the car end socket.
3. Align plug keyway (B) with housing key and insert plug into housing. Tighten set screws.

LOCATE WIRES BY FUNCTION ONLY

- White - ground (GD)
- Yellow - left turn (LT)
- Green - right turn (RT)
- Brown - taillight (TM)

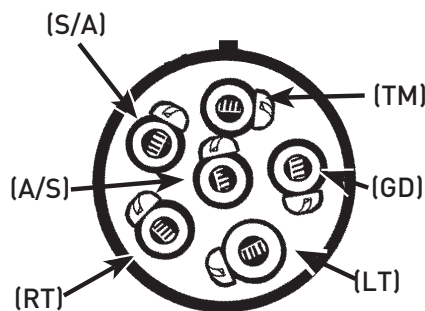

WIRE IDENTIFICATION

- (GD) = Ground
- (LT) = Left Turn
- (TM) = Taillight
- (A) = Auxiliary
- (RT) = Right Turn
- (S) = Electric Brake