


# #56306

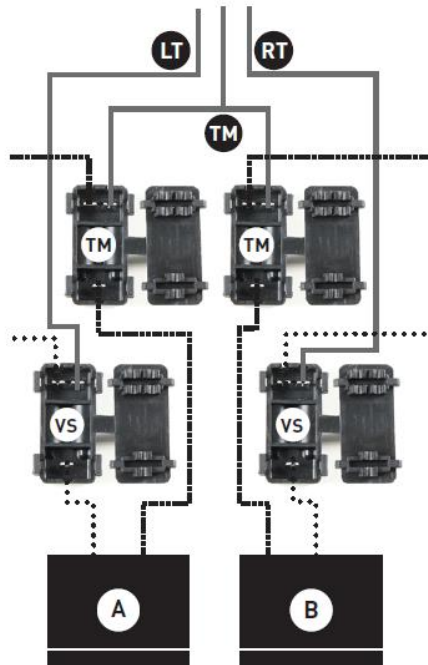

1. Locate brake and taillight in rear of towed vehicle.
2. Cut stop and taillight wires behind light assembly.
3. Insert wires into diode as shown above.
4. Insert grease into each diode block and snap the lid closed.

TIP: Apply grease to all electrical connections to help prevent corrosion.

- TM = Tail, brown wire  
LT = Left Turn, yellow wire  
RT = Right Turn, green wire  
VS = Vehicle Stop  
A = Driver side stop light assembly  
B = Passenger side stop light assembly