
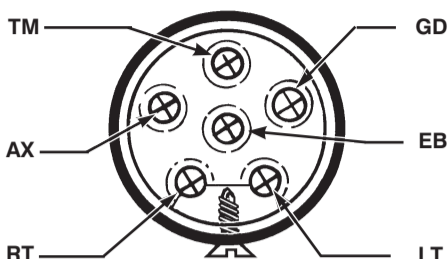


## Trailer Hitch Wiring & Electrical

**#40965**

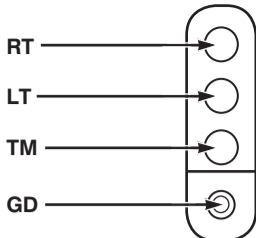

### WIRE IDENTIFICATION

### IDENTIFICACIÓN DE LOS CABLES

**GD** = Ground / Tierra

**LT** = Left turn / Direccional Izquierda

**AX** = Auxiliary / Auxiliar

**EB** = Electric brakes / Eléctrico del Freno

**TM** = Tail / Luces Traseras

**RT** = Right turn / Direccional Derecha

1. This part will work only on vehicles that have a factory 7-way connector.
2. Remove plug from the back of the factory 7-way connector by pushing in on locking tabs.
3. Either mount the Multi-Tow® to the factory mounting bracket or replace the factory mounting bracket with the mounting bracket supplied.
4. Apply a small amount of grease to all electrical connections to help prevent corrosion.
5. Plug the Multi-Tow® into the mating vehicle plug. Be sure the connectors are fully inserted with locking tabs in place.
6. Test all functions with engine running to ensure proper operation.

#### TIPS:

- Grease applied to the trailer wiring terminals on a regular basis will help prevent corrosion.
- A heavy duty flasher may be required to eliminate rapid flashing.
- Always unplug boat trailer connector before backing trailer into the water.

\* If your Nissan vehicle did not come with a factory 7-way, you must install 2 relays (#2523079945 and #2523079964), purchased from your local Nissan dealer.