
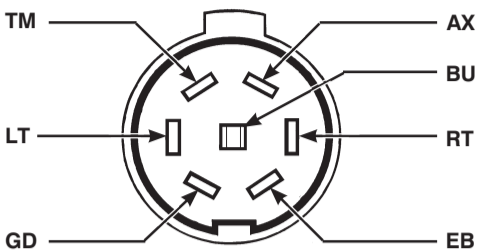


Trailer Hitch Wiring & Electrical

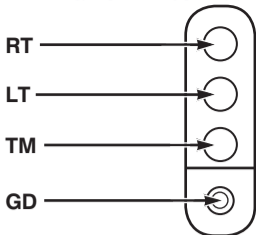

WIRE IDENTIFICATION

IDENTIFICACIÓN DE LOS CABLES

GD = Ground / Tierra

LT = Left turn / Direccional Izquierda

AX = Auxiliary / Auxiliar

EB = Electric brakes / Eléctrico del Freno

TM = Tail / Luces Traseras

RT = Right turn / Direccional Derecha

BU = Back up / Reversa

TIPS:

- Grease applied to the trailer wiring terminals on a regular basis will help prevent corrosion.
- A heavy duty flasher may be required to eliminate rapid flashing.
- Always unplug boat trailer connector before backing trailer into the water.

* If your Nissan vehicle did not come with a factory 7-way, you must install 2 relays (#2523079945 and #2523079964), purchased from your local Nissan dealer.