
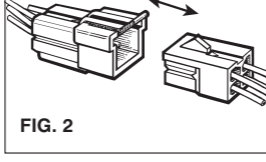


#47735

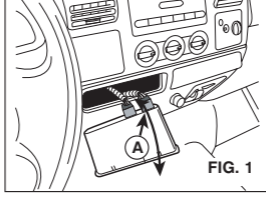

1. Remove storage compartment to the left of ash tray.
2. Remove connector (Fig. 1 / A) from back of storage compartment.
3. Plug the connector into the vehicle connector (Fig. 2).
4. Plug mating end of the connector into the brake control.
5. Test all functions.

NOTE: Wire to brake control by function only. Color coding is not standard among all manufacturers. To ensure proper installation, read brake control instructions thoroughly.

-
1. Mueva el compartimiento para almacenaje hacia la izquierda del cenicero.
 2. Quite el conector de atras del compartimiento de almacenaje.
 3. Enchufe el conector dentro del conector del vehículo (Fig. 2).
 4. Conecte el lado que corresponda del conector en el control de frenos.
 5. Pruebe todas las funciones.

NOTA: Instale el control de frenos por función solamente. El código de color no es igual entre todos los fabricantes. Para asegurar una instalación correcta, lea completamente las instrucciones para el control de frenos.