


2236 Sway Bar Installation Instructions

Thank you for your purchase of this Hotchkis Performance product. Your stabilizer bar set was designed with the performance and durability you've come to expect from Hotchkis Performance.

Special Note:

We've noticed that our front sway bar only works with certain steering idler arms. The problem is that some aftermarket idler arms have larger body diameters. This causes clearance issues. The original GM idler arm clears just fine. If you need to replace your idler arm make sure the ball joint body diameter is 1.75" and the body height is 1.5". See photos below.


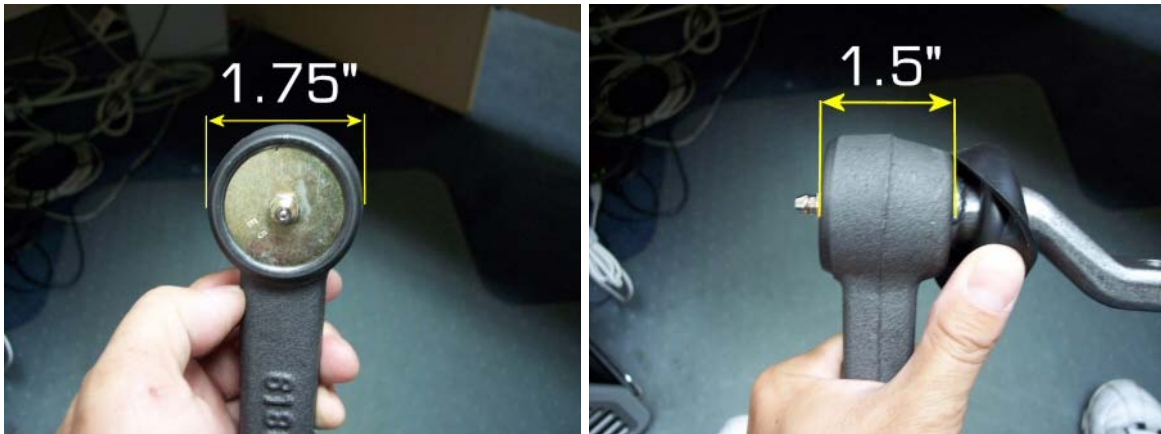


The replacement idler arm can be found from Classic Industries part # 18753



Front Bar Installation:

- 1F. Look at the current bar installation and note the position of the anti-sway bar.
- 2F. Loosen, but do not remove the front bushing bolts.


3F. Remove the endlinks from the sway bar and lower control arms.

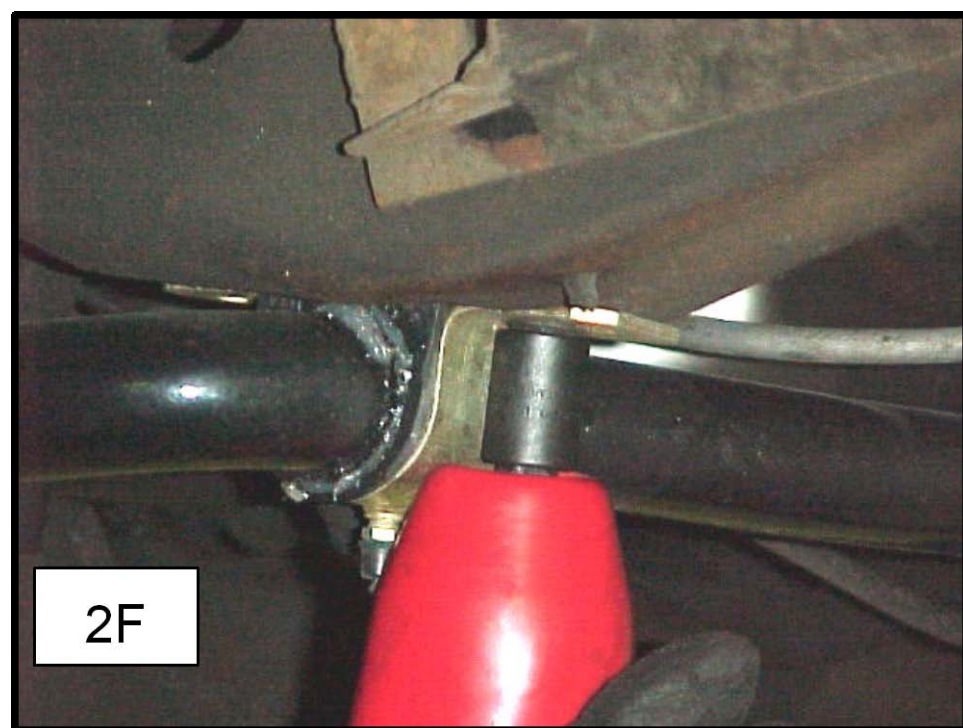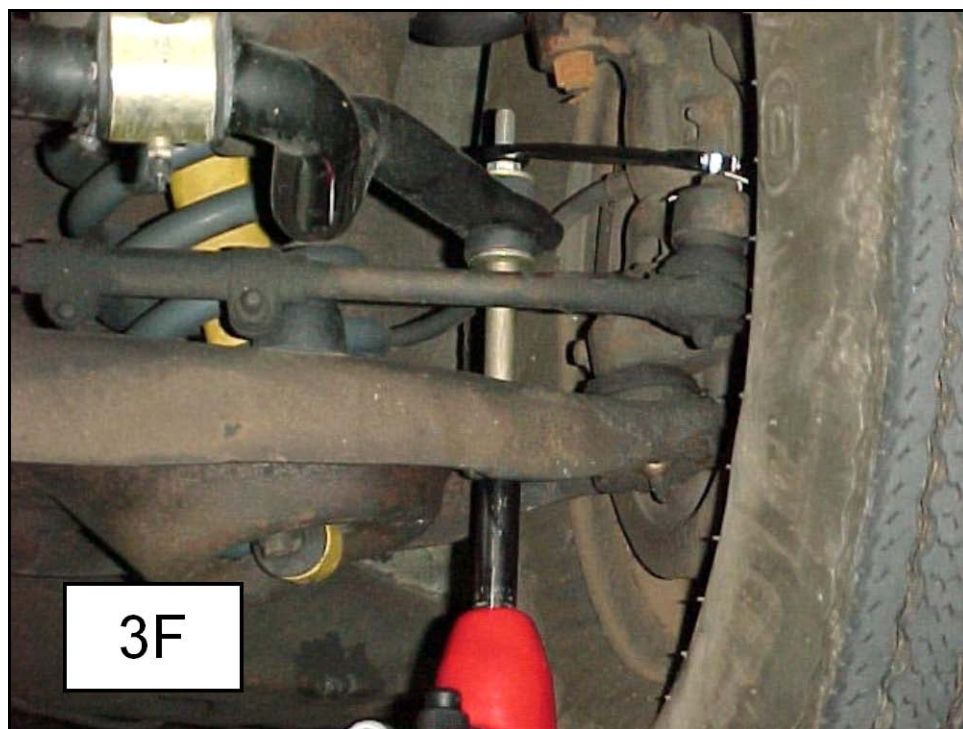

- 4F. Take the bolts out of the frame brackets and remove the stock sway bar from the vehicle.
- 5F. Using the included white silicon grease, lube the inside of the new 1 3/8" front bushings.
NOTE: the grease can be cleaned up with WD-40
- 6F. Install the bushing on the new Hotchkis bar. Make sure the split on the bushing faces the front when the bar is installed in the vehicle. Look at the placement of the original stock bushings on the stock bar for guidance.

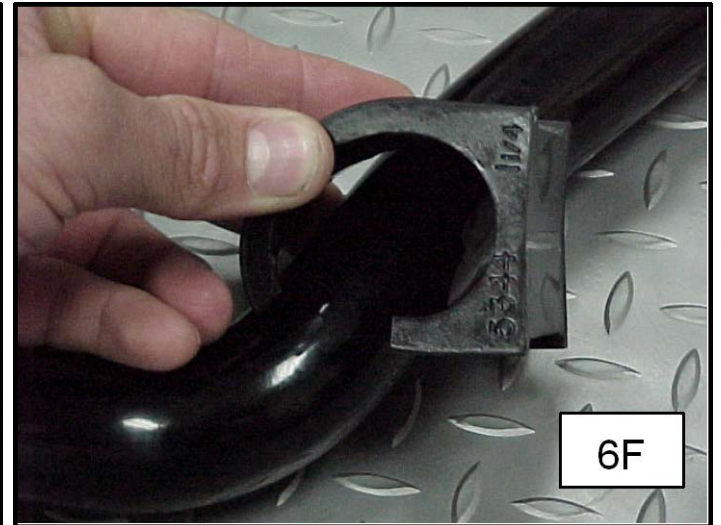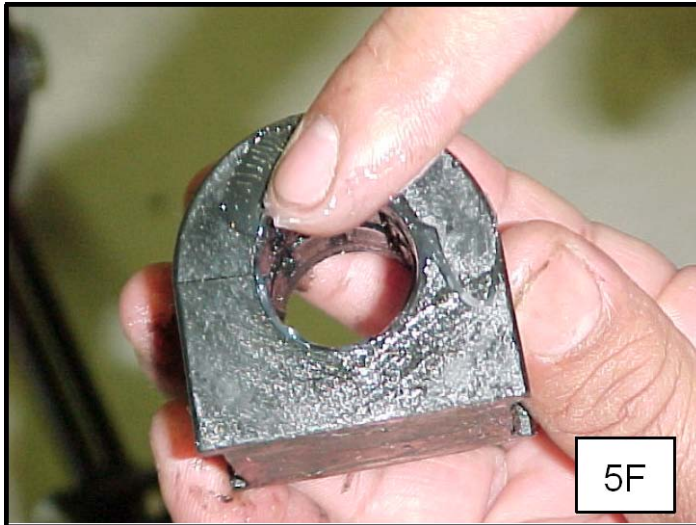

- 7F. Place the greasable bracket over top the bushing.

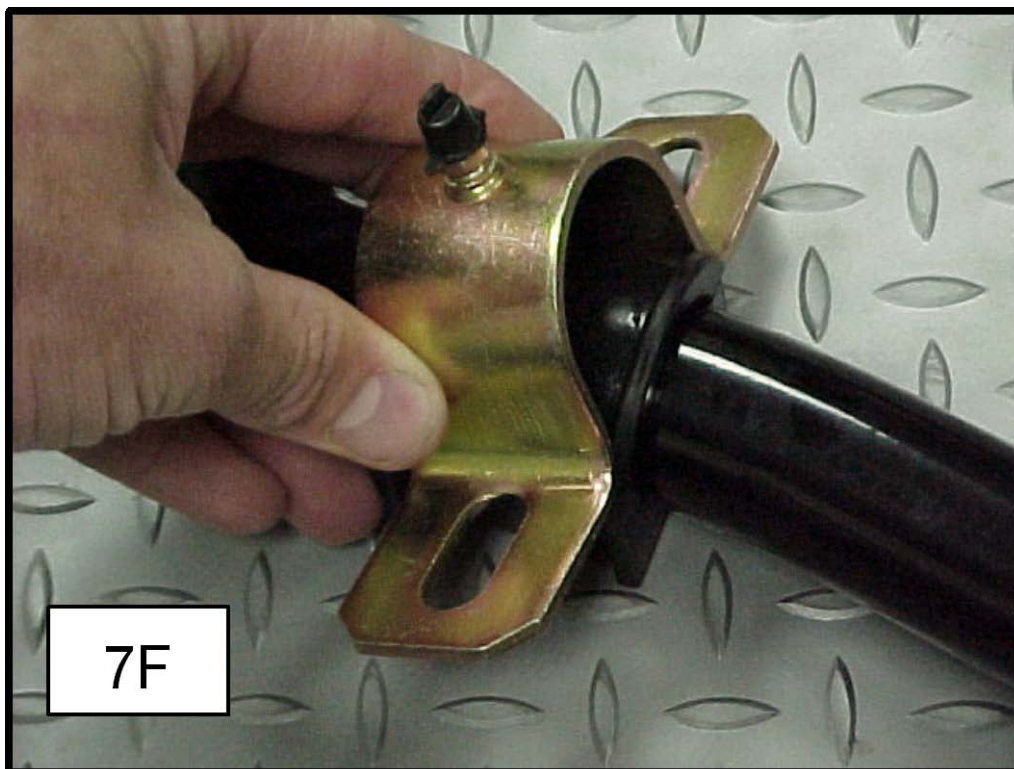


- 8F. Put the new bar assembly into the vehicle and start the frame bolts. Do not tighten the frame bolts completely, only start enough threads to hold the bar in place while your work on the endlinks
- 9F. Install the new endlinks and tighten them till the bushings are squeezed just enough that their diameter is just larger than the supporting washer.
- 10F. Tighten the frame bracket bolts.

Rear Bar Installation:


- 1R. Jack up the vehicle and properly support with jack stands or lift jacks. Make sure the rear end is supported with the vehicle's load on the leaf springs. This is to ensure you install the rear bar in the proper position.
- 2R. Take the bushings and grease the inner surface with the included white silicon grease.



- 3R. Install the bushings on the bar. (5) Place the bracket over top of the bushing. (6)

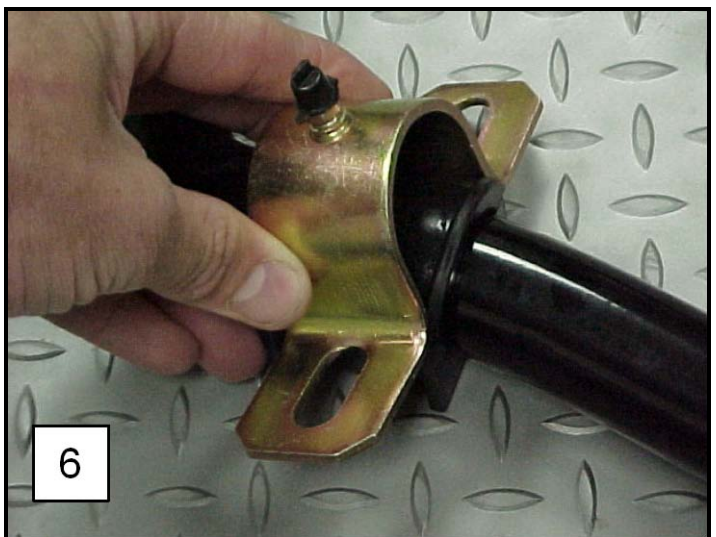


- 4R. Take the sway bar assembly and hold it up under the rear end of the car. The arms will point forward and the dog bone end links point up. Check for exhaust clearance in this area. You may have to have the exhaust pipes re-bent to provide clearance for the new sway bar assembly. Any competent exhaust shop can handle this modification easily.
- 5R. After you determine there's enough clearance for the bar, note the approximate location of the sway bar axle bushing.
- 6R. Take a screwdriver and carefully pry up the brake line to allow the U-Bolt to drop down over the axle. (10)

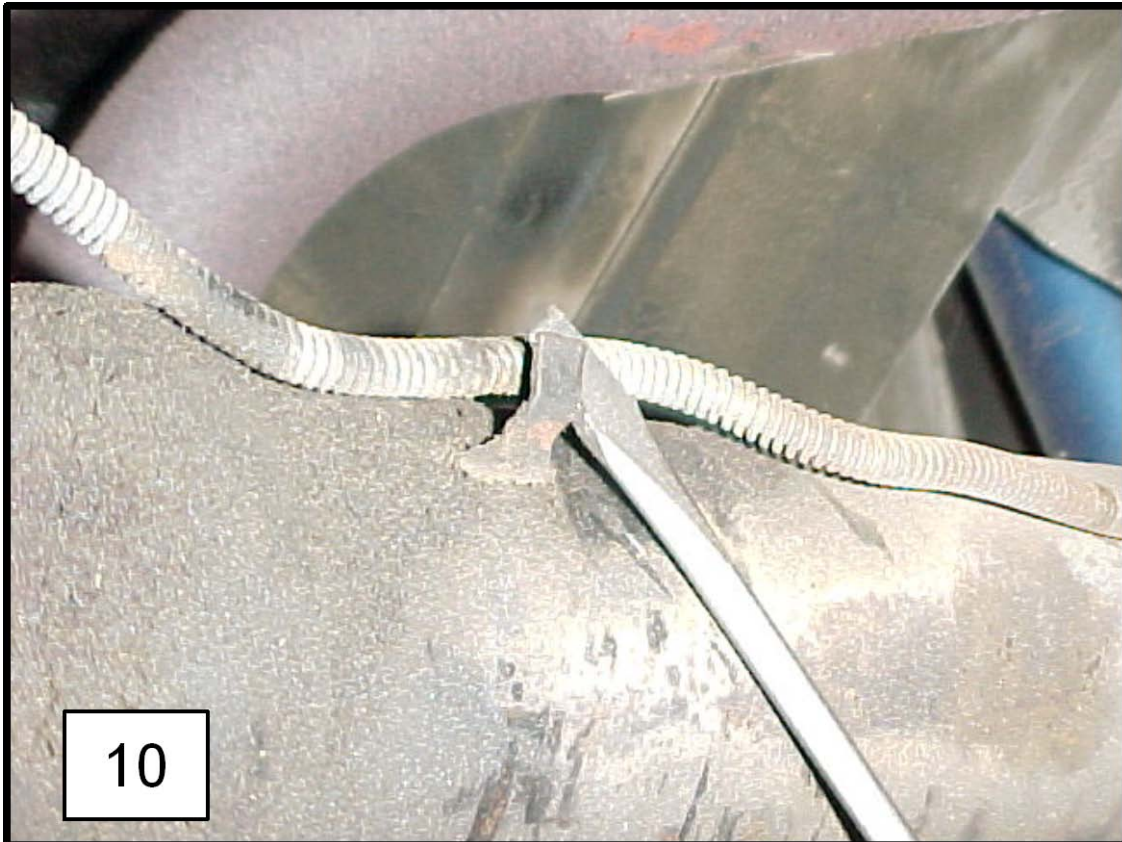

- 7R. Install the U-Bolts on the axle and slip the axle bracket over the U-Bolt on the bottom side of the axle. Use masking or duct tape to secure them. Place the sway bar assembly under the axle and slip the U-bolt legs through the sway bar brackets. Place washers and nylock nuts on the U-Bolt. Snugly fasten the nylock nuts a bit, but do not fully tighten at this time.

11

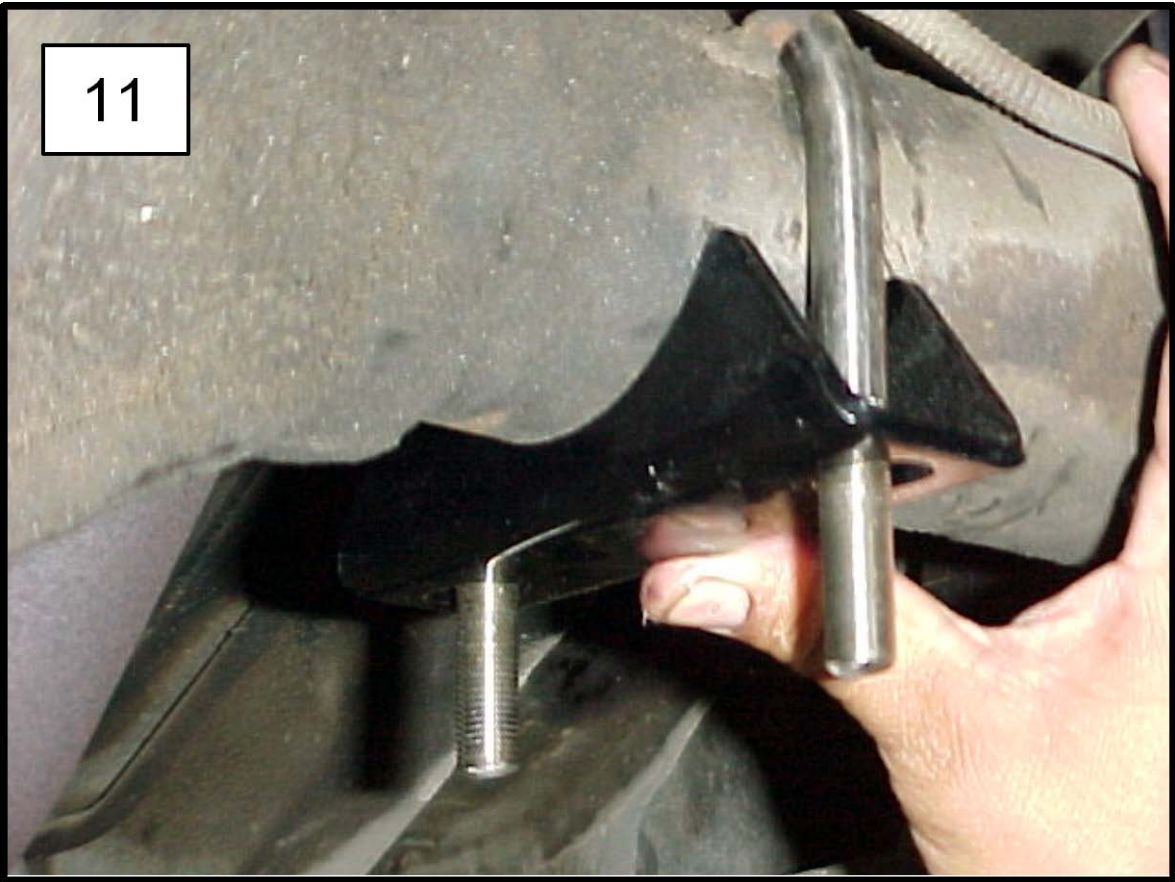

8R *Undo Frame Rail Lines*

We are going to be mounting the dog bone endlinks to the frame rails. However, we first need to access the side of the frame rails. We will need to undo the fuel/brake lines that are mounted to the rails.

The driver side has a brake line and vent line that is mounted to the frame rail. Undo the line tabs as shown in the picture below.



The passenger side has the fuel line mounted to the frame rail. Undo the line tabs as shown in the picture below.






9R *Install Frame Rail Reinforcements*

We will be installing reinforcement plates onto the frame rails. This will require drilling two $\frac{3}{4}$ " holes for through each frame rail.

Start on the passenger side frame rail. The hole that was used to hole the line tab is in the same position as one of your holes. (see picture) Use one of the reinforcement plates as a template to mark out the other hole.

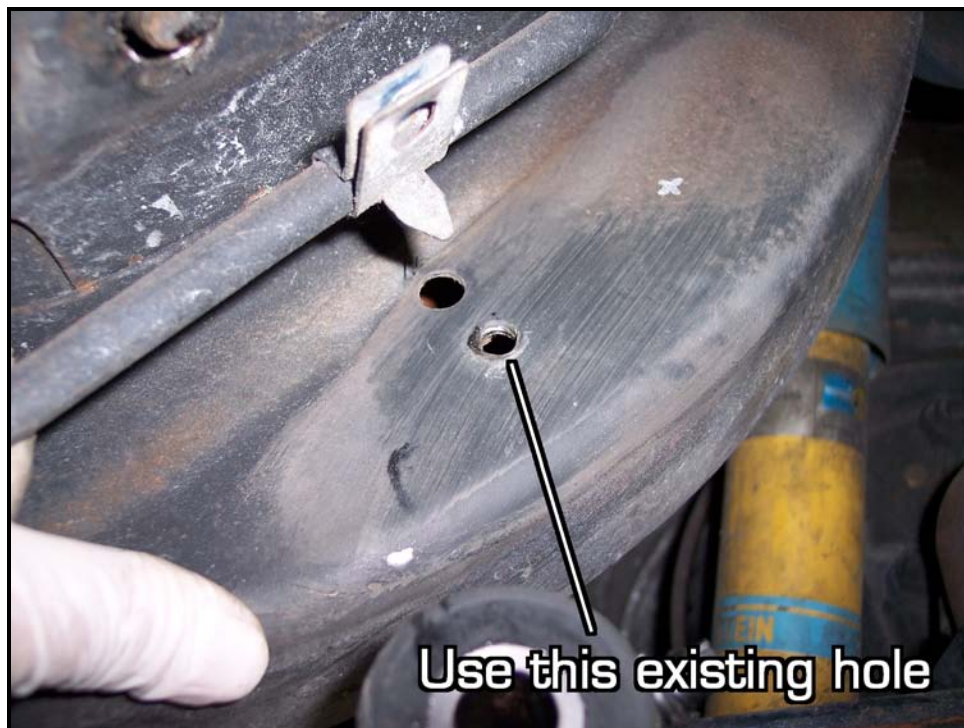




Drill out the $\frac{3}{4}$ " hole only on the inner side of the frame rail. Do not drill through both walls of the frame rail. We found that a unibit works best.






Insert the reinforcement plate with the 2 tubes welded to it into the frame rail. Use a vise clamp to secure the plate onto the frame rail. Drill the outer wall of the frame rail with a $\frac{1}{2}$ " drill bit. The reinforcement tubes will act as a guide for you to drill. So when you are finished, you will have two $\frac{3}{4}$ " holes on the inside of the frame rail and two $\frac{1}{2}$ " holes on the outer side of the frame rail.



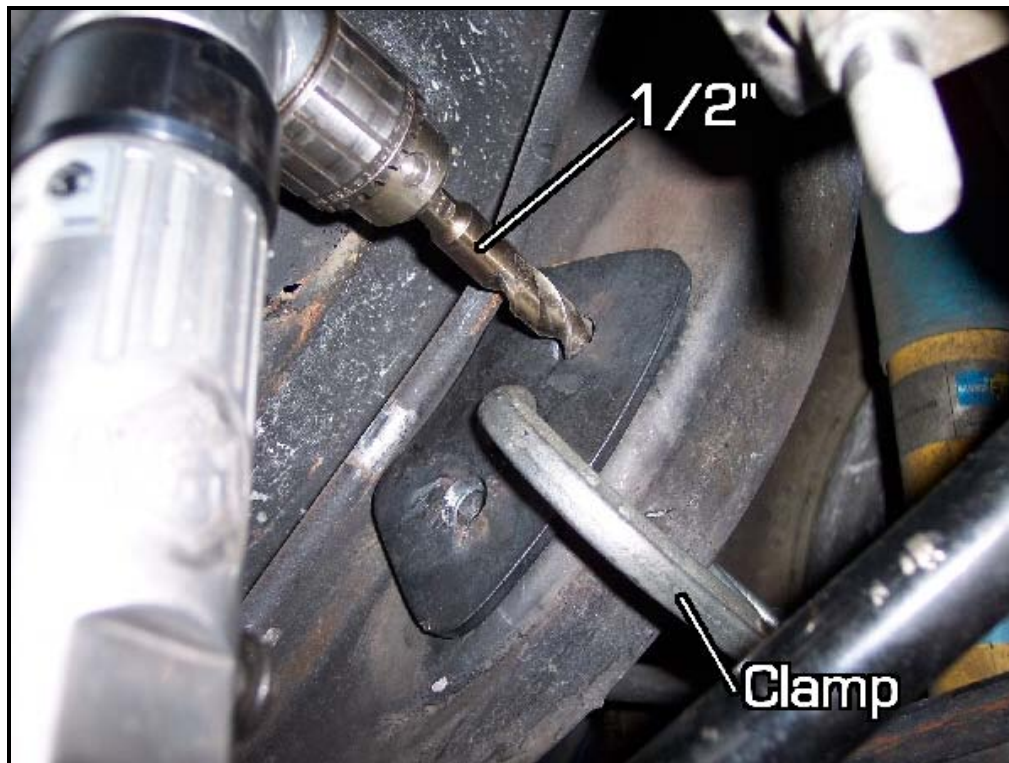

Remove the vise clamp and insert 1 short bolt w/ washer and 1 long bolt w/ washer from the outside of the frame rail. (hardware kit **#1757**) Make sure to add the other reinforcement plate to the outside before you insert the bolts through the frame.



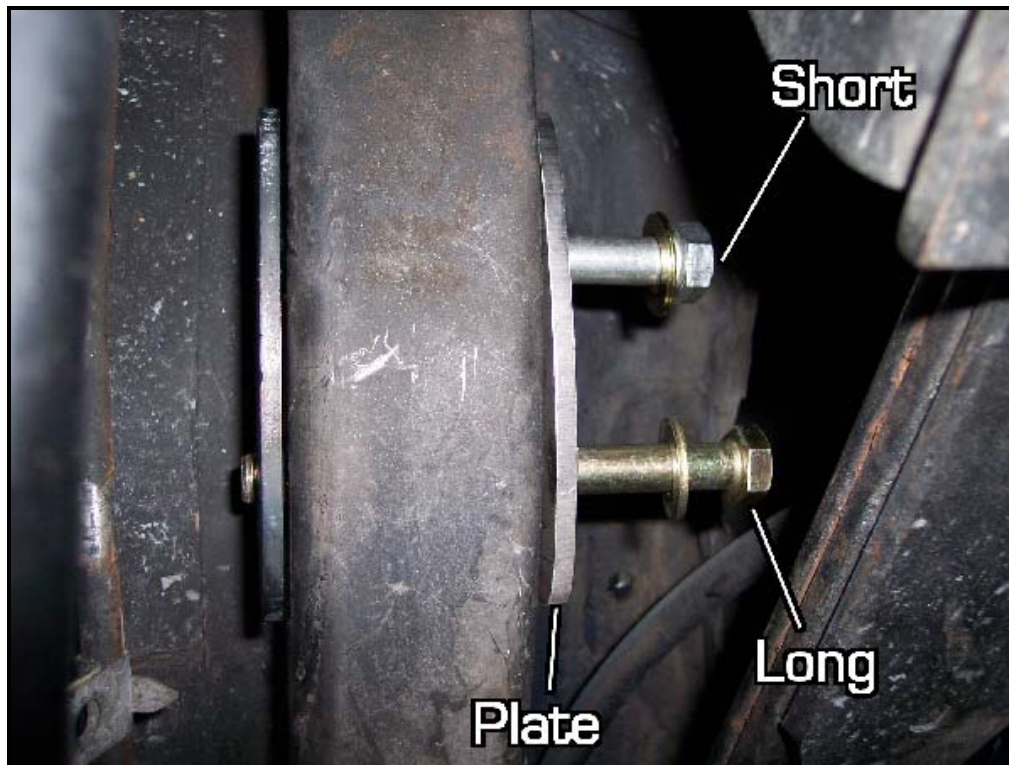

Install a washer and a nut to the top (shorter) bolt. Do not fully tighten this bolt at this time. (hardware kit #1757)





Grease up your new dog bone end links with the provided grease. Install the dog bone on the bottom (longer bolt) with the grease fittings pointing rearward.



Install the line bracket onto the long bolt and install a washer and nut. Do not fully tighten at this time. (hardware kit #1757)



Line up the mounting tab with the line bracket you just installed. Use the provided 5/16" bolt and washer to secure the mounting tab to the line bracket. (hardware kit #1757) Make sure the 1/2" Nut is not too close to the fuel line.






Fully tighten both short and long bolts completely.


You're given new hardware for attaching the dog bone end links to the sway bar. Use the bolts, nuts, and washers from the hardware kit.



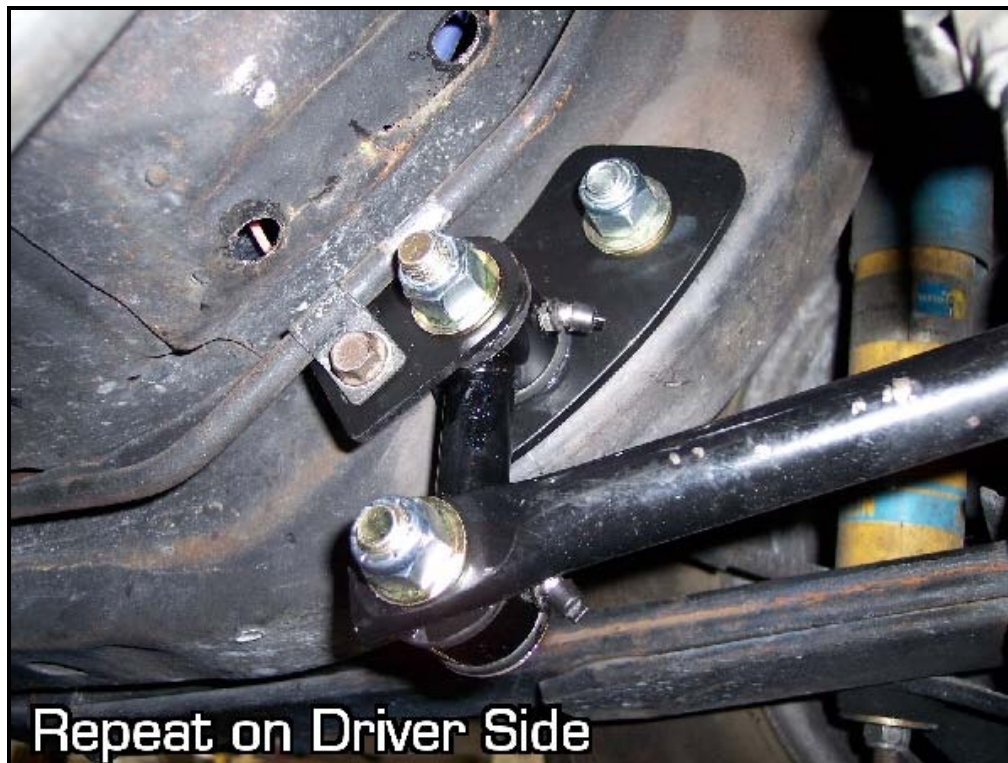

Once the passenger side is completely mounted together, you can now figure out where the other frame rail reinforcement plate goes on the driver side. Mock up the driver side dog bone end link onto the sway bar and mark where the bottom hole should be. Again, use the reinforcement plate as guide to mark the upper hole. Drill the holes in the same manner as before.

You can remove the mounting tabs that are no longer in use.

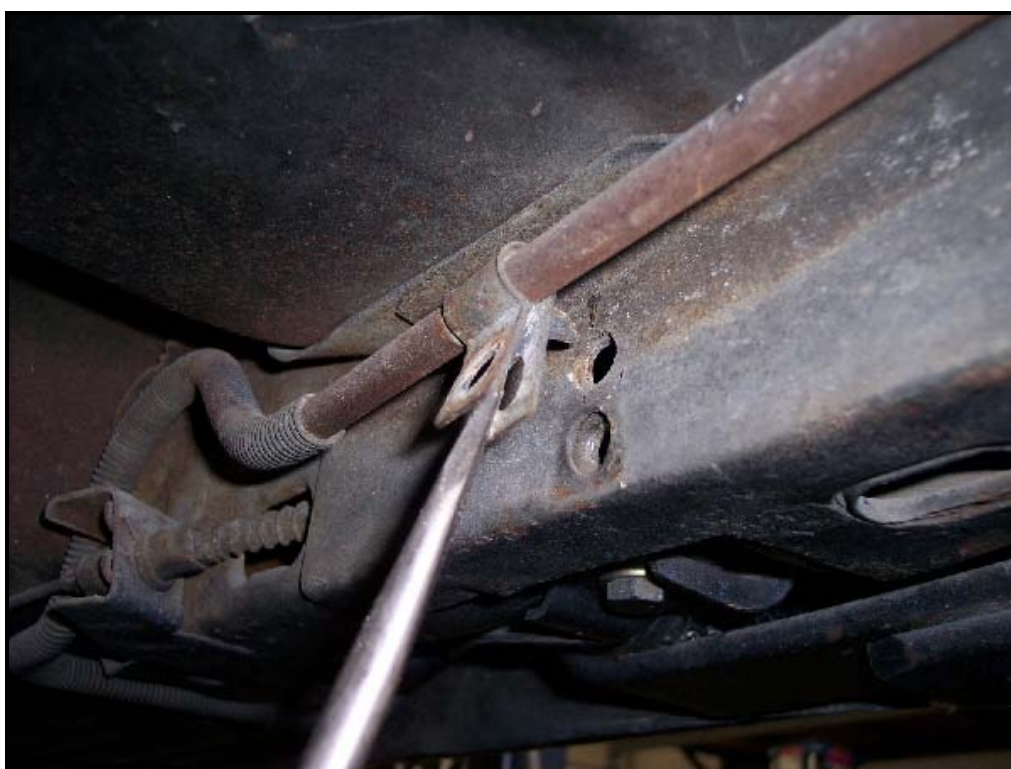



10R *Double Check all Hardware*

Double check and make sure all hardware is full tightened before driving the vehicle. You are finished with the rear sway bar kit.





2408C/2409C Leaf Spring Installation

Thank you for your purchase of this Hotchkis product. Your leaf springs were designed with the performance and durability you've come to expect from Hotchkis Performance.

Installation Notes for 2408C/2409C Leaf Springs


1. Support vehicle by the frame using lift jacks or jack stands. NEVER rely on a hydraulic jack to hold up the vehicle while you are working under it.
2. It is not necessary to remove the wheels to perform this installation.
3. Remove the lower shock bolts.
4. Loosen, but don't remove, the bolts in the rear that hold the leaf spring eyes.
5. Remove the nuts that hold the spring to the axle.
6. Lift the axle off of the spring and support it.
7. Take out the bolts holding the leaf spring to rear shackles and also the front three bolts to the chassis and remove the spring from the vehicle.
8. Knock out the existing bolts from the leaf spring axle mount.
9. Drill out the holes so you can fit the new U-Bolts and the bottom plates as well with a drill bit size 5/8.
10. Remove front nut clips and put in the new nut clips. (You may have to grind a little To help the fitment the new nut clips).
11. Install the leaf spring pads.





Discard Sleeve

12. Put you stock front hangers on your new springs.
13. Remove the bushings from frame, clean thorough inside frame, grease frame and bushing and install new bushings.
14. Put the new shackles on your new leaf springs.
15. When assembling rear shackle bolt through leaf spring eye make sure the head of the bolt facing away from the gas tank. This may be easier install on the floor than installing up on the car.

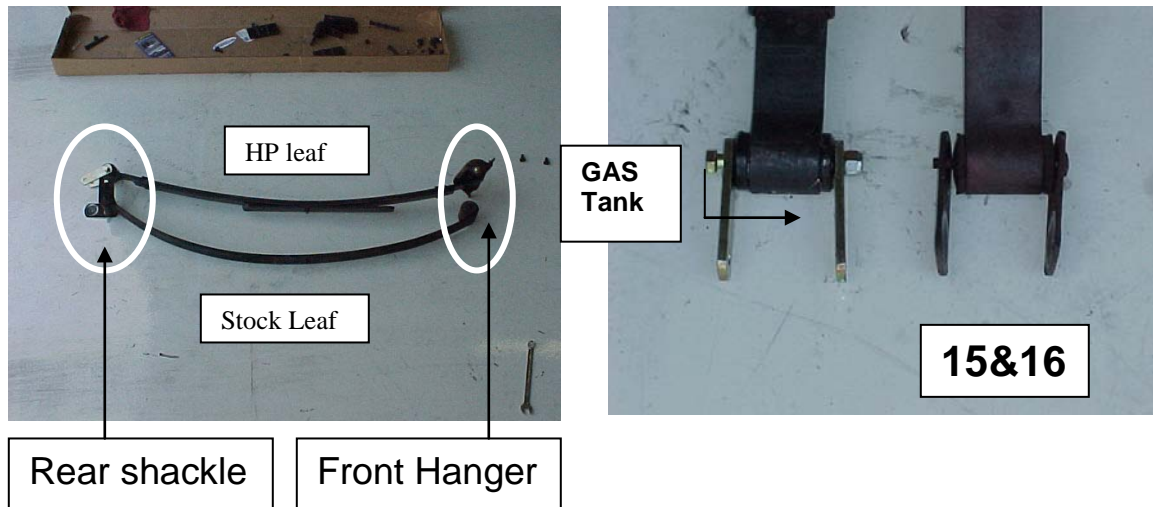

16. Install the leaf springs. You need to set the vehicle on its wheels before you perform the final tightening on the leaf spring eyelet bolts. You must do this so you don't ruin the leaf spring bushings.

For the frame bushings use bushing part # 61137

For the Leaf Spring bushing use bushing part # 61091