



Installation Instructions SPRING REPLACEMENT KIT

Fits Pro-Matic 2 & V-Matic 2 Automatic Shifters


HURST # 2308500

WORK SAFELY! For maximum safety, perform this installation on a clean, level surface and with the engine turned off. Place blocks or wedges in front of and behind both rear wheels to prevent movement in either direction.

CAUTION: To avoid any possibility of bodily injury or damage to vehicle, do not attempt installation until you are confident that the vehicle is safely secured and will not move.

Shifter Spring Part # 1174826

1. Remove cover or console from shifter.
2. Make sure the shifter is in the neutral position.
3. Mark the location of the old spring assembly with pencil.
4. Use a torx head screwdriver to remove the (4) screws holding the spring assembly to the shifter.
5. Remove the old spring assembly.
6. Install the new spring assembly by spreading the spring ends around the shifter pin.
7. Align the new spring assembly with pencil marks.
8. Replace the (4) screws into the spring assembly and tighten.
9. Replace the console or cover.

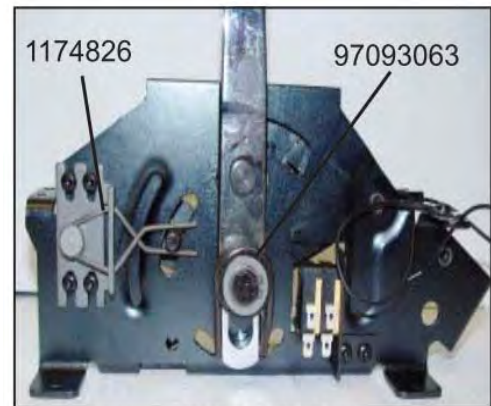

Pro-Matic 2

Shifter Spring Part # 97093063

1. Remove cover or console from shifter.
2. Make sure the shifter is in the neutral position.
3. Use outer "C" clip pliers to remove the "C" clip.
4. Slide off washer and nylon sleeve.
5. Slide off spring.
6. Insert the nylon sleeve with the spring.
7. Slide on new spring with sleeve installed on to the shaft with either end straddling the shifter stick.
8. Slide on washer.
9. Replace "C" clip.
10. Replace the console or cover.



V-Matic 2

Shifter Spring Part # 97093217 (V-matic only)

1. Remove cover or console from shifter.
2. Make sure the shifter is in the neutral position.
3. Use small bladed screwdriver to remove the "C" clip.
4. Slide off old hairpin spring.
5. Slide on new hairpin spring.
6. Replace the console or cover.