



Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front liners are custom molded to fit your Ford Expedition / Expedition EL and Lincoln Navigator / Navigator L. The liners are made to take the place of your factory floor mats. *For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners*. However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409<sup>®</sup> or Glass Plus<sup>®</sup> work well. Use of Armor All<sup>®</sup>, Son-of-a-Gun<sup>®</sup> or similar items is discouraged as these products make the liners slick.

## INSTALLATION INSTRUCTIONS FOR ALL MODELS OF EXPEDITION & LINCOLN NAVIGATOR FRONT FLOOR LINERS

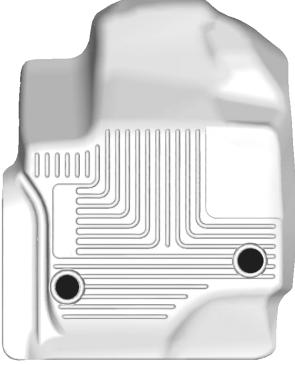

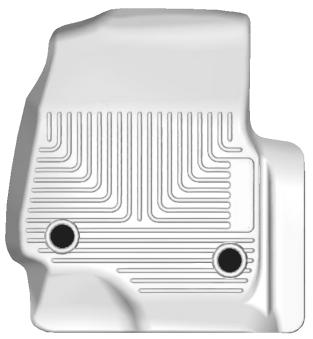

LEFT OR DRIVER'S SIDE

RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR FRONT LINERS, MOVE BOTH FRONT SEATS TO THEIR MOST REARWARD POSITION. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE SEATS AS DESIRED. TAKE CARE THAT YOUR LINERS ARE SECURELY ATTACHED TO THE FACTORY FLOOR MAT POSTS.

Bring your life with Husky products.