

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeaterTM Floor Liner from Winfield Consumer Products. Your new third seat liner is custom molded to fit your vehicle with 2nd row bench & bucket seating. The liner is made to take the place of your factory floor mats. *For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner*. However, do not remove the factory-installed carpeting.


Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD EXPEDITION & LINCOLN NAVIGATOR THIRD SEAT FLOOR LINER



MODELS WITH 2^{ND} ROW BUCKETS AND WITHOUT 2^{ND} ROW ROW CONSOLE: TO INSTALL YOUR LINER, FLIP FORWARD/SLIDE THE 2^{ND} ROW SEATS TO EXPOSE THE 3^{RD} ROW FLOOR PANS. NEXT, INSTALL YOUR LINER, POSITIONING IT AS SHOWN ABOVE. LASTLY, REPOSITION THE 2^{ND} ROW SEATS. NOTE THAT THE TONGUE OF THE LINER EXTENDS BETWEEN THE 2^{ND} ROW BUCKET SEATS. THE FRONT EDGE OF THE 3^{RD} SEAT LINER TUCKS UNDER THE REAR WALL OF THE 2^{ND} SEAT LINER.

FOR MODELS WITH 2^{ND} ROW BUCKETS/AND 2^{ND} ROW CONSOLE OR MODELS WITH 2^{ND} ROW BENCH SEATS: PLEASE SEE THE INSTRUCTIONS ON THE BACK SIDE OF THIS PAGE.

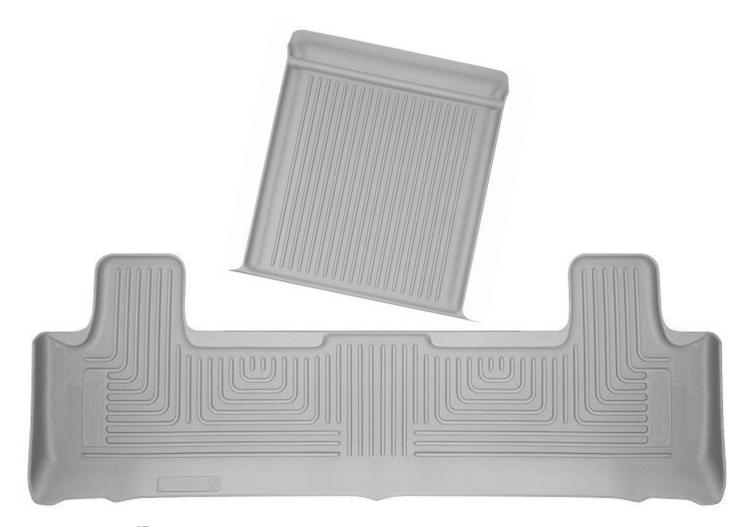

MODELS WITH 2^{ND} ROW BUCKETS THAT INCLUDE A CONSOLE BETWEEN THE BUCKET SEAT AND AND MODELS WITH 2^{ND} ROW BENCH SEATS: PRIOR TO INSTALLATION OF YOUR LINER YOU WILL NEED TO TRIM AWAY THE TONGUE SECTION OF THE LINER. A MOLDED IN TRIM GROOVE GUIDES THE TRIM SEE (IMAGE BELOW). WITH THE LINER TRIMMED, FLIP FORWARD/SLIDE THE 2^{ND} ROW SEATS TO EXPOSE THE 3^{RD} ROW FLOOR. NEXT, INSTALL YOUR LINER, POSITIONING IT AS SHOWN ABOVE. LASTLY, REPOSITION THE 2^{ND} ROW SEATS.

