



# X-ACT CONTOUR

## FLOOR LINERS


### CARE AND USE INSTRUCTIONS – PN:52711

---

Thank you for selecting an X-act Contour™ 2<sup>nd</sup> Seat Floor Liner from Husky Liners Inc. Your new floor liner is custom molded to fit your specific vehicle's floor board. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.

FRONT OF VEHICLE

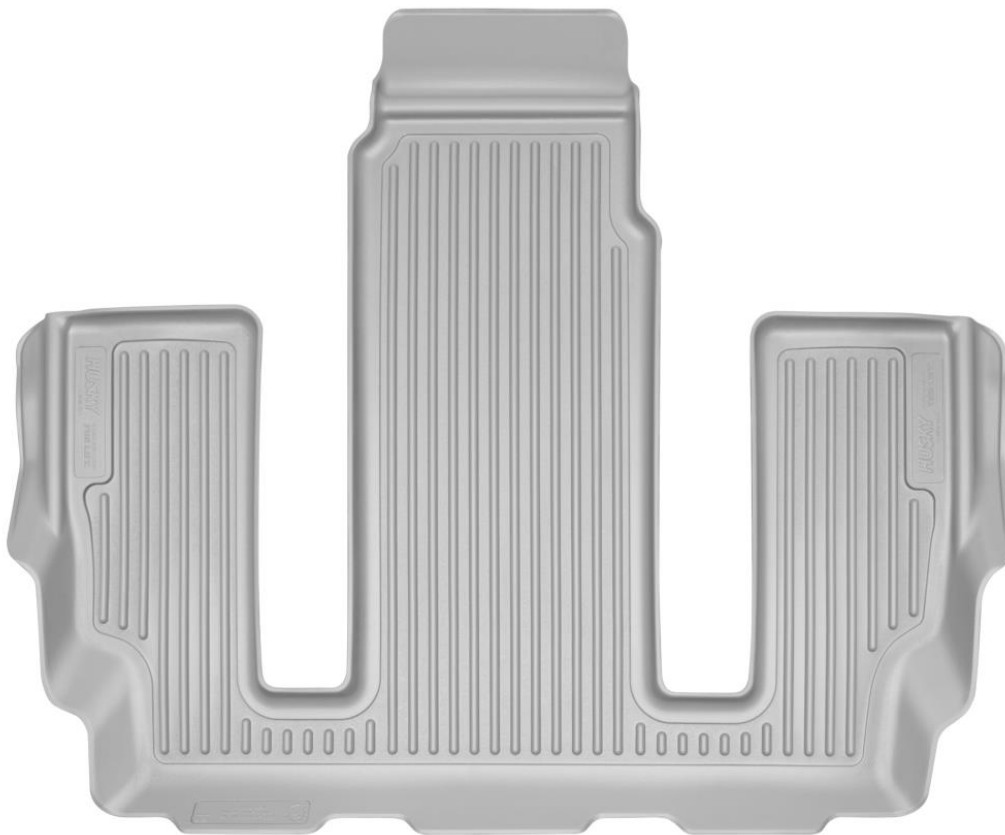

TO EASE INSTALLATION OF YOUR 3<sup>RD</sup> SEAT FLOOR LINER, FLIP BOTH 2<sup>ND</sup> ROW SEATS FORWARD TO ALLOW EASIER ACCESS TO THE 3<sup>RD</sup> ROW FLOOR PAN. ONCE YOU HAVE INSTALLED YOUR LINER, REPOSITION THE 2<sup>ND</sup> ROW SEATS AS DESIRED. NOTE THAT THE “TONGUE” SECTION OF THE 3<sup>RD</sup> SEAT LINER TUCKS UNDER THE BACK EDGE OF THE 2<sup>ND</sup> SEAT LINER

Discover other floor mats on our website.