


Class III Receiver Hitch Part No. 69562C

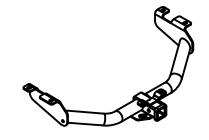

Fits: '99 - '07 (CLASSIC), '07 - CURRENT (NEW BODY) STYLE CHEVY/GMC 1500/2500LD SILVERADO, SIERRA, Z71



GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 6,000 LBS. TRAILER WEIGHT & 600 LBS. TONGUE WEIGHT. GROSS LOAD CAPACITY WHEN USED AS A WEIGHT DISTRIBUTION HITCH: 10,000 LBS. TRAILER WEIGHT & 1,000 LBS. TONGUE WEIGHT

WARNING: *** DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY. ***



TELM OTY PART NUMBER DESCRIPTION 1 2 1/2-13 x 1 3/4 CARRIAGE BOLT 2 2 2 CM-SP1 250 x 1.50 x 2.00° SQUARE HOLE SPACER 3 2 HFN 1213 HEX FLANGE NUT 4 4 M14-2 x 40mm LG. HEX BOLT 5 4 9/16° CONICAL TOOTHED WASHER PLASTIC BUMPER FASCIA TRIMMING DOES NOT APPLY TO ALL YEARS, CHECK FIT BEFORE TRIMMING TO SEE IF IT IS NECESSARY INSTALL FIRST
2 2 CM-SP1 .250 x 1.50 x 2.00° SQUARE HOLE SPACER 3 2 HFN 1213 HEX FLANGE NUT 4 4 M14-2 x 40mm LG. HEX BOLT 5 4 9/16° CONICAL TOOTHED WASHER PLASTIC BUMPER FASCIA 3.00 in TRIMMING DOES NOT APPLY TO ALL YEARS, CHECK FIT BEFORE TRIMMING TO SEE IF IT IS NECESSARY EXISTING WELDNUT
3 2 HFN 1213 HEX FLANGE NUT 4 4 M14-2 x 40mm LG. HEX BOLT 5 4 9/16" CONICAL TOOTHED WASHER PLASTIC BUMPER FASCIA TRIMMING DOES NOT APPLY TO ALL YEARS, CHECK FIT BEFORE TRIMMING TO SEE IF IT IS NECESSARY EXISTING WELDNUT
4 4 M14-2 x 40mm LG. HEX BOLT 5 4 9/16" CONICAL TOOTHED WASHER PLASTIC BUMPER FASCIA 3.00 in TRIMMING DOES NOT APPLY TO ALL YEARS, CHECK FIT BEFORE TRIMMING TO SEE IF IT IS NECESSARY EXISTING WELDNUT
5 4 9/16* CONICAL TOOTHED WASHER PLASTIC BUMPER FASCIA 3.00 in TRIMMING DOES NOT APPLY TO ALL YEARS, CHECK FIT BEFORE TRIMMING TO SEE IF IT IS NECESSARY EXISTING WELDNUT
PLASTIC BUMPER FASCIA 3.00 in TRIMMING DOES NOT APPLY TO ALL YEARS, CHECK FIT BEFORE TRIMMING TO SEE IF IT IS NECESSARY EXISTING WELDNUT
TRIMMING DOES NOT APPLY TO ALL YEARS, CHECK FIT BEFORE TRIMMING TO SEE IF IT IS NECESSARY EXISTING WELDNUT
FRAME RAIL EXISTING WELDNUT HITCH WEIGHT: 30 LBS. S
INSTALL TIME
PROFESSIONAL: 30 MINUTES NOVICE (DIX): 60 MINUTES
NOVICE (DIY): 60 MINUTES
INSTALL NOTES: - NO DRILLING REQUIRED
- NO DRILLING REQUIRED - FASCIA TRIMMING MAY BE
REQUIRED FOR SOME MODELS
- CHECK FASCIA BEFORE TRIMMING

INSTALLATION STEPS

- 1) Lower spare tire and remove existing M14 hex bolts from each frame rail.
- 2) Raise hitch into position and secure bumper mount with M14 hex bolts and lock washers as shown. (Leave bolts loose.)
- 3) Install M14 hardware in rear holes of hitch and install 1/2" carriage bolts, spacers, and flange nuts in remaining holes as shown.
- 4) Torque rear M14 bolt first to 126 lb-ft and all 1/2" fasteners to 110 lb.-ft.
- 5) Reinstall spare tire removed in step (1).

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Keystone Automotive Operations Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Keystone Automotive Operations Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Keystone Automotive Operations Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage. This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C.

11202017