


Thank you for selecting a WeatherBeater® <u>Floor Liner</u> from Winfield Consumer Products. Your new rear floor liner is custom molded to fit your Chevrolet Silverado/GMC Sierra Crew Cab truck. The liner is made to take the place of your factory floor mats. <u>For correct fit, it is necessary to remove the factory floor mats before</u> installing your new floor liners. However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET SILVERADO/GMC SIERRA CREW CAB TRUCK 2ND SEAT FLOOR LINERS

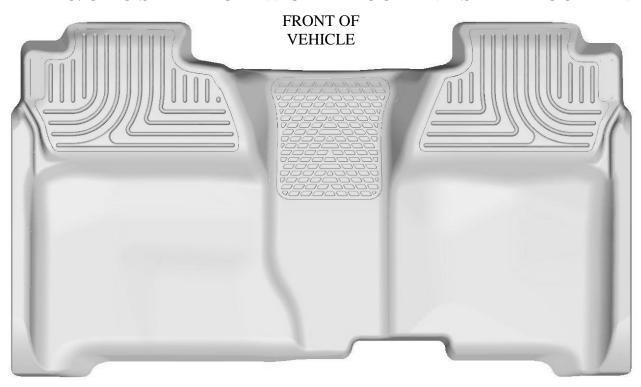

TO EASE INSTALLATION OF YOUR SILVERADO/SIERRA CREW CAB TRUCK SECOND SEAT LINER, MOVE BOTH FRONT ROW SEATS TO THEIR MOST FORWARD POSITION AND FLIP UP THE $2^{\rm ND}$ ROW SEATS. WITH THIS DONE, INSTALL YOUR LINER, POSITIONING IT AS SHOWN IN THE IMAGE ABOVE. ONCE THE LINER IS INSTALLED, REPOSITION THE FRONT SEATS AS DESIRED AND LOWER YOUR $2^{\rm ND}$ ROW SEATS.

YOUR LINER WILL WORK IN CONJUNCTION WITH THE HUSKY LINER GEARBOX™.