

# **HUSKY** **WeatherBEATER™** **Custom Vehicle Floor Protection**


## CARE AND USE INSTRUCTIONS

---

Thank you for selecting a WeatherBeater™ [Floor Liner](#) from Winfield Consumer Products. Your new third seat liner is custom molded to fit your Ford Flex. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, *do not remove the factory-installed carpeting.*

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Using Armor All®, Son-of-a-Gun® or like items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR FORD FLEX 3<sup>RD</sup> SEAT LINER

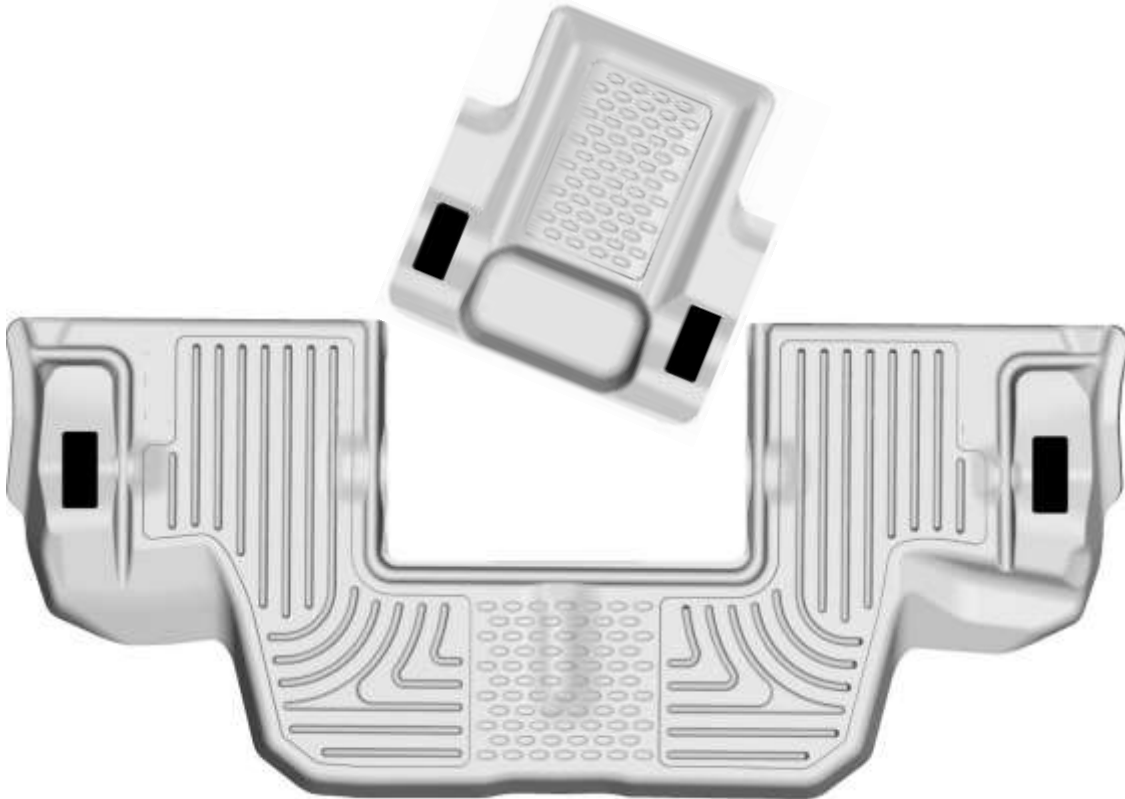

TO INSTALL YOUR 3<sup>RD</sup> SEAT FLOOR LINER, SIMPLY RELEASE AND FLIP/FOLD FORWARD YOUR 2<sup>ND</sup> ROW SEATS. NOTE THAT THE 2<sup>ND</sup> ROW SEATS WILL REATTACH THROUGH THE PRE-TRIMMED HOLES IN THE LINER. IF THE AREAS DARKENED ARE NOT TRIMMED OUT WHEN YOU RECEIVE YOUR LINER, **DO NOT INSTALL YOUR LINER.** INSTEAD, PLEASE CALL HUSKY LINERS AT 800-344-8759.

IF YOUR VEHICLE HAS A CONSOLE BETWEEN THE 2<sup>ND</sup> ROW SEATS, YOU WILL NEED TO TRIM YOUR LINER AS SHOWN ABOVE AND ON THE BACK OF THIS PAGE. TO TRIM, USE THE MOLDED IN STEP IN THE LINER AS A TRIM GUIDE. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.

**PHOTO OF LINER #1934 TRIMMED AND INSTALLED IN A FLEX WITH 2<sup>ND</sup> ROW CONSOLE AND ALSO WITH THE STANDARD 2<sup>ND</sup> ROW BENCH SEATING**

**FLEX 3<sup>RD</sup> SEAT LINER INSTALLED IN A VEHICLE WITH A 2<sup>ND</sup> ROW CONSOLE**



**FLEX 3<sup>RD</sup> SEAT LINER INSTALLED IN A VEHICLE WITHOUT A 2<sup>ND</sup> ROW CONSOLE**

