

# **HUSKY** **Weather**BEATER™ **Custom Vehicle Floor Protection**


## CARE AND USE INSTRUCTIONS

---

Thank you for selecting a WeatherBeater™ [Floor Liner](#) from Winfield Consumer Products. Your new second seat liner is custom molded to fit your Ford F150 Super Cab truck. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

## **INSTALLATION INSTRUCTIONS FOR YOUR FORD F150 SUPER CAB TRUCK SECOND SEAT FLOOR LINER**

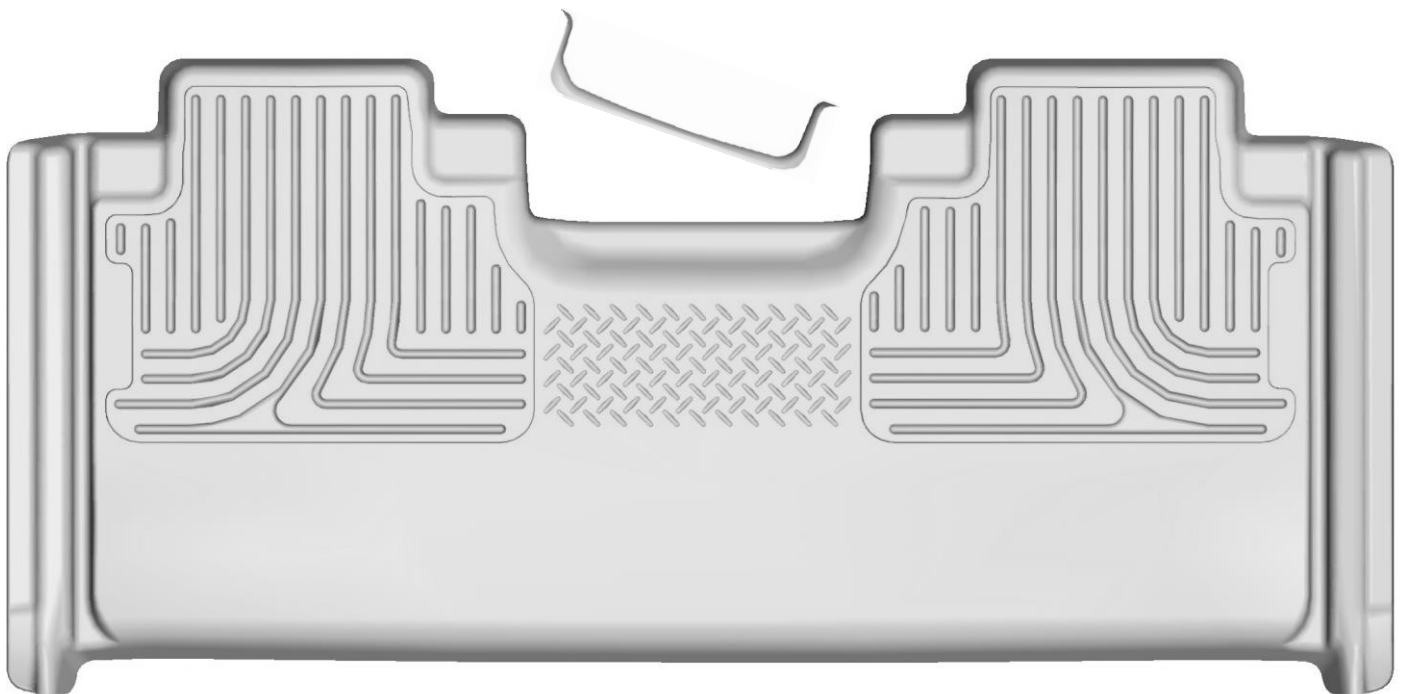

TO EASE INSTALLATION OF YOUR NEW SUPER CAB LINER, MOVE BOTH FRONT SEATS TO THEIR MOST FORWARD POSITION. ONCE LINER IS INSTALLED, REPOSITION THE SEATS AS DESIRED.

IF YOUR TRUCK IS EQUIPPED WITH A 40/20/40 SPLIT BENCH FRONT SEAT, YOU WILL NEED TO TRIM YOUR LINER TO ACHIEVE THE PROPER FIT AROUND THE REAR FACING CUP. A MOLDED IN TRIM STEP IS INCLUDED TO AID IN TRIMMING. NO TRIMMING IS NEEDED FOR TRUCKS WITH FRONT ROW BUCKETS AND A CONSOLE. PLEASE REFER TO THE IMAGES ON THE BACK OF THIS PAGE FOR MORE TRIMMING DETAILS.

TRIM LINER LEAVING AN APPROXIMATE ¼" LIP AROUND THE CUPHOLDER PROFILE AS SHOWN IN THE IMAGES BELOW. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.

