

HUSKYLINERS®


weatherBEATER

CARE AND USE INSTRUCTIONS


Thank you for selecting a WeatherBeater® [Floor Liner](#) from Winfield Consumer Products. Your new 2nd seat floor liner is custom molded to fit your Toyota Sienna Van. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA SIENNA 2nd SEAT FLOOR LINER

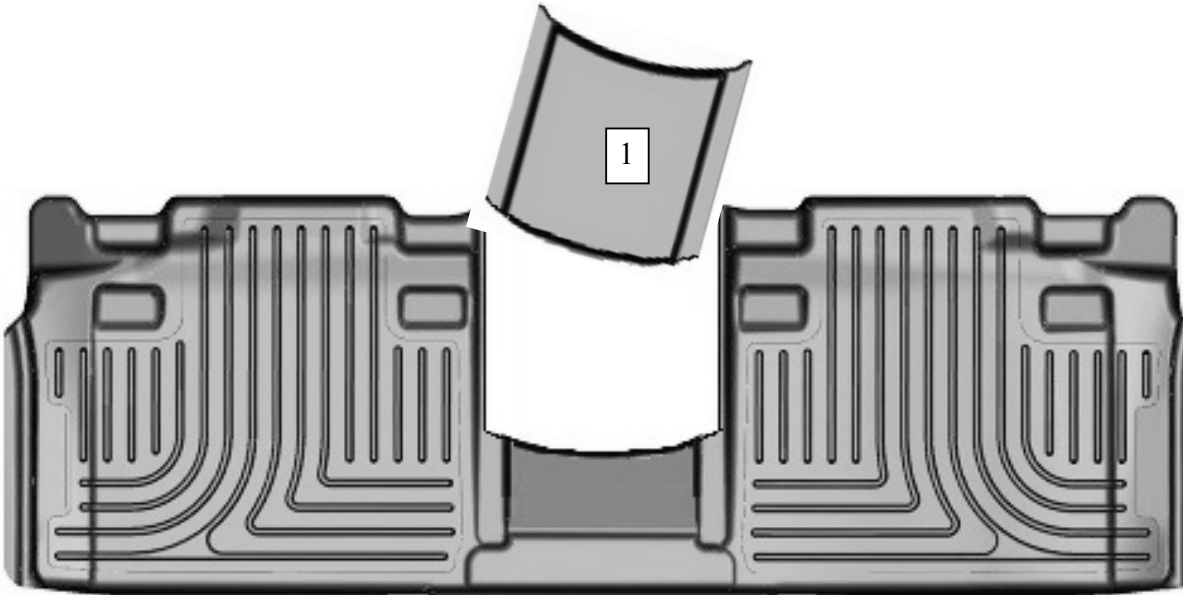

TO INSTALL YOUR LINER, FIRST SLIDE THE VEHICLE FAR ENOUGH TO ALLOW WITH THE LINER IN PLACE, MOVE THE MATS UP TO THE REAR EDGE OF THE TO WORK WITH THE MULTIPLE IT IS BOXED, THE LINER WILL FIT 7- ROW CONSOLE POSITIONED BETWEEN EASILY BE TRIMMED TO ALLOW THE 2ND ROW AREA AS SHOWN IN THE PHOTOS ON BACK OF THIS PAGE). TO TRIM, SIMPLY USE THE MOLDED IN STEP IN THE PART AS A GUIDE AND REMOVE THE SECTION OF THE LINER AS SHOWN. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING. IF YOUR SIENNA IS AN 8-PASSENGER MODEL, YOU WILL NEED TO REMOVE THE “TONGUE” FROM THE REAR OF THE LINER (SEE AREA 2 ABOVE). THIS IS EASILY DONE USING THE MOLDED IN STEP IN THE PART AS THE TRIMMING GUIDE. ONCE AGAIN, A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.

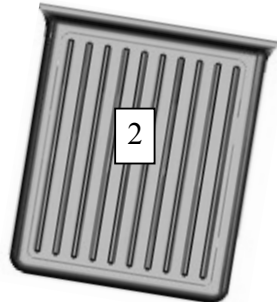

THE 2ND ROW SEATS TOWARD THE BACK OF ROOM FOR THE LINER TO BE INSTALLED. 2ND ROW SEATS FORWARD UNTIL THEY LINER. YOUR SIENNA LINER IS DESIGNED CONFIGURATIONS OF THE SIENNA VAN. AS PASSENGER MODELS WITH THE FRONT THE FRONT ROW OF SEATS. THE LINER CAN CONSOLE TO BE REPOSITIONED INTO THE DIAGRAM ABOVE (SEE AREA 1 AND

PHOTOS SHOWING THE TRIMMING NEEDED TO ALLOW THE FRONT ROW CONSOLE TO BE MOVED BACK TO THE 2ND ROW OF SEATS. THE DOTTED LINE FOLLOWS THE MOLDED IN STEP IN THE PART THAT AID TRIMMING.

