

**THANK YOU FOR SELECTING A HUSKY FLOOR LINER
FROM WINFIELD CONSUMER PRODUCTS**

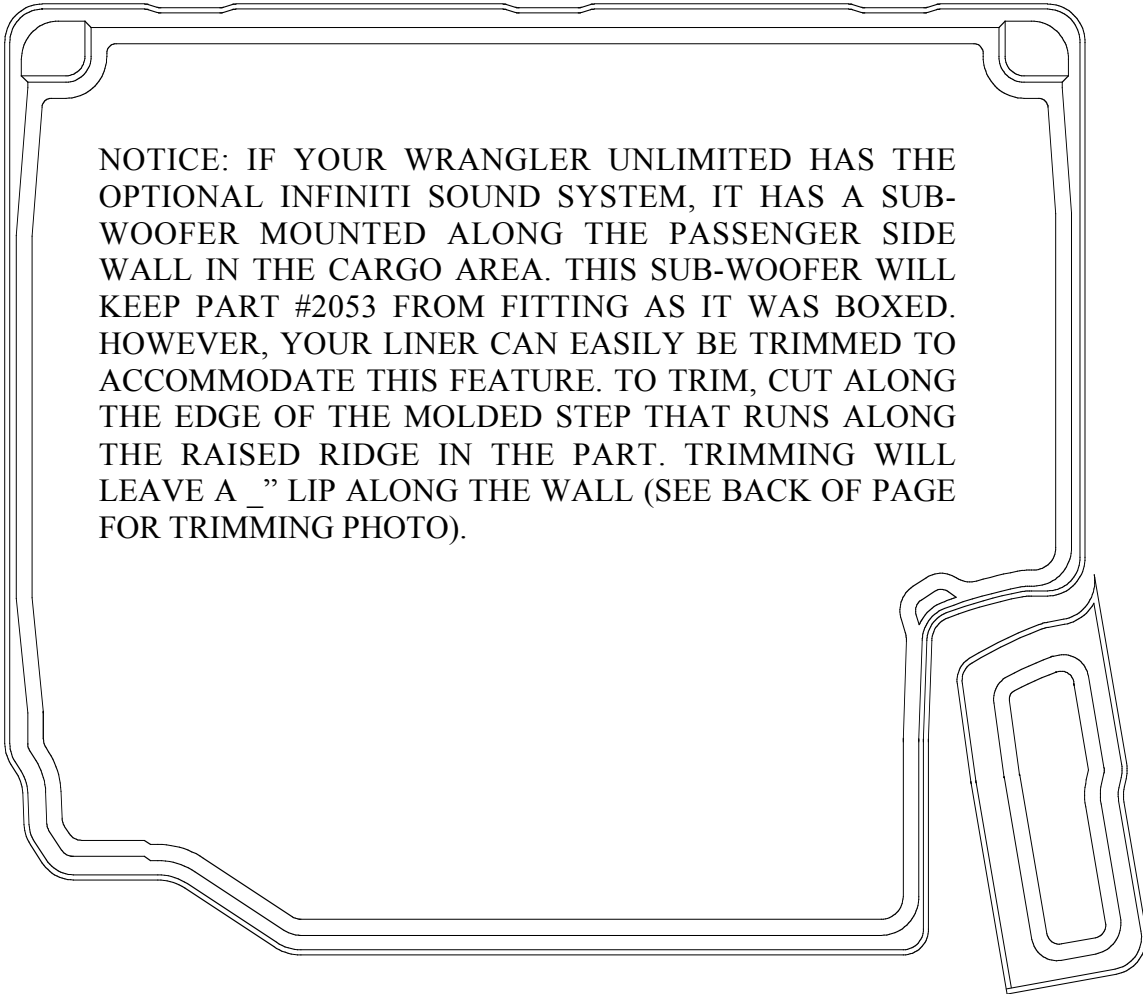


CARE AND USE INSTRUCTIONS

Your new liner is custom molded to fit your vehicle. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the back of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner inside will speed up the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

**INSTALLATION INSTRUCTIONS FOR YOUR JEEP
WRANGLER UNLIMITED CARGO LINER**

A technical line drawing of a cargo liner for a Jeep Wrangler Unlimited. The drawing shows the overall shape of the liner, which is rectangular with rounded corners and a raised lip around the edges. A specific cutout is shown on the passenger side wall, designed to accommodate a sub-woofer. The text provides instructions on how to trim the liner to fit this cutout.

NOTICE: IF YOUR WRANGLER UNLIMITED HAS THE OPTIONAL INFINITI SOUND SYSTEM, IT HAS A SUB-WOOFER MOUNTED ALONG THE PASSENGER SIDE WALL IN THE CARGO AREA. THIS SUB-WOOFER WILL KEEP PART #2053 FROM FITTING AS IT WAS BOXED. HOWEVER, YOUR LINER CAN EASILY BE TRIMMED TO ACCOMMODATE THIS FEATURE. TO TRIM, CUT ALONG THE EDGE OF THE MOLDED STEP THAT RUNS ALONG THE RAISED RIDGE IN THE PART. TRIMMING WILL LEAVE A ” LIP ALONG THE WALL (SEE BACK OF PAGE FOR TRIMMING PHOTO).

TRIM ALONG THE OFFSET EDGE MOLDED INTO YOUR LINER (SEE ARROWS).

