

THANK YOU FOR SELECTING A HUSKY FLOOR LINER




FROM WINFIELD CONSUMER PRODUCTS
CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD EXCURSION CARGO LINER

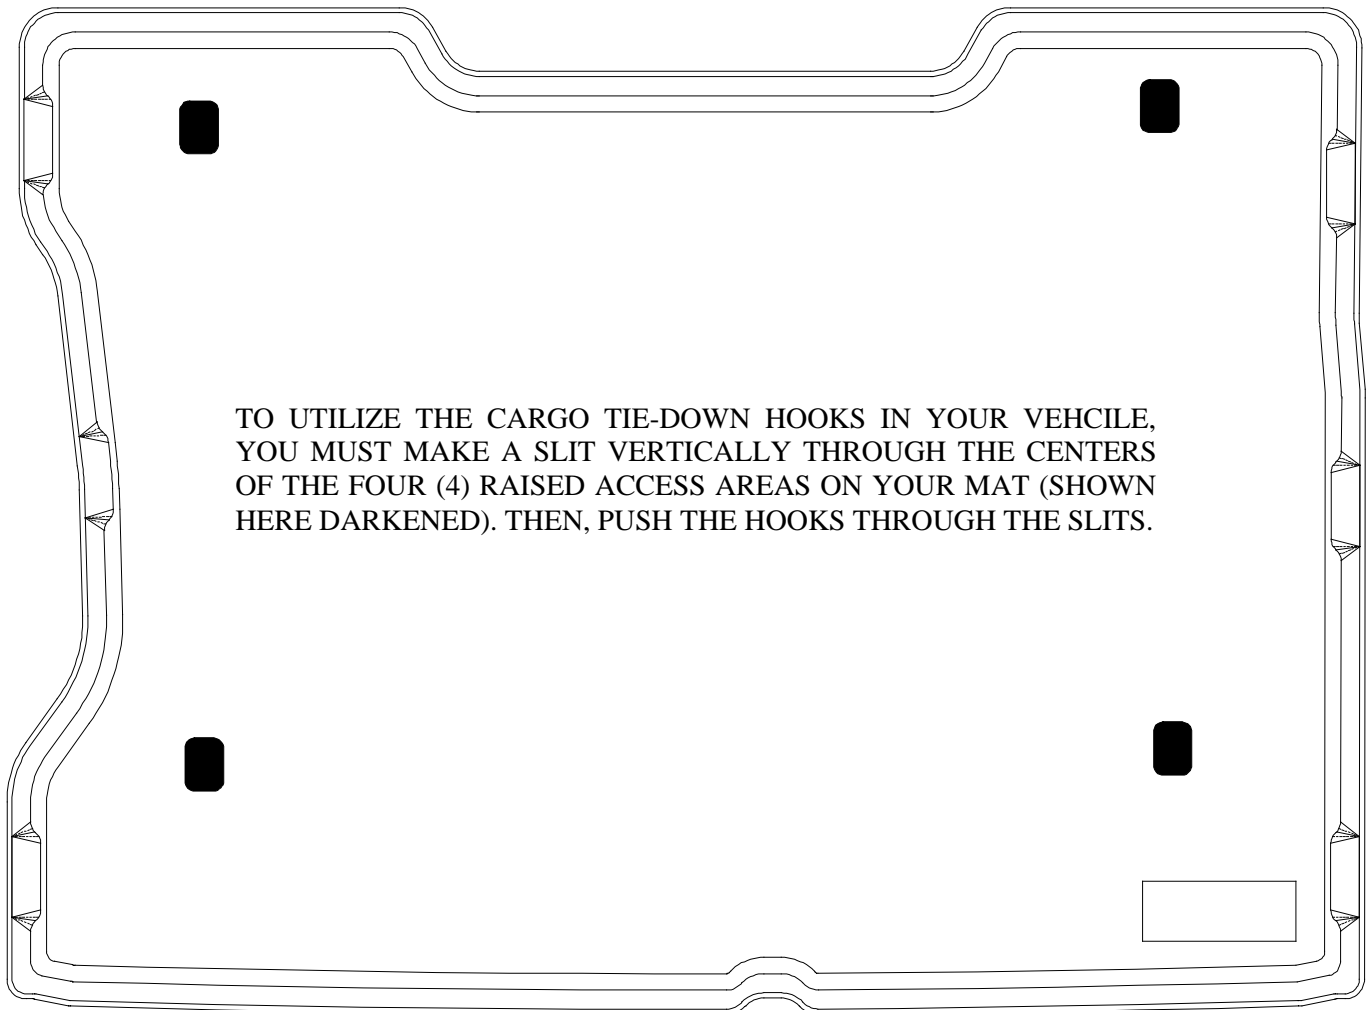

TO UTILIZE THE CARGO TIE-DOWN HOOKS IN YOUR VEHICLE, YOU MUST MAKE A SLIT VERTICALLY THROUGH THE CENTERS OF THE FOUR (4) RAISED ACCESS AREAS ON YOUR MAT (SHOWN HERE DARKENED). THEN, PUSH THE HOOKS THROUGH THE SLITS.