


CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeaterTM Floor Liner from Winfield Consumer Products. Your new cargo liner is custom molded to fit your vehicle. Upon removal from the box the liner will not unroll and lay completely lay flat. This is normal and only temporary. Just place the liner on the floor or in the back of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates, this "relaxing" may take longer; moving the liner to a heated area will accelerate the process.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

<u>CARGO LINER</u> INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET SUBURBAN / CADILLAC ESCALADE ESV / GMC YUKON XL / YUKON XL DENALI

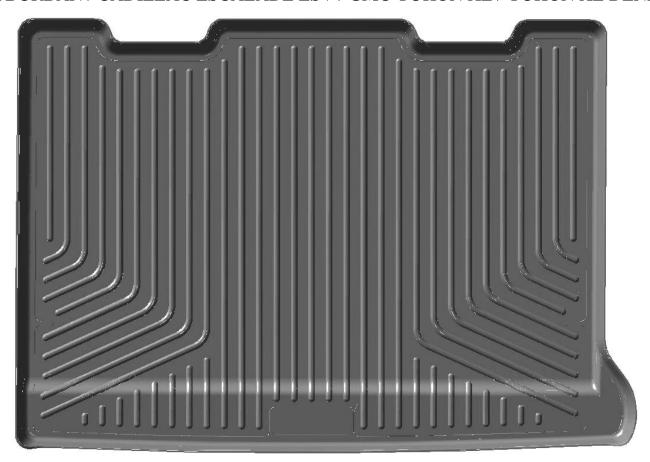

YOUR LINER PROVIDES COVERAGE FOR CARGO AREA LOCATED BEHIND THE $3^{\rm RD}$ ROW OF SEATS. TO REMOVE THE $3^{\rm RD}$ SEATS YOU WILL HAVE TO FIRST REMOVE THE LINER.