


HUSKY **Weather**BEATER™ **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater™ Floor Liner from Winfield Consumer Products. Your new cargo liner is custom molded to fit your vehicle. Upon removal from the box the liner will not unroll and lay completely flat. This is normal and only temporary. Just place the liner on the floor or in the back of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates, this “relaxing” may take longer; moving the liner to a heated area will accelerate the process.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

CARGO LINER INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET SUBURBAN / CADILLAC ESCALADE ESV / GMC YUKON XL / YUKON XL DENALI

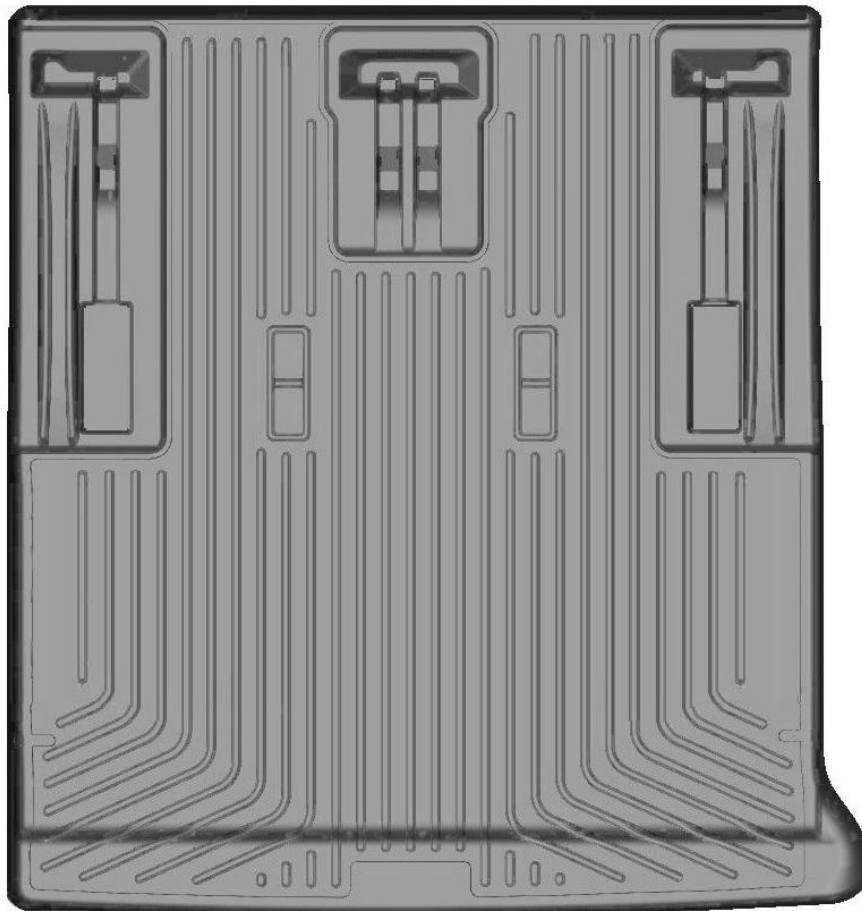

YOUR LINER PROVIDES COVERAGE FOR THE FULL CARGO AREA OF THE VEHICLE. AS BOXED, IT FITS WITH THE 3RD ROW OF SEATS REMOVED. YOU CAN INSTALL THE 3RD ROW SEATS ON TOP OF THE LINER VIA TRIMMING. INSTRUCTIONS FOR TRIMMING THE LINER ARE LOCATED ON THE BACK OF THIS PAGE.

PART #2827 TRIMMING INSTRUCTIONS

To allow 3rd seats to be mounted on top of liner, please trim as noted. A utility knife works well for trimming.

- 1) Completely trim away the two (2) areas show below noted with a “1”—trimming all 4 edges..
- 2) Following the molded in trim grooves, trim the 3 sides of the areas noted with a “2” below. Trimming will leave a “tongue” that will be inserted under the seat attachment points when liner is installed. The tongue will allow for easier seat removal as the wheels will roll up the tongue and avoid catching on the edge of liner trim.
- 3) Lastly, trim along the edge and across the middle of the two (2) areas noted with a “3”. You will also insert the two tongues created down into the attachment point recess.

