


Thank you for selecting a WeatherBeater® Trunk Liner from Winfield Consumer Products. Your new cargo liner is custom molded to fit your Mercedes GLK. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the trunk of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this "relaxing" may take longer; moving the liner to a heated area will speed the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Do not use Armor All[®], Son-of-a-Gun[®] or similar items as these products make the liner slick.

CARGO LINER INSTALLATION INSTRUCTIONS FOR YOUR MERCEDES GLK

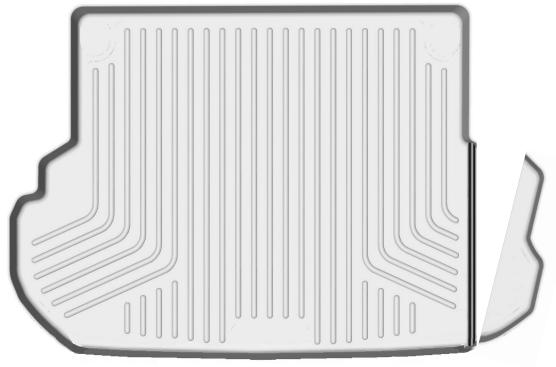

YOUR GLK CARGO LINER FITS TO THE BACK OF THE 2ND ROW SEATS. THE LINER COVERS THE ENTIRE CARGO AREA INCLUDING THE SMALL STORAGE AREAS BEHIND THE PASSENGER SIDE WHEEL WELL. YOU CAN ACCESS THESE AREAS BY LIFTING THE CORNER OF THE LINER OR THE AREA CAN BE REMOVED VIA TRIMMING AS SHOWN ABOVE. TO TRIM, SIMPLE FOLLOW THE EDGE MOLDED IN ALONG THE RAISED RIB. TO ACCESS TO THE FACTORY TIE-DOWN HOOK LOCATIONS WITH THE LINER IN PLACE. SIMPLY REMOVE THE MATERIAL FROM THE RECESSED AREAS OF THE LINER LOCATED DIRECTLY ABOVE THE HOOKS. THESE AREAS ARE RECESSED ON THE LINER TO AID TRIMMING. A UTILITY KNIFE WORKS WELL FOR TRIMMING.