


HUSKY **WeatherBEATER™** **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater™ Trunk Liner from Winfield Consumer Products. Your new cargo liner is custom molded to fit your Hyundai Tucson. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the trunk of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area will speed the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Do not use Armor All®, Son-of-a-Gun® or similar items as these products make the liner slick.

CARGO LINER INSTALLATION INSTRUCTIONS FOR YOUR HYUNDAI TUCSON

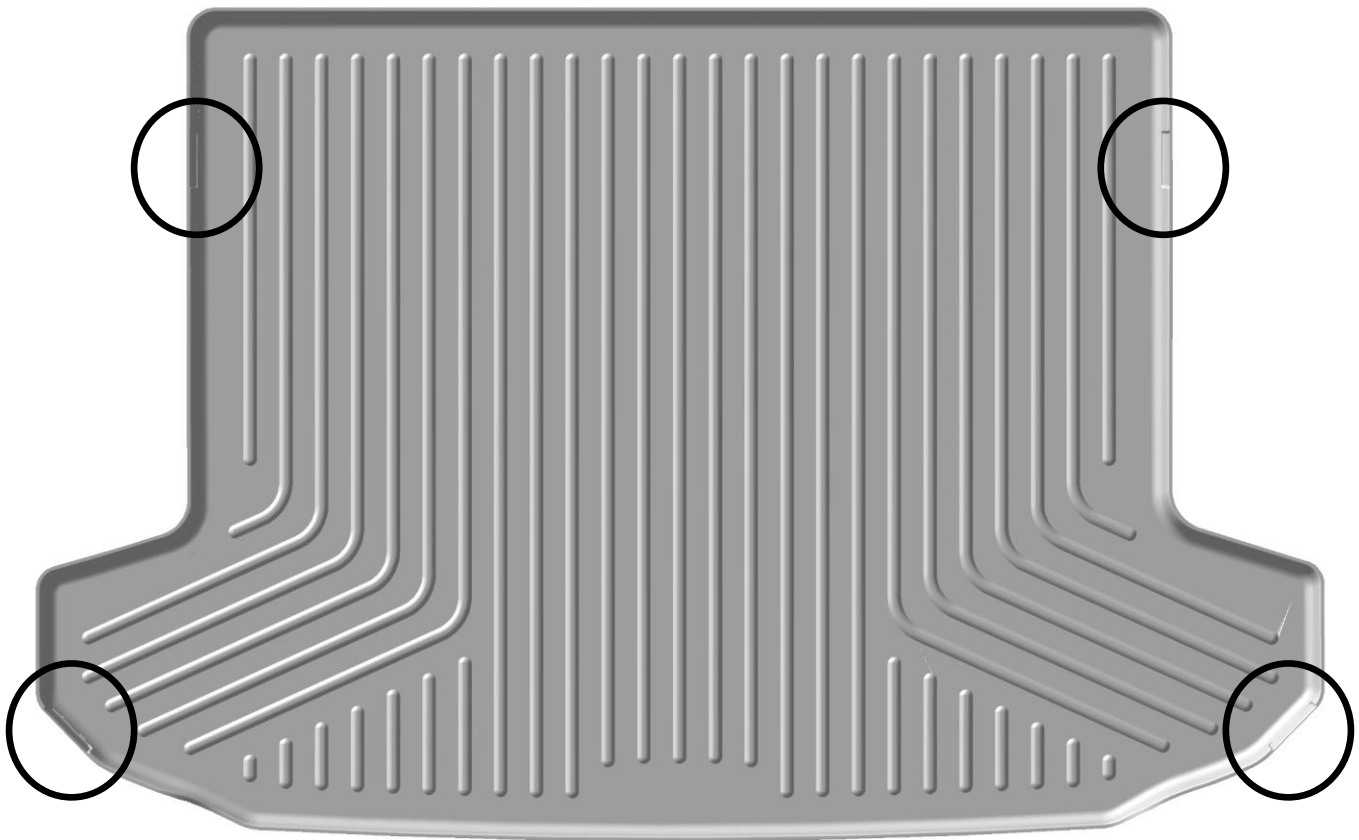

YOUR TUCSON HAS FOUR (4) CARGO TIE DOWN HOOKS LOCATED AROUND THE PERIMTER OF THE CARGO AREA. TO ACCESS TO THE FACTORY TIE-DOWN HOOK LOCATIONS (SHOWN CIRCLED ABOVE) WITH THE LINER IN PLACE. SIMPLY REMOVE/TRIM THE MATERIAL FROM THE PORTION OF THE LINER OVERLAPPING THE HOOKS. THESE AREAS ARE RECESSED ON THE LINER TO GUIDE TRIMMING. A UTILITY KNIFE WORKS WELL FOR TRIMMING.