

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER



## FROM WINFIELD CONSUMER PRODUCTS


### CARE AND USE INSTRUCTIONS

---

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409<sup>®</sup> or Glass Plus<sup>®</sup> work well. Use of Armor All<sup>®</sup>, Son-of-a-Gun<sup>®</sup> or similar items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET AND GMC TRUCKS AND SPORT UTILITY VEHICLES

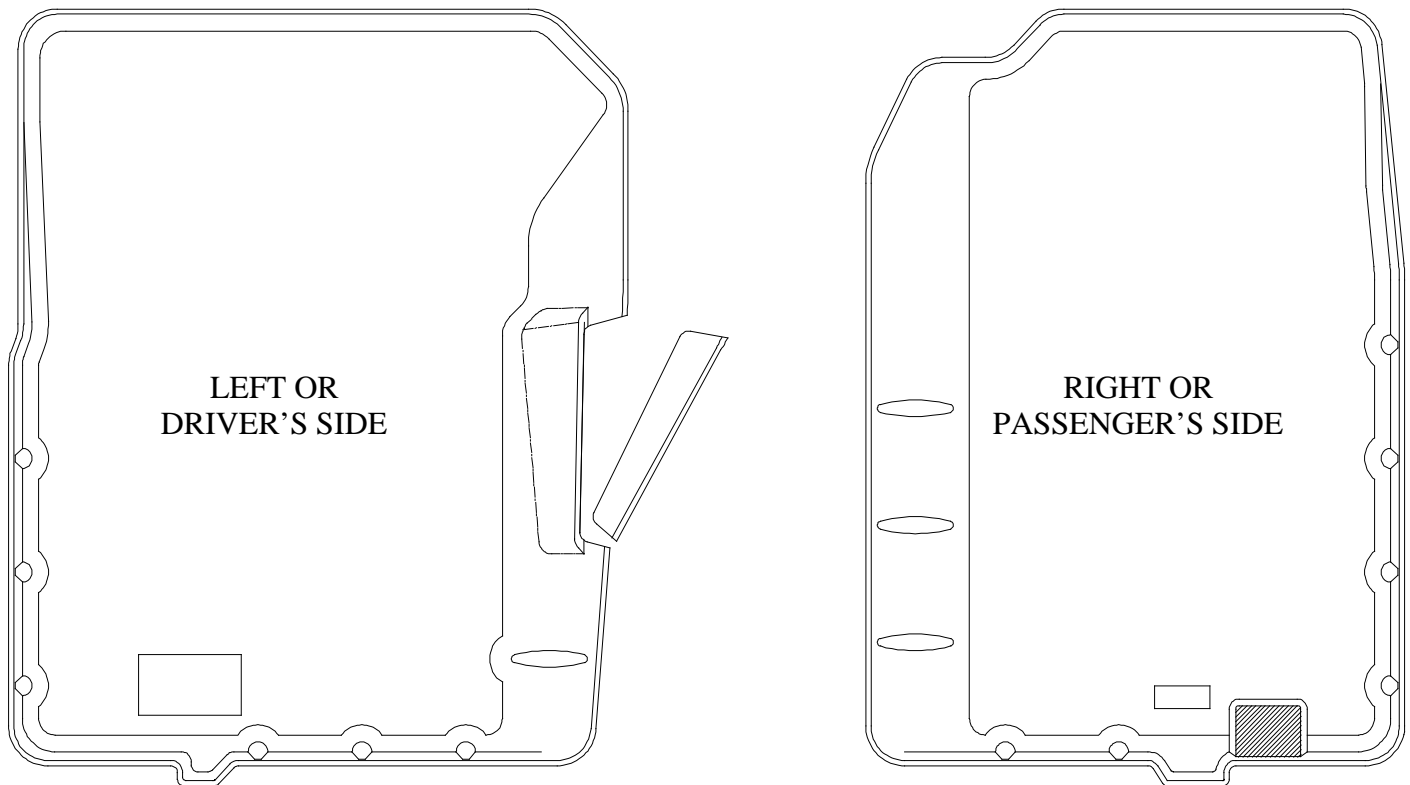

IF YOUR VEHICLE IS EQUIPPED WITH A MANUAL TRANSFER CASE SHIFTER, YOU WILL NEED TO TRIM YOUR DRIVER'S SIDE LINER AS SHOWN ABOVE. TRIM AWAY THE RECESSED PORTION ON THE LINER WALL. SOME CREW CAB MODELS MAY REQUIRE THE RAISED AREA SHOWN DARKENED ON THE PASSENGER'S SIDE LINER TO BE TRIMMED AWAY TO ALLOW PROPER FIT. A UTILITY KNIFE OR HEAVY SCISSORS WORKS WELL FOR TRIMMING.