


HUSKY **Weather** **BEATER**[™] **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater[™] Trunk Liner from Winfield Consumer Products. Your new trunk liner is custom molded to fit your Ford Mustang (will not fit convertible models). Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the trunk of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area will accelerate the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD MUSTANG COUPE TRUNK LINER (WILL NOT FIT CONVERTIBLE MODELS)

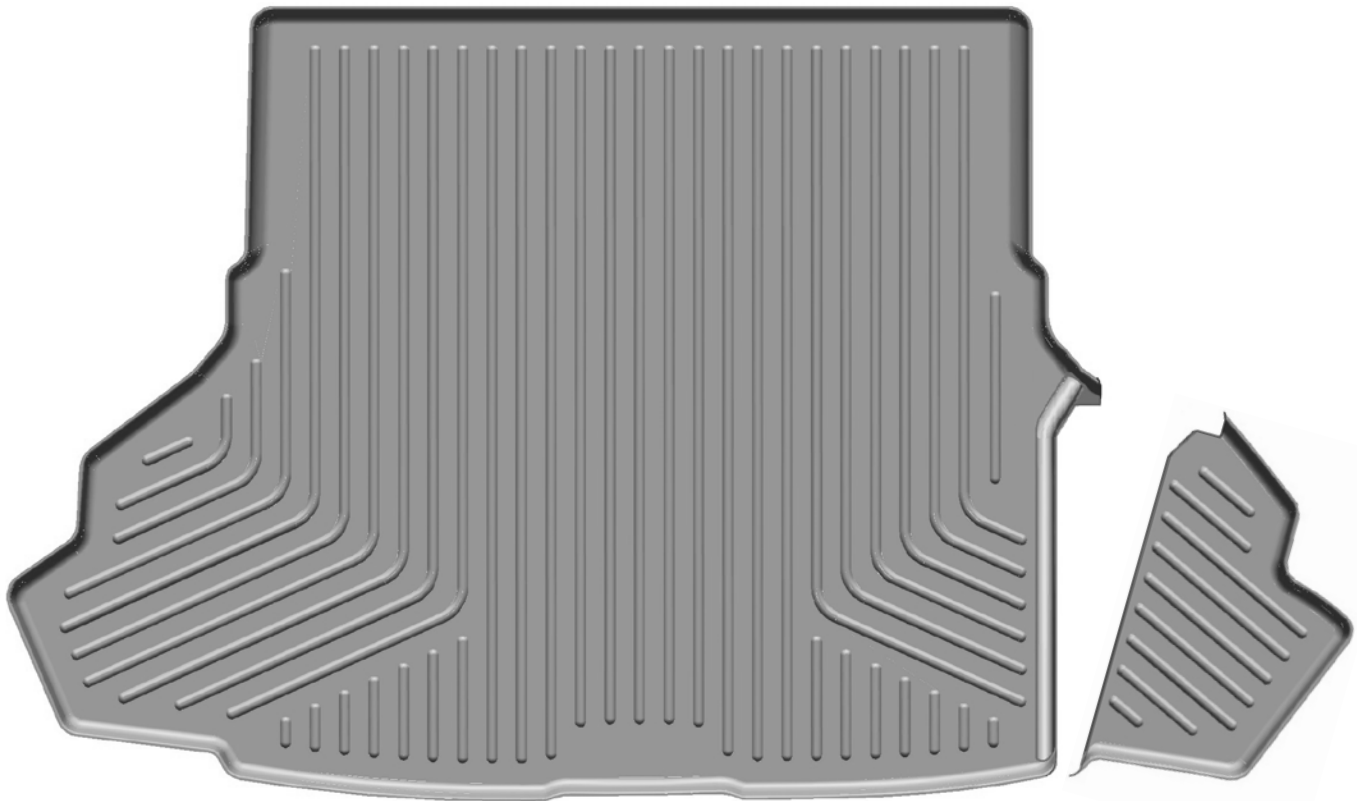

IF YOUR MUSTANG HAS THE TRUNK MOUNTED FACTORY SUBWOOFER, A TRIM IS REQUIRED TO ACHIEVE THE PROPER LINER FIT. THE TRIM WILL REMOVE THE PORTION OF THE LINER THAT CORRESPONDS WITH THE LOCATION OF THE SUBWOOFER. USING A UTILITY KNIFE OR HEAVY SHEARS, FOLLOW THE MOLDED IN TRIM STEP IN THE LINER TO REMOVE THE SECTION (SEE DIAGRAM ABOVE).