


## CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater<sup>TM</sup> Trunk Liner from Winfield Consumer Products. Your new trunk liner is custom molded to fit your Volkswagen Passat. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the trunk of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this "relaxing" may take longer; moving the liner to a heated area will accelerate the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409<sup>®</sup> or Glass Plus<sup>®</sup> work well. Use of Armor All<sup>®</sup>, Son-of-a-Gun<sup>®</sup> or similar items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR VOLKSWAGEN PASSAT SEDAN TRUNK LINER

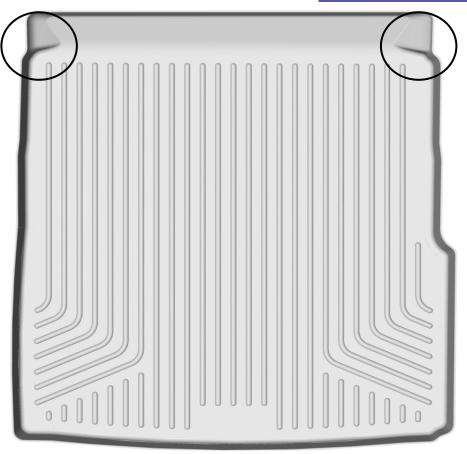

YOUR LINER INCLUDES TRIM AREAS THAT CAN BE REMOVED TO GAIN ACCESS TO THE FACTORY TIE-DOWN LOCATIONS IN YOUR TRUNK. TO ACCESS THE TIE-DOWNS, TRIM AWAY THE MATERIAL FROM THE LOWERED AREAS LOCATED IN LINE WITH THE TIE-DOWNS (SEE CIRCLED AREAS ABOVE). A UTILITY KNIFE WORKS WELL FOR TRIMMING.