



# X-ACT CONTOUR

## FLOOR LINERS


### CARE AND USE INSTRUCTIONS P/N 53351

---

Thank you for selecting a X-act Contour® Floor Liner from Winfield Consumer Products. Your new center hump liner is custom molded to fit your Ford F150 truck. The liner is made to take the place of your factory floor mat. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

### INSTALLATION INSTRUCTIONS FOR YOUR FORD F150 TRUCK CENTER HUMP LINER

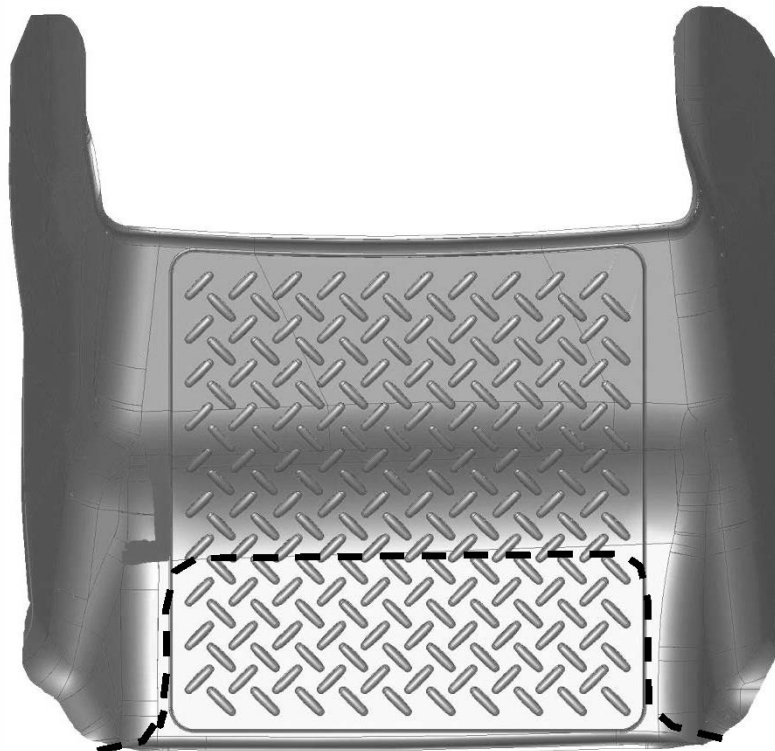

**IF YOUR TRUCK HAS FRONT ROW BUCKET SEATS WITH A FACTORY CONSOLE BETWEEN THEM, YOU WILL NEED TO TRIM YOUR LINER TO ACCOMMODATE THE CONSOLE. TO TRIM, SIMPLY USE THE RECESSED STEP IN THE PART AS YOUR TRIM GUIDE AND REMOVE THE LOWER PORTION OF THE LINER. THE DOTTED LINE ABOVE APPROXIMATES THE STEP MOLDED INTO THE PART.**