

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

## INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET COLORADO/GMC CANYON FRONT FLOOR LINERS

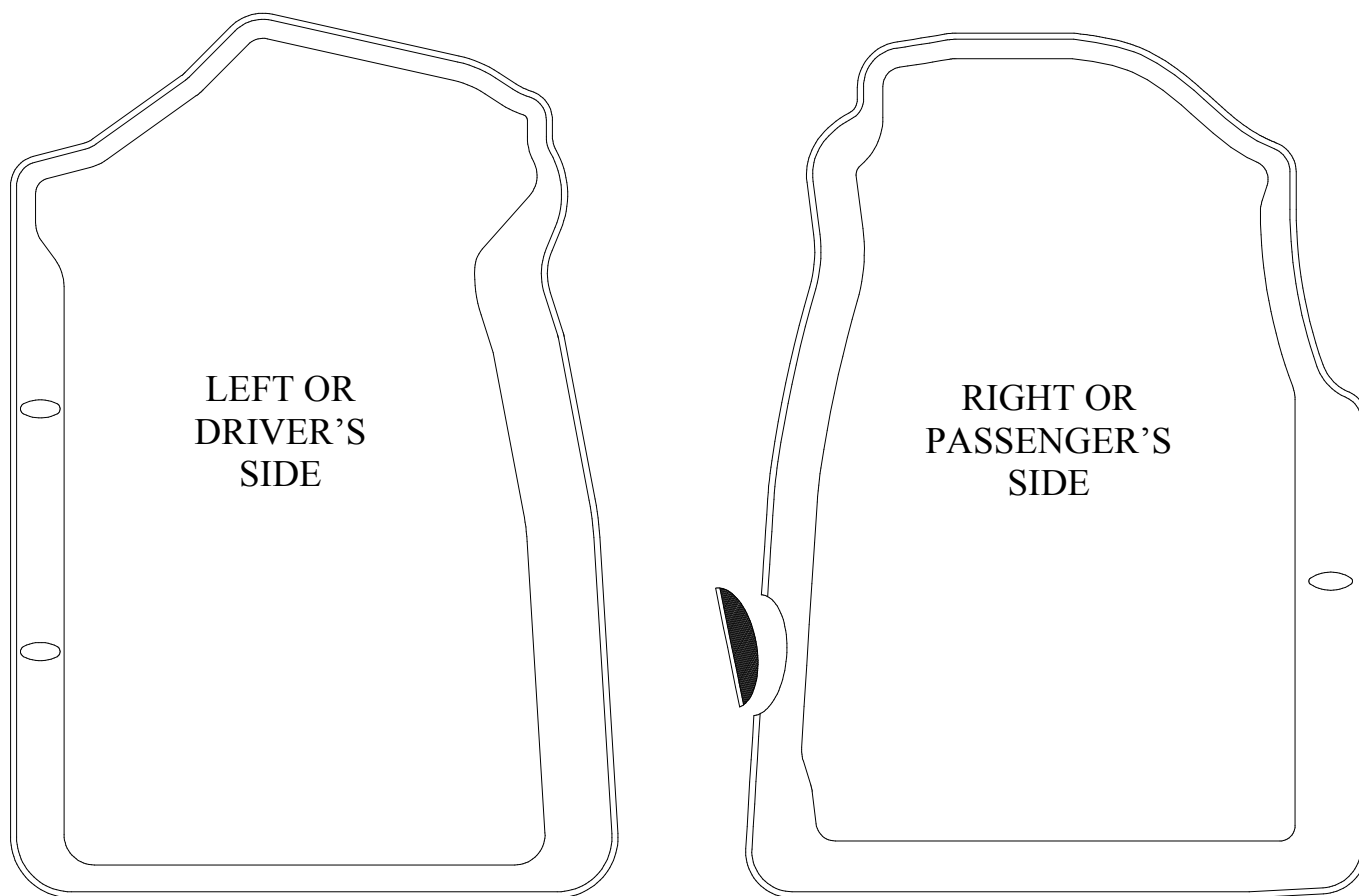

IF YOUR VEHICLE IS EQUIPPED WITH A MANUAL TRANSMISSION IT CAN HAVE AS AN OPTION A SHIFTER SURROUND WITH BUILT IN CUP HOLDERS. YOUR LINER IS DESIGNED WITH A TRIM AREA THAT ALLOWS FOR A BETTER FIT WITH THIS SHIFTER SURROUND. TO TRIM THE LINER TO ACHIEVE AN IMPROVED FIT, SIMPLY REMOVE THE MATERIAL FROM THE RECESSED AREA LOCATED ALONG THE PASSENGER SIDE OF THE LINER IN THE AREA THAT MATCHES UP TO THE CUP HOLDER.