

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR 1999 FORD SUPERDUTY SERIES TRUCK

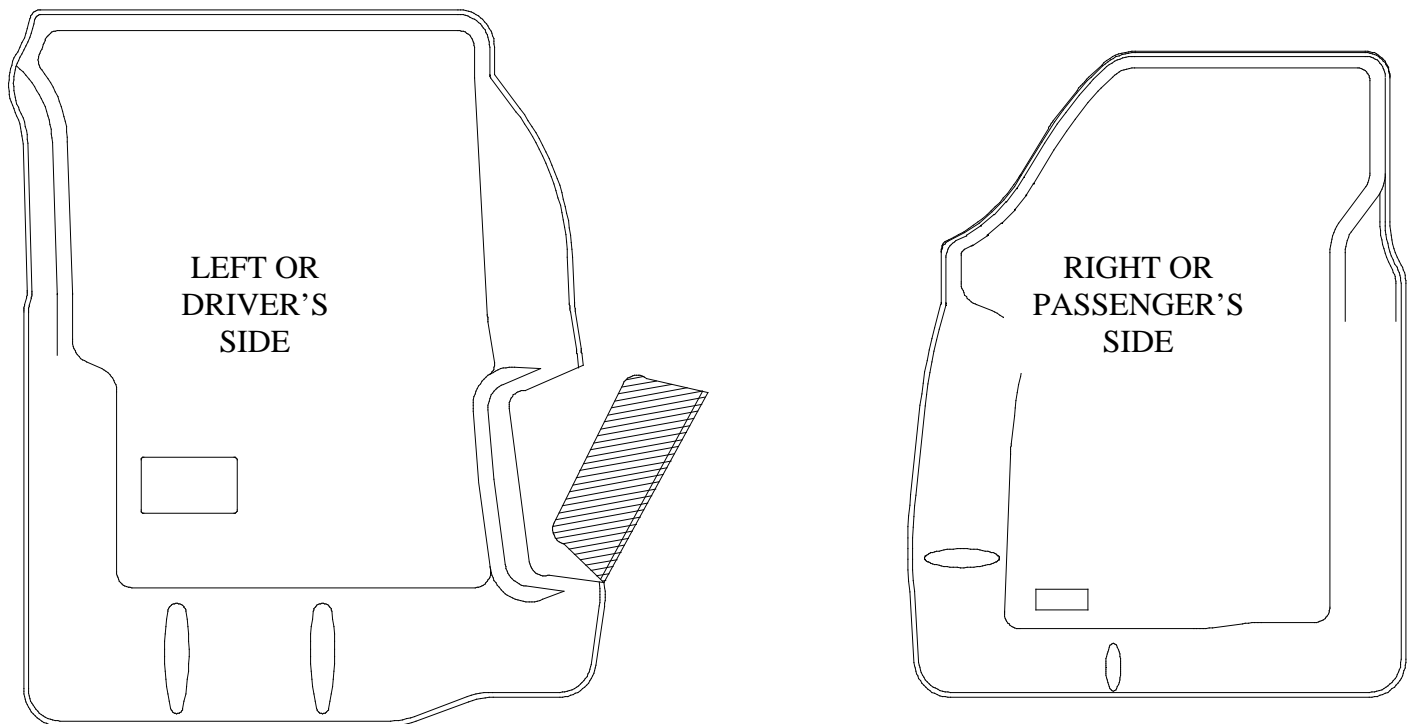

IF YOUR SUPERDUTY IS EQUIPPED WITH A MANUAL TRANSFER CASE SHIFTER, YOU WILL NEED TO TRIM YOUR MAT AS SHOWN ABOVE. TRIM AWAY THE RAISED AREA ON YOUR LINER. A UTILITY KNIFE WORKS WELL FOR TRIMMING.