

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409<sup>®</sup> or Glass Plus<sup>®</sup> work well. Use of Armor All<sup>®</sup>, Son-of-a-Gun<sup>®</sup> or similar items is discouraged as these products make the liners slick.

## INSTALLATION INSTRUCTIONS FOR YOUR HONDA CR-V FRONT FLOOR LINERS

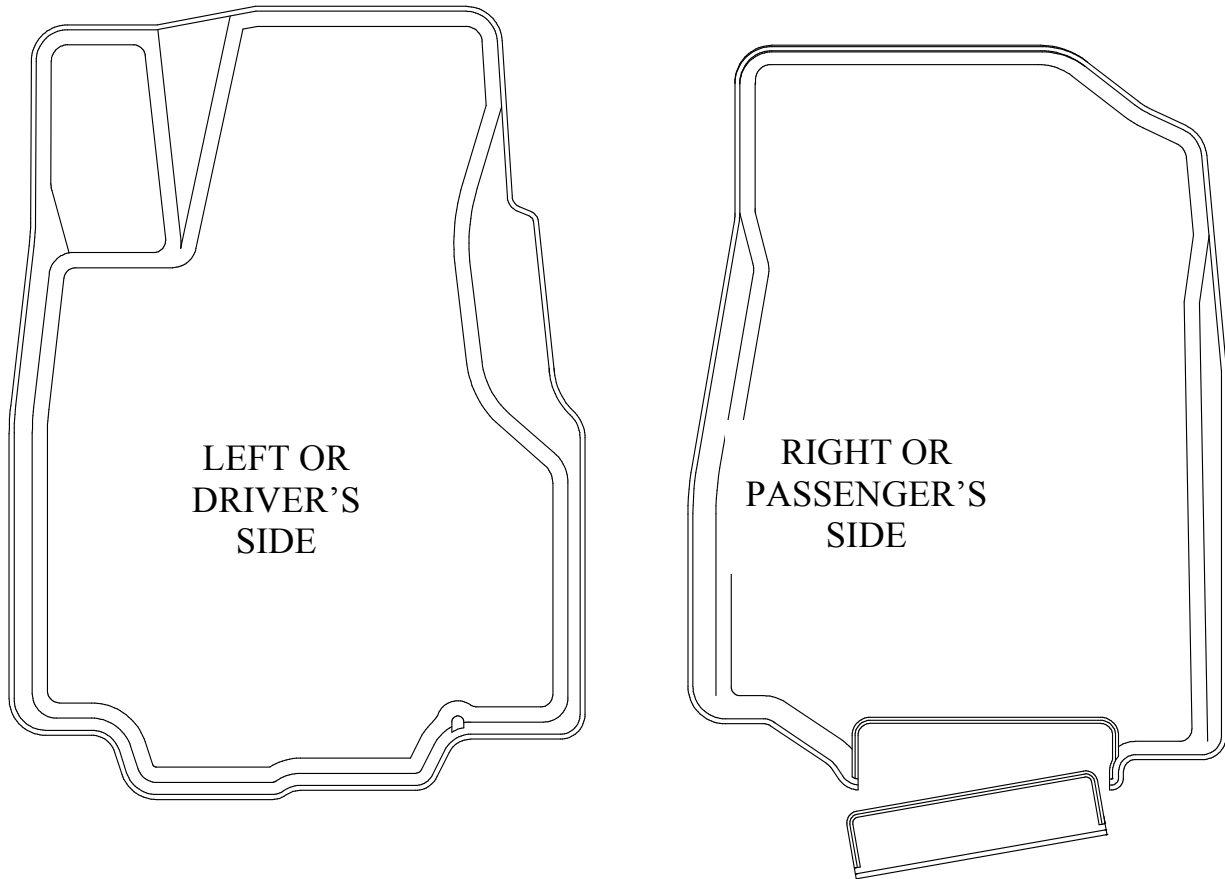

IF YOUR HONDA CR-V IS EQUIPPED WITH THE OPTIONAL FACTORY NAVIGATION SYSTEM, YOUR HUSKY LINER PASSENGER SIDE LINER WILL NOT FIT "AS IS" WHEN REMOVED FROM THE BOX. HOWEVER, YOUR LINER CAN EASILY BE TRIMMED TO ACCOMMODATE THE NAVIGATION SYSTEM COMPONENT LOCATED UNDER THE PASSENGER SIDE SEAT. TO TRIM, LOCATE THE RAISED MOAT THAT IS MOLDED INTO THE PASSENGER SIDE LINER. USE THE MOLDED IN STEP THAT RUNS ALONG THE TOP OF THE RAISED MOAT AS YOUR GUIDE FOR TRIMMING AND TRIM AS SHOWN ABOVE. PHOTOS OF THE TRIMMED PART ARE SHOWN ON THE BACK OF THIS SHEET AS WELL.

PHOTO SHOWING PART #3465 PASSENGER SIDE  
TRIMMED FOR NAVIGATION SYSTEM COMPONENT.

