


**THANK YOU FOR SELECTING A HUSKY FLOOR LINER  
FROM WINFIELD CONSUMER PRODUCTS  
CARE AND USE INSTRUCTIONS**

---

Your new floor liner is custom molded to fit your Ford F150 SuperCrew truck. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

**INSTALLATION INSTRUCTIONS FOR YOUR FORD F-150 SUPERCREW  
TRUCK SECOND SEAT FLOOR LINER**

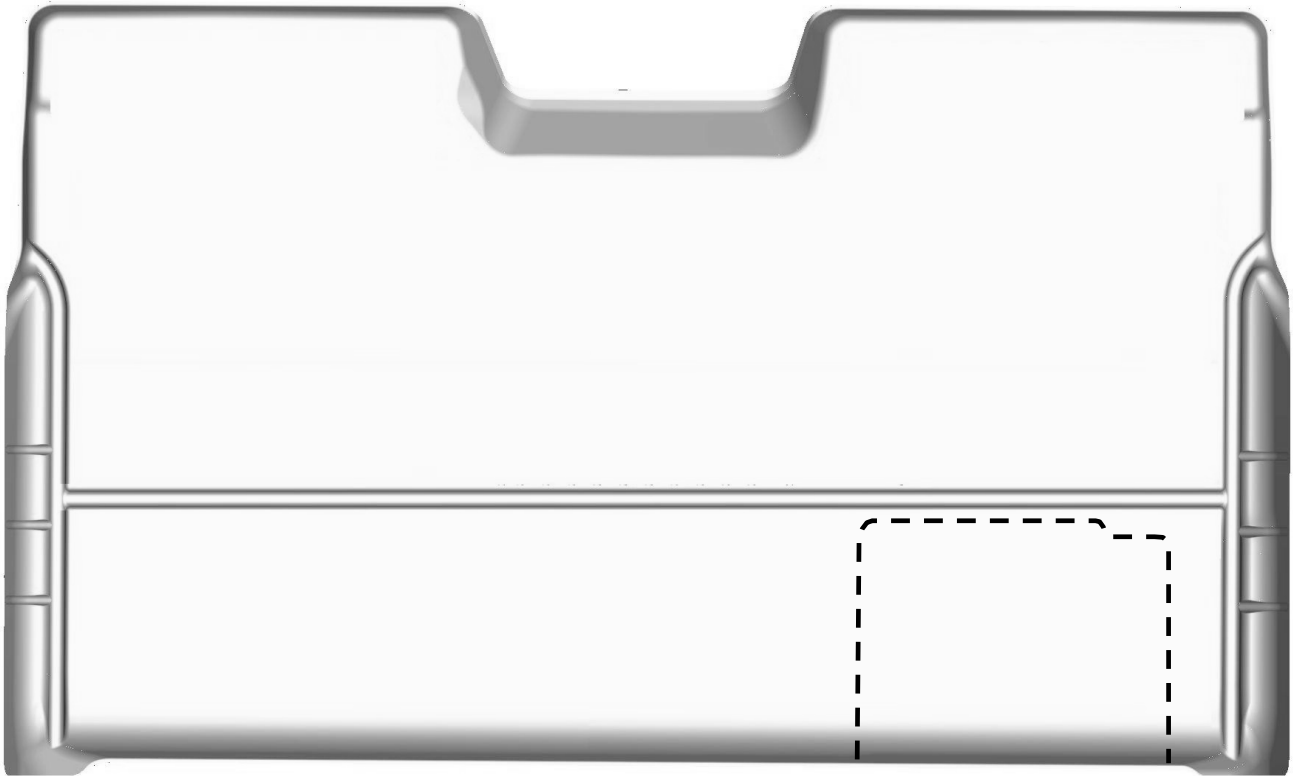

IF YOUR VEHICLE IS EQUIPPED WITH A FACTORY SUBWOOFER LOCATED UNDER THE PASSENGER'S SIDE REAR SEAT, YOU WILL NEED TO TRIM YOUR LINER TO ACCOMMODATE THIS FEATURE. TO TRIM THE LINER, USE THE STEP FORMED BY THE LOWERED AREA IN YOUR LINERS AS A TRIMMING GUIDE AND THE MATERIAL FROM THE SPACE THE SUBWOOFER OCCUPIES. PHOTOS OF THE TRIMMED PART ARE INCLUDED ON BACK OF THIS PAGE.

IF YOU ARE INSTALLING A HUSKY GEAR BOX ON TOP OF YOUR LINER, SIMPLY FOLLOW THE INSTRUCTIONS PROVIDED WITH YOUR GEAR BOX. THE GEAR BOX WILL REST ON TOP OF YOUR LINER.

PHOTOS SHOWING PART #6369 UNTRIMMED AND THEN TRIMMED TO ACCOMMODATE THE FACTORY SUBWOOFER LOCATED UNDER THE PASSENGER'S SIDE REAR SEAT. TO TRIM, SIMPLY REMOVE LOWERED AREA IN THE LINER AS DEMONSTRATED IN THE PHOTOS.

