


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR SUPER DUTY FORD TRUCK SECOND SEAT FLOOR LINER

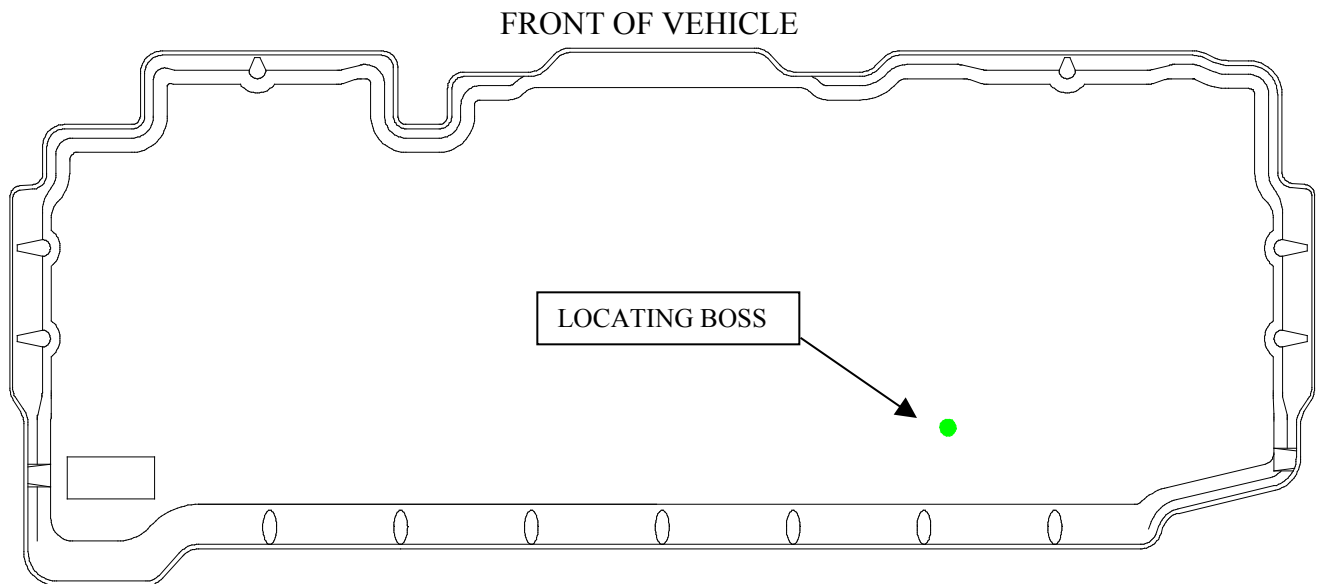

ON 2003_ AND NEWER MODEL YEAR FORD SUPER DUTY TRUCKS; FORD HAS REPOSITIONED THE JACK TOOL POUCH TO A LOCATION UNDER THE REAR SEAT. YOUR HUSKY LINER IS DESIGNED TO ACCOMMODATE THE RELOCATED TOOL POUCH. INSTALLATION OF YOUR HUSKY LINER IS EASILY DONE BY FOLLOWING THESE SIMPLE STEPS: FIRST, TRIM AWAY THE MATERIAL FROM THE TOP OF THE RAISED LOCATING BOSS MOLDED INTO THE LINER (SEE DRAWING ABOVE). SECOND, REMOVE THE JACK TOOL POUCH AND SECURING BRACKETS. THIRD, INSTALL YOUR LINER AND REPLACE THE TOOL POUCH ASSEMBLY SECURING IN PLACE WITH THE ORIGINAL BRACKETS AND WING NUT STUD. TO AID IN INSTALLATION, FIRST FOLD UP REAR SEAT BOTTOMS. INSTALLATION PHOTOS ARE INCLUDED ON THE BACK OF THIS SHEET.

HUSKY LINER PART #6387 INSTALLATION PHOTOS

