
THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting*.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA TUNDRA SECOND SEAT LINER

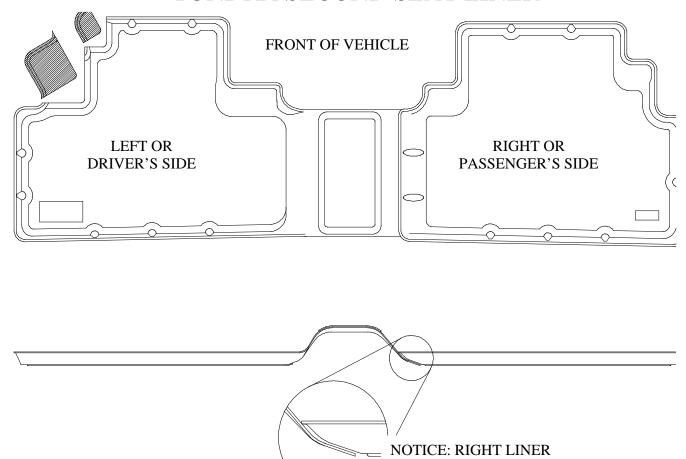

TUNDRA OWNERS WITH THE POWER SEAT OPTION WILL NEED TO TRIM THEIR DRIVER'S SIDE LINER TO ALLOW CLEARANCE OF THE POWER SEAT TRACK (SEE ABOVE). REMOVE THE MATERIAL FROM THE TWO RAISED AREAS. A UTILITY KNIFE OR SCISSORS WORK WELL.

OVERLAPS LEFT LINER

FLOOR LINERS CAR ACCESSORIES