

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409<sup>®</sup> or Glass Plus<sup>®</sup> work well. Use of Armor All<sup>®</sup>, Son-of-a-Gun<sup>®</sup> or similar items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA RAV-4 SECOND SEAT FLOOR LINERS

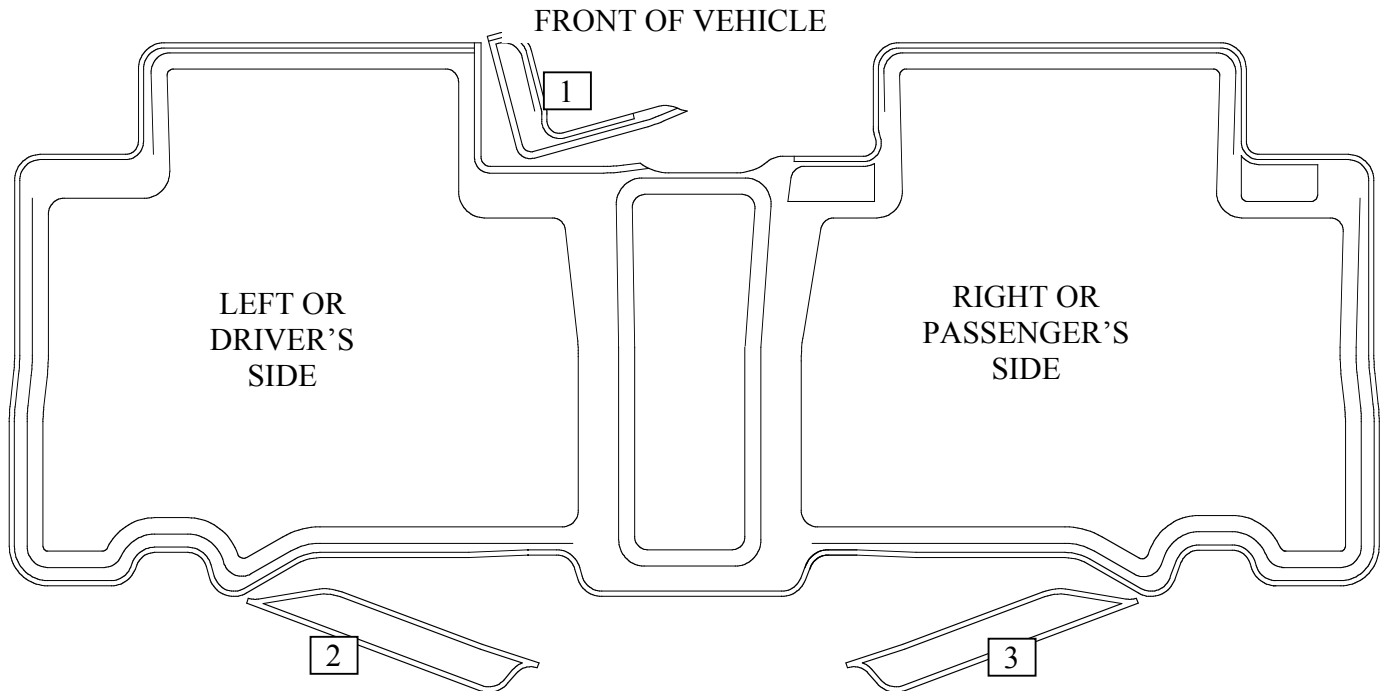

2006 RAV4 LIMITED MODELS WITH 3<sup>RD</sup> ROW SEATING HAVE CLIMATE CONTROL DUCTING ALONG THE REAR WALL OF THE 2<sup>ND</sup> ROW OF SEATS. THIS FEATURE KEEPS PART #6597 FROM FITTING CORRECTLY AS PACKAGED. HOWEVER, A TRIM AREA IS MOLDED INTO PART #6597 WHICH WILL ALLOW THIS PART TO BE TRIMMED TO ACCOMMODATE THE DUCTING. TO TRIM, REMOVE THE SECTION OF THE LINER SHOWN ABOVE (FIGURES #2 AND #3). USE THE FRONT EDGE OF THE RAISED BAND AS A TRIMMING GUIDE (SEE PHOTOS ON BACK).

IF YOUR RAV4 HAS POWER FRONT SEATS, YOU WILL NEED TO TRIM YOUR LINER AS SHOWN IN FIGURE #1 ABOVE (PHOTOS ON BACK) TO AVOID INTERFERENCE WITH THE POWER SEAT TRACK. TRIM LEAVING A   " PERIMETER LIP AS SHOWN ABOVE AND IN PHOTOS ON THE BACK OF THIS PAGE.

## TRIMMING PHOTOS OF PART #6597

PART #6597 SHOWN UNTRIMMED. TRIM BY REMOVING RAISED AREA ON LINER. LEAVE  $\frac{1}{2}$ " LIP AS SHOWN BY DOTTED LINE AND IN INSET..



PART #6597 SHOWN UNTRIMMED. TRIM BY FOLLOWING EDGE FORMED BY PART AND RAISED EDGE (SEE DOTTED LINE AND PHOTO INSET).