


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR NISSAN XTERRA SECOND SEAT FLOOR LINER

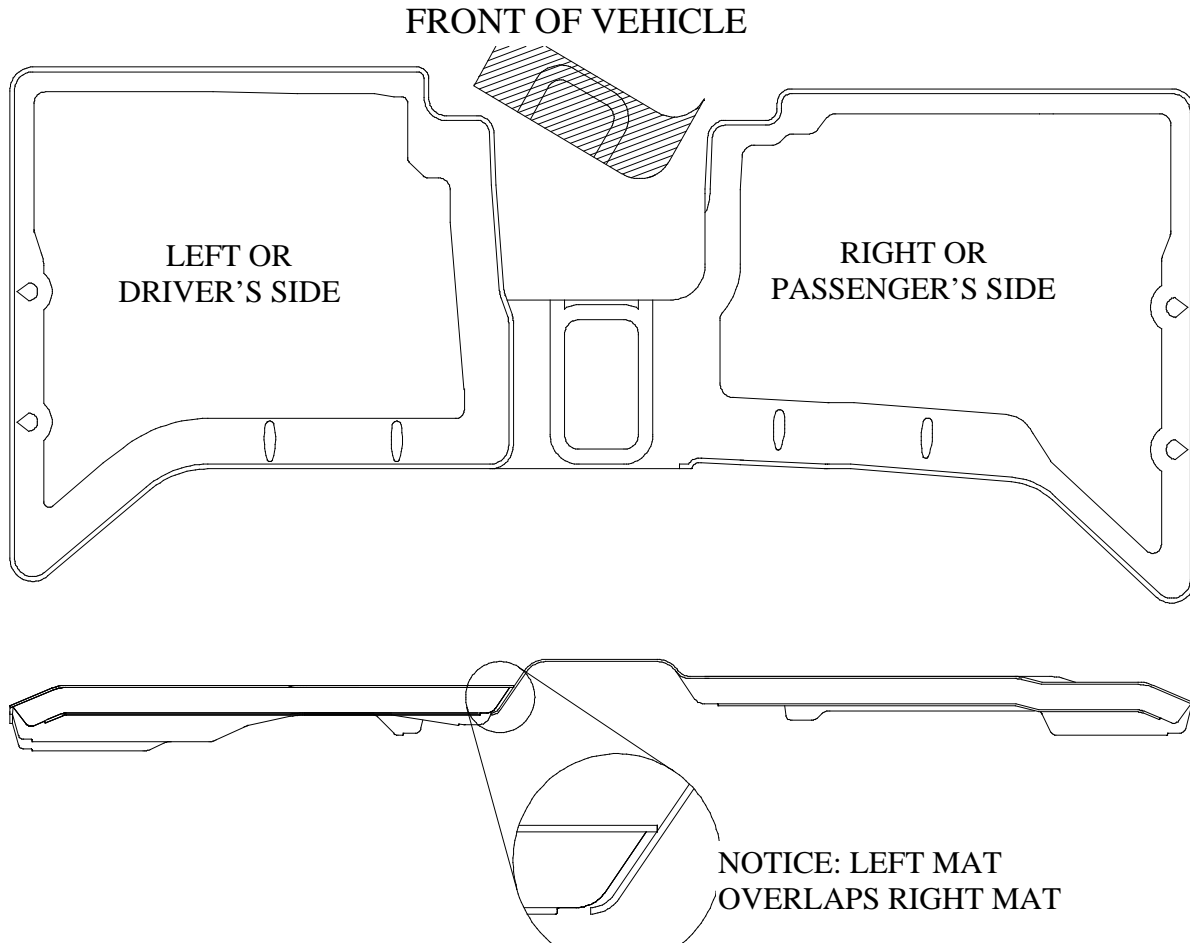

DUE TO DIFFERENCES IN AVAILABLE CONSOLE CONFIGURATIONS, 2000/2001 XTERRA OWNERS MAY NEED TO TRIM THEIR LINER AS SHOWN ABOVE. THE TRIMMING NECESSARY IS EASILY DONE BY FOLLOWING THE SCRIBED LINE MOLDED INTO THE PART. A UTILITY KNIFE OR SCISSORS WORK WELL FOR TRIMMING. PHOTOS OF TRIMMED AND UNTRIMMED PARTS ARE INCLUDED ON BACK.

TRIMMING INSTRUCTION PHOTOS OF PART #6650

PART #6650 SHOWN UNTRIMMED. FITS 2002 MODEL XTERRA AND FRONTIER CREW CABS (SHOWN IN INSET).



PART #6650 SHOWN TRIMMED TO FIT 2000 AND 2001 MODELS WITH LONGER CONSOLES. (SHOWN IN INSET).

